IM C2010/C2010A/C2510/C2510A/C3010/ C3010A/C3510/C3510A/C4510/C4510A/ C5510/C5510A/C6010 GS4020c/GS4025c/GS4030c/GS4045c/GS4160c



User Guide

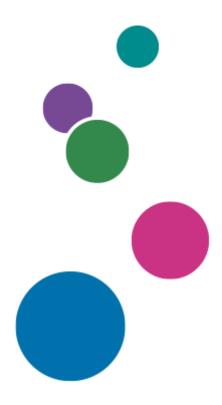


TABLE OF CONTENTS

1. Introduction and Basic Operations	11
About This Manual	11
Abbreviated Names of Options	11
Basic Operation of the Machine	19
Turning On and Off the Power	19
Turning On the Main Power	19
Turning Off the Main Power	20
Energy Saving Mode	21
Guide to Names and Functions of Components	22
Front and Left View	23
Front and Right View	25
Rear and Left View	26
Names and Functions of the Control Panel	27
Touch Panel/Interface	27
LED Indicators	28
How to Use the Home Screen	29
Intuitive Screen Operation Using Fingertips	32
How to Use the "Settings"	34
Changing the Display Language	37
Basic Operation of Applications	39
Confirming the Functions that Are Added in RICOH Always Current Technology	39
Confirming the Version of RICOH Always Current Technology Implemented of Machine	
How to Use the Copy Screen	39
How to Use the Copy Screen (Standard)	40
How to Use the Copy Screen (No Scrolling Screen)	42
Changing the Layout or Display of the Keys of the Copy Function	44
How to Use the Fax Screen	45
Customizing the Send Settings Screen for Fax	46
How to Use the Scanner Screen	48
Customizing the Send Settings Screen for Scanner	49
How to Use the Document Server Screen	51
Folder List Screen of Document Server	51
File List Screen of Document Server	53

User Authentication	55
Logging In from the Control Panel	55
Logging In by Entering the User Name and Password	56
Logging In Using an IC Card	57
Logging In Using a Mobile Device	58
Authenticating Using the User Code	59
Changing the Login Password by Using the Control Panel	60
Customization of the Machine Settings	62
Adding a Frequently Used Application or Widget to the Home Screen	62
Adding an Icon/Widget to the Home Screen	63
Moving or Deleting Icons and Widgets	64
Creating a Folder to Organize Icons	64
Registering/Changing/Deleting a Program that is Component of Frequently Used Settings	64
Registering Settings as a Program	
Changing the Contents of the Program	67
Placing an Original and Loading Paper	69
Placing an Original on the Exposure Glass	69
Placing an Original in the Auto Document Feeder (ADF)	
Placing Originals in the ARDF	72
Placing Originals in the One-pass Duplex Scanning ADF	74
Loading Paper into the Paper Tray	76
Loading Paper into Tray 1 to 4	77
Loading Paper into the Bypass Tray	81
Loading Paper into Tray 3 (LCT)	86
Loading Paper into the Large Capacity Tray	87
Specifying the Paper Size That Is Not Automatically Detected	88
Specifying a Custom Size Paper Using the Control Panel	90
Specifying Paper Type and Thickness Settings	92
Address Book	94
Registering/Changing/Deleting Fax Numbers in the Address Book	94
Registering a Fax Number and Send Conditions	94
Changing/Deleting the Registered Data Such as Fax Number	96
Operating or Configuring the Machine from Computer (Web Image Monitor)	98

What You Can Do on the Web Image Monitor	101
Accessing to Web Image Monitor	102
Web Image Monitor Screen	103
Specifying Web Image Monitor Help	104
2. Copy	107
Basic Copying	107
Basic Procedure for Copying Documents	107
Specifying a Custom Size for the Original	110
Reserving a Copy Job While Executing Another Copy Job	112
Interrupting the Current Copy to Copy Another Original	113
Making Enlarged or Reduced Copies	114
Specifying a Copy Ratio or Size	114
Enlarging or Reducing According to the Paper Size	117
Reducing Slightly to Increase the Margins	118
Duplex Copying	118
Combining and Copying a Multi-page Original onto a Single Sheet of Paper	121
Copying onto Envelopes	123
Copying onto Envelopes in the Bypass Tray	124
Copying onto Envelopes in the Paper Tray	125
Special Copying	127
Copying in Page Order or for Each Page Number	127
3. Document Server	131
Saving Documents	131
Saving Documents in Document Server	
Printing Documents	134
Printing Documents in Document Server	134
Printing a Document with the Settings Specified When Scanned	134
Printing a Document with Settings Changed	136
Specifying a Page to Print	138
4. Fax	141
Fax Transmission	141
Basic Procedure for Transmitting Faxes	
Fax Transmission (Application)	145

Basic Scanning	173
6. Scan	173
Printing from a Memory Storage Device or Scan Application	171
Printable File Formats	170
Printing from a USB Flash Memory Device Directly	170
Printing from a Storage Media	170
Printing Documents Stored in the Printer from the Control Panel	168
Storing and Printing Documents	168
Printing on Envelopes Loaded in the Paper Tray	163
Printing on Envelopes Loaded on the Bypass Tray	160
Printing on Envelopes	160
Specifying the Combine 2 Originals Function (macOS)	160
Specifying the Combine 2 Originals Function (Windows)	159
Combining and Printing Multiple Pages on a Single Sheet of Paper	159
Specifying 2-sided Print (macOS)	158
Specifying 2-sided Print (Windows)	158
Printing on Both Sides of Paper	158
Printing a Document in macOS	
Printing a Document in Windows	
Basic Procedure for Printing Documents	
Basic Printing	
5. Printer	153
Confirming the Transmission Result in Web Image Monitor	
Checking by E-mail	
Viewing Memory Storage Report	
Checking the Result in Error Report	
Checking the Result in Communication Failure Report	149
Checking the Result in Immediate TX Result Report	
Checking the Result in Communication Result Report	
Confirming the Transmission Result on the Fax Screen	
Viewing the Transmission Result of Sent Faxes	
Confirmation of the Transmission Information	
Confirming the Scanned Image Before Sending a Fax	145

Scanning Documents and Sending the Scanned Data by E-mail	173
Scanning Documents and Sending the Scanned Data to a Folder	177
Confirming the Computer Information (Windows)	177
Creating a Shared Folder (Windows)	179
Confirming the Computer Information (macOS)	182
Creating a Shared Folder (macOS)	183
Registering the Created Shared Folder in the Address Book	184
Basic Procedure for Performing Send to Folder	187
Scanning an Original with Suitable Quality and Density	188
Settings for E-mail and Scan Data	192
Specifying the File Type or File Name When Scanning a Document	192
Notes about and limitations of file types	194
7. Maintenance	197
Replacement and Replenishment of Consumables	197
Replacing the Toner	197
Precautions When Storing Toner	198
Precautions When Replacing the Toner	199
Disposing Exhausted Toners	200
Replenishing the Staples	200
Replacing the Waste Toner Bottle	202
Precautions When Replacing the Waste Toner Bottle	
Disposing the Used Waste Toner Bottle	204
8. Troubleshooting	205
Getting Started	205
Alert Sounds	205
Checking the Indicators, Icons, and Messages on the Control Panel	207
When an Icon is Displayed with a Message	207
When the [Check Status] Indicator is lit or flashing	209
When the Machine Cannot Be Operated	210
When the Machine Does Not Respond Correctly to an Operation on t	the Control
When the Machine Does Not Respond Correctly to an Operation from	m a Computer
When Messages Appear	
<u> </u>	

Wh	en a Message Appears and the Machine Cannot Be Operated	.216
Wh	en a Message Appears While Using the Copy Function	.218
Wh	en a Message Appears While Using Document Server	.219
Wh	en a Message Appears While Using the Fax Function	.221
	Messages that Appear During Operation or When Sending/Receiving a Fax Car Be Performed	
	Messages that Appear When the Machine Cannot Connect to the Network	.223
	Messages that Appear When the Remote Fax Function Is Unavailable	.234
Wh	en a Message Appears While Using the Printer Function	.237
	Messages that Appear without Error Codes	.237
	Messages that Appear with Error Codes	.250
Wh	en a Message Appears While Using the Scanner Function	.256
	Messages that Appear on the Control Panel	.256
	Messages that Appear on the Computer	.263
Wh	en Other Messages Appear	.268
	Messages that Appear When Machine Login Fails	.272
	Messages that Appear When Logging in to the Machine Using an IC Card Fails	.279
	Messages that Appear When the LDAP Server Is Unavailable	.280
	Messages that Appear When There Is a Problem with the Certificate	.281
	Messages that Appear When an Application Site Cannot Be Used	.283
9. Sp	ecifications	285
Speci	fications for Paper	.285
Rec	commended Paper Sizes and Types	.285
	Tray 1	.285
	Tray 2	.286
	Lower Paper Trays (Trays 3, 4)	.287
	Bypass Tray	.289
	Tray 3 (LCT)	.291
	Large Capacity Tray	.292
	Notes on Special Paper	.292
	Paper Thickness for Each Paper Weight	.293
	Unusable Paper	.293
	Paper Storage	
	Saving Printouts	.294

Thick Paper Orientation and Recommended Status	295
Envelope Orientation and Recommended Status	296
Using the Copy Function	297
Using the Printer Function	298
Loading Orientation-fixed Paper or Two-sided Paper	298
Copying onto Letterhead Paper	298
Printing onto Letterhead Paper Using the Printer Driver	299
Specifications for Originals	301
Recommended Original Size and Weight	301
Sizes Detectable with Auto Paper Select	303
Machine and Options Specifications	307
Model-Specific Information	307
List of Specifications	308
Specifications for the Main Unit	308
Specifications for the Document Server	333
Specifications for Facsimile	334
Specifications for Printer	339
Specifications for Scanner	342
Specifications for One-pass Duplex Scanning ADF	347
Specifications for Auto Reverse Document Feeder (ARDF)	348
Specifications for Internal Finisher SR3310	349
Specifications for Finisher SR3320	351
Specifications for Booklet Finisher SR3330	354
Specifications for Finisher SR3340	357
Specifications for Booklet Finisher SR3350	362
Specifications for Internal Finisher SR3360	368
Specifications for Internal Multi-Fold Unit	369
Specifications for External Tray	371
Specifications for Internal Shift Tray	372
Specifications for Internal Tray 2	373
Specifications for Bridge Unit	373
Specifications for Punch Unit (Internal Finisher SR3310)	374
Specifications for Punch Unit (Finisher SR3320, Booklet Finisher SR3330)	374
Specifications for Punch Unit (Finisher SR3340, Booklet Finisher SR3350)	375

Specifications for Lower Paper Tray	377
Specifications for Lower Paper Trays	377
Specifications for Tray 3 (LCT)	378
Specifications for Large Capacity Tray	378
Specifications for Caster Table	379
Specifications for Wireless LAN Board	379
Specifications for Device Server Option	381
The Setting Values of the Transmission Function	381
Send Email	381
Send to Folder	382
Broadcast Transmission	383
Printable Area and Margin	384
Machine Options	385
Guide to Functions of the Machine's External Options	385
Guide to Functions of the Machine's Internal Options	390
Functions Requiring Optional Configurations	392
Copy Function	392
Facsimile Functions	394
Printer Function	396
Scanner Function	397
Interface	398
Others	398
Function Compatibility	399
Legal and Contact Information	401
Environmental Regulations	401
ENERGY STAR Program(mainly North America)	401
Energy Saving Functions	401
User Information on Electrical and Electronic Equipment (mainly Europe)	404
Note for the Battery and/or Accumulator Symbol (For EU countries only) (ma	-
Environmental Advice for Users (mainly Europe)	
Notes to users in the state of California (Notes to Users in USA) (mainly Nort	:h
Information for China energy efficiency label (China)	

Not	es for wireless LAN and Bluetooth	407
Cop	pyright Information about Installed Software	407
Tra	demarks (User Guide)	408
10.	Driver Installation Guide	413
Instal	lling the Printer Driver	413
Ins	talling the Printer Driver by Using Device Software Manager Installer	413
	Installing Device Software Manager from the Downloaded File	413
Ins	talling the Printer Driver for Network Connection (Windows)	415
	Installing the PCL 6/PostScript 3 Printer Driver from the Downloaded File	416
	Installing the Printer Driver for Windows	417
	If the Machine Cannot Be Found	419
Ins	talling the Printer Driver for Network Connection (macOS)	421
	Installing the PPD file (Network Connection)	422
	Registering the Machine in [Printers & Scanners] (Network Connection)	423
	Specifying the Option Configuration of the Machine to the Printer Driver (N	
11	Connection)	
11.	How to use this manual	427

1. Introduction and Basic Operations

About This Manual

Abbreviated Names of Options

In the manuals, the abbreviated names of options are used. The abbreviated names and corresponding product names are as follows:

Options that can be attached to the machine differ depending on the machine type. page 385" Machine Options"

Abbreviated names of externally attached options

IM C2010/C2010A/C2510/C2510A/C2519J/GS4020c/GS4025c

Abbreviated name	Product name
^{™Region} A (mainly Asia)	Platen Cover PN2010
Exposure glass cover	
⊕ Region A (mainly Asia)	SPDF DF3150
® (Taiwan)	
One-pass duplex scanning ADF ^{*1}	
Region A (China)	ARDF DF3140
ARDF ^{*1}	
Page keeper	Page Keeper Type M52
Lower paper trays	Paper Feed Unit PB3340
Lower paper tray	Paper Feed Unit PB3310
Caster table	Caster Table Type M52
Internal tray 2	1 Bin Tray BN3140
Internal shift tray	Internal Shift Tray SH3090
External tray	Side Tray Type M52

Abbreviated name	Product name
Bridge unit	Bridge Unit BU3100
Booklet Finisher SR3330	Booklet Finisher SR3330
Punch unit	Punch Unit PU3080 EU
	Punch Unit PU3080 SC*4
	Punch Unit PU3080 NA*4
Internal Finisher SR3310	Internal Finisher SR3310
Punch unit	Punch Unit PU3100 EU
	Punch Unit PU3100 SC*4
	Punch Unit PU3100 NA*4
Internal Finisher SR3360	Internal Finisher SR3360
Internal multi-fold unit	Internal Multi-Fold Unit FD3020
Banner paper guide tray	Banner Paper Guide Tray Type M52
Optional counter interface unit	Optional Counter Interface Unit Type M12
NFC card reader	NFC Card Reader Type M52
Imageable area extension unit	Imageable Area Extension Unit Type M19

IM C3010/C3010A/C3510/C3510A/C3519J/GS4030c

Abbreviated name	Product name
Region A (mainly Asia)	Platen Cover PN2010
Exposure glass cover	
Region A (China)	SPDF DF3150 ^{*5}
Region A (Korea)	
One-pass duplex scanning ADF ^{*1}	
Region A (mainly Asia)	ARDF DF3140
® (Taiwan)	
ARDF ^{*1}	
Page keeper	Page Keeper Type M52
Lower paper trays	Paper Feed Unit PB3320

Abbreviated name	Product name
Lower paper tray	Paper Feed Unit PB3310
Tray 3 (LCT)	LCIT PB3330
Large capacity tray	LCIT RT3050
Caster table	Caster Table Type M52
Internal tray 2	1 Bin Tray BN3140
Internal shift tray	Internal Shift Tray SH3090
External tray	Side Tray Type M52
Bridge unit	Bridge Unit BU3100
Finisher SR3320	Finisher SR3320
Booklet Finisher SR3330	Booklet Finisher SR3330
Punch unit	Punch Unit PU3080 EU
	Punch Unit PU3080 SC*4
	Punch Unit PU3080 NA*4
Internal Finisher SR3310	Internal Finisher SR3310
Punch unit	Punch Unit PU3100 EU
	Punch Unit PU3100 SC*4
	Punch Unit PU3100 NA*4
Internal Finisher SR3360	Internal Finisher SR3360
Internal multi-fold unit	Internal Multi-Fold Unit FD3020
Banner paper guide tray	Banner Paper Guide Tray Type M52
Optional counter interface unit	Optional Counter Interface Unit Type M12
NFC card reader	NFC Card Reader Type M52
Imageable area extension unit	Imageable Area Extension Unit Type M19

IM C4510/C4510A/C5510/C5510A/GS4045c

Abbreviated name	Product name
Region A (China)	Platen Cover PN2010
Exposure glass cover	

Abbreviated name	Product name
Region A (China)	SPDF DF3150
One-pass duplex scanning ADF ^{*1}	
Region A (China)	ARDF DF3140
ARDF*1	
Page keeper	Page Keeper Type M52
Lower paper trays	Paper Feed Unit PB3320
Lower paper tray	Paper Feed Unit PB3310
Tray 3 (LCT)	LCIT PB3330
Large capacity tray	LCIT RT3050
Caster table	Caster Table Type M52
Internal tray 2	1 Bin Tray BN3140
Internal shift tray	Internal Shift Tray SH3090
External tray	Side Tray Type M52
Bridge unit	Bridge Unit BU3100
Finisher SR3320	Finisher SR3320
Booklet Finisher SR3330	Booklet Finisher SR3330
Punch unit	Punch Unit PU3080 EU
	Punch Unit PU3080 SC*4
	Punch Unit PU3080 NA*4
Finisher SR3340	Finisher SR3340
Booklet Finisher SR3350	Booklet Finisher SR3350
Punch unit	Punch Unit PU3110 EU
	Punch Unit PU3110 NA*4
	Punch Unit PU3110 SC
Output jogger unit	Output Jogger Unit Type M52
Stapleless Unit Type M58	Stapleless Unit Type M58
Stapleless Unit Type M52	Stapleless Unit Type M52

Abbreviated name	Product name
Internal Finisher SR3310	Internal Finisher SR3310
Punch unit	Punch Unit PU3100 EU
	Punch Unit PU3100 SC*4
	Punch Unit PU3100 NA*4
Internal multi-fold unit	Internal Multi-Fold Unit FD3020
Banner paper guide tray	Banner Paper Guide Tray Type M52
Optional counter interface unit	Optional Counter Interface Unit Type M12
NFC card reader	NFC Card Reader Type M52
Imageable area extension unit	Imageable Area Extension Unit Type M19

IM C6010/GS4160c

Abbreviated name	Product name
Page keeper	Page Keeper Type M52
Lower paper trays	Paper Feed Unit PB3320
Lower paper tray	Paper Feed Unit PB3310
Tray 3 (LCT)	LCIT PB3330
Large capacity tray	LCIT RT3050
Caster table	Caster Table Type M52
Internal tray 2	1 Bin Tray BN3140
Internal shift tray	Internal Shift Tray SH3090
External tray	Side Tray Type M52
Bridge unit	Bridge Unit BU3100
Finisher SR3320	Finisher SR3320
Booklet Finisher SR3330	Booklet Finisher SR3330
Punch unit	Punch Unit PU3080 EU
	Punch Unit PU3080 SC*4
	Punch Unit PU3080 NA*4
Finisher SR3340	Finisher SR3340

Abbreviated name	Product name
Booklet Finisher SR3350	Booklet Finisher SR3350
Punch unit	Punch Unit PU3110 EU
	Punch Unit PU3110 NA*4
	Punch Unit PU3110 SC
Output jogger unit	Output Jogger Unit Type M52
Stapleless Unit Type M58	Stapleless Unit Type M58
Stapleless Unit Type M52	Stapleless Unit Type M52
Internal multi-fold unit	Internal Multi-Fold Unit FD3020
Banner paper guide tray	Banner Paper Guide Tray Type M52
Optional counter interface unit	Optional Counter Interface Unit Type M12
NFC card reader	NFC Card Reader Type M52
Imageable area extension unit	Imageable Area Extension Unit Type M19

Abbreviated names of internal options

Abbreviated name	Product name
Fax unit	Fax Option Type M52
G3 interface unit ^{*3}	G3 Interface Unit Type M52
File format converter	File Format Converter Type M19
Fax connection unit	Fax Connection Unit Type M52
Fax memory unit	FAX memory Unit Type M52
mainly Europe, Asia and Korea)	Device Server Option Type M52
® (mainly North America)	
Device server option	
OCR unit	OCR Unit Type M52
Enhanced security SSD	Enhanced Security SSD Option Type M52 256GB
IPDS unit ^{*2}	IPDS Unit Type M52
PostScript 3 unit	PostScript3 Unit Type M52
XPS direct print card	XPS Direct Print Option Type M52

Abbreviated name	Product name
Camera direct print card	Camera Direct Print Card Type M52
SSD Option	SSD Option Type M52 1TB
Wireless LAN board	IEEE 802.11 a/b/g/n/ac Interface Unit Type M52
HDD Option	HDD Option Type M52 320GB

^{*1} In this manual, "ADF" refers to the ARDF and the one-pass duplex scanning ADF.

*2 Only for IM

C3010/C3010A/C3510/C3510A/C4510/C4510A/C5510/C5510A/C6010.

- *3 Only for IM C2010/C2010A/C2510/C2510A in Region B (mainly North America).
- *4 Except for China.
- *5 Only for IM C3519J in Region A (Korea).



- The types of machine that are available differ depending on the country where you live. You can use the following types of machines:
 - Region A (mainly Europe)
 - IM C2010
 - IM C2010A
 - IM C2510
 - IM C2510A
 - IM C3010
 - IM C3010A
 - IM C3510
 - IM C3510A
 - IM C4510
 - IM C4510A
 - IM C5510
 - IM C5510A
 - IM C6010
 - Region A (mainly Asia) / Region B (mainly North America and Taiwan)
 - IM C2010
 - IM C2510
 - IM C3010
 - IM C3510

[&]quot;ADF" stands for "Auto Document Feeder", and "ARDF" stands for "Auto Reverse Document Feeder".

- IM C4510
- IM C6010
- Region A (China)
 - IM C2010
 - IM C2510
 - IM C3010
 - IM C3510
 - IM C4510
 - IM C6010
 - GS4020c
 - GS4025c
 - GS4030c
 - GS4045c
 - GS4160c
- Region A (Korea)
 - IM C2010
 - IM C2510
 - IM C2519J
 - IM C3010
 - IM C3510
 - IM C3519J
 - IM C4510
 - IM C6010

1

Basic Operation of the Machine

Turning On and Off the Power

To turn the machine on and off, press the main power switch on the front right side of the machine.




When you are using the fax function on the machine, do not turn the power off
under normal operation. If the power is turned off, data stored in the fax
memory will be lost in about one hour after the machine is turned off. If you have
to turn the power off or unplug the power cord for some reason, make sure 100%
is shown as available memory on the screen for the fax function.


Turning On the Main Power



• Do not press the main power switch repeatedly. When you turn the power on or off, wait at least 10 seconds after confirming that the main power indicator on the right side of the control panel has turned on or off.

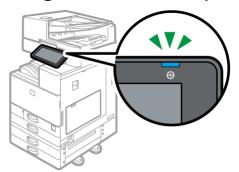

- 1. Make sure the power cord is firmly plugged into the wall outlet.
- 2. Open the cover of the main power switch on the front right side of the machine, and push the switch.

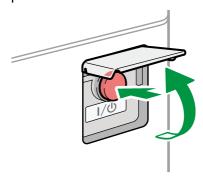

The main power indicator on the right side of the control panel turns on.




- When the power is turned on, the screen may show that the machine is performing an auto restart. Do not turn off the main power while the machine is processing. It takes about 5 minutes until the machine restarts.
- If a file was deleted from memory, a Power Failure report is automatically printed as soon as the power is restored. This report can be used to identify lost files.
 See "Power Off Report", User Guide (HTML).

Turning Off the Main Power




- Do not turn off the power while the machine is in operation. To turn the power off, confirm that the operation is finished.
- Do not hold down the main power switch while turning off the main power.

 Doing so forcibly turns off the machine's power and may damage the internal storage or memory and cause malfunctions.
- Do not press the main power switch repeatedly. When you turn the power on or
 off, wait at least 10 seconds after confirming that the main power indicator on
 the right side of the control panel has turned on or off.

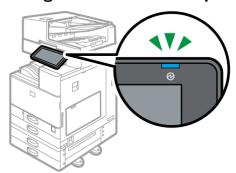

1. Open the cover of the main power switch on the front right side of the machine, and push the switch.

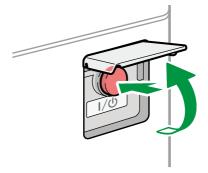

The main power indicator on the right side of the control panel turns off. The main power turns off automatically after the machine has shut down properly.

Energy Saving Mode

When the machine is not operated for a specified period of time, the machine enters the "Energy Saving mode" automatically. "Energy Saving mode" has two modes, "Fusing Unit Off mode" and "Sleep mode", and the machine enters the Fusing Unit Off mode first. In the factory default, the machine is configured to use both modes.

Fusing Unit Off Mode

In this mode, the main power indicator is lit. Because the heater of the fusing unit is turned off but the screen of the control panel is still displayed, the power consumption decreases, but you can start operation promptly. If you do not operate the machine for a specified period of time, the machine emits a clicking sound and enters Fusing Unit Off mode.

- You can specify whether to enable the Fusing Unit Off mode and the time to wait before the machine enters Fusing Unit Off mode under [Fusing Unit Off Mode (Energy Saving) On/Off].
 - See "Date/Time/Timer", User Guide (HTML).
- In this mode, you can scan documents, send faxes, receive faxes into memory, change the machine settings on the control panel, and perform other operations that do not require printing.

Sleep Mode

In this mode, the display of the control panel turns off and the main power indicator blinks slowly. Power consumption is minimized. When you do not operate the machine for a specified period of time or press [Energy Save] (), the machine enters Sleep mode.

- You can specify the amount of time that the machine waits before entering Sleep mode under [Sleep Mode Timer].
 - See "Date/Time/Timer", User Guide (HTML).
- The machine recovers from Sleep mode when you perform one of the following:
 - Lift the ADF or exposure glass cover.
 - Place an original in the ADF.
 - Touch the display of the control panel.



- The energy saving functions are disabled when an error occurs or while an operation is in progress.
- The energy saving functions will not operate in the following cases:
 - · When fixed warm-up is in progress
 - When operations are suspended during printing
 - When a warning message appears (The machine enters Fusing Unit Off mode unless the cover is open.)


- When paper is jammed (The machine enters Fusing Unit Off mode except when the cover is open.)
- When the Data In indicator is lit or flashing (The machine enters Fusing Unit Off mode except when the Data In indicator is lit or flashing due to receiving faxes or storing documents.)
- The machine does not enter Sleep mode in the following cases:
 - During communication with external equipment
 - When the internal storage is active
 - When the service call message appears
 - When the ADF, machine's cover, or ADF cover are opened
 - When the "Add Toner" message appears
 - · When toner is being replenished
 - When one of the following screens is displayed:
 - System Settings
 - Counter
 - Inquiry
 - Address Book
 - Tray/Paper Settings
- When data is being processed
- If a file is waiting to be transmitted within the next minute using the "Send Later" facsimile function
- When a recipient is being registered in the address list or group dial list
- When the sample print, locked print, hold print, or stored print screen is displayed
- When the screen of a document that was stored under the printer function appears
- When the internal cooling fan is active
- When accessing the machine using Web Image Monitor

Guide to Names and Functions of Components



• Do not obstruct the machine's vents. Doing so can result in fire as the internal components are overheated.

Front and Left View

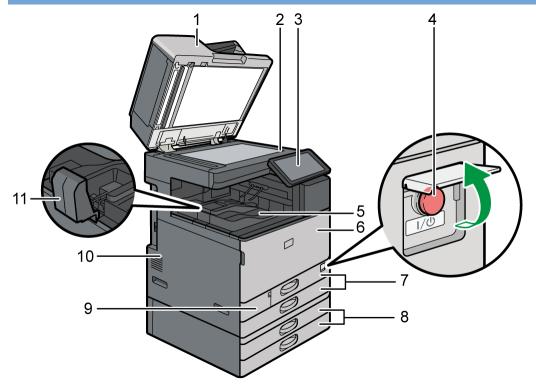

1. Exposure glass cover/Auto Document Feeder (ADF)

Lower the cover over originals placed on the exposure glass.

If you load a stack of originals in the ADF, the ADF will automatically feed the originals one by one.

The ARDF is the ADF that can scan both sides of an original one side at a time.

The one-pass duplex scanning ADF is the ADF that can scan both sides of an original simultaneously.

page70"Placing an Original in the Auto Document Feeder (ADF)"

2. Exposure glass

Place originals face down here.

page69"Placing an Original on the Exposure Glass"

3. Control panel

page27"Names and Functions of the Control Panel"


4. Main power switch

To turn the power on and off, open the cover of the main power switch and press the main power switch.

page19"Turning On and Off the Power"

5. Internal tray 1

Copied/printed paper and fax messages are delivered here. And the paper is output under the paper holder attached inside the internal tray.

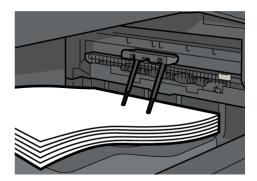

See "Supported Output Trays" about the output tray for the printed paper.

6. Front cover

Open to replace the toner cartridge. page197"Replacing the Toner"

7. Paper trays (Trays 1-2)

Standard paper trays. Load paper here. page 76" Loading Paper into the Paper Tray"

8. Lower paper trays

Optional paper trays. Load paper here. page76"Loading Paper into the Paper Tray"

9. Front lower cover

Open to replace the waste toner bottle. page202"Replacing the Waste Toner Bottle"

10. Vents

Prevent overheating.

After large-volume printing, the ventilation fan may continue to work to lower the temperature inside the machine.


11. Internal tray guide

Open the guide to prevent the printed paper from falling off.



- When using paper holders, always follow the precautions below.
 - Be sure not to place objects in front of the paper holders. Doing so may cause paper jams.
 - After pulling out copied/printed paper, do not put it back under the paper holders. Doing so may result in malfunction and paper jams.

Front and Right View

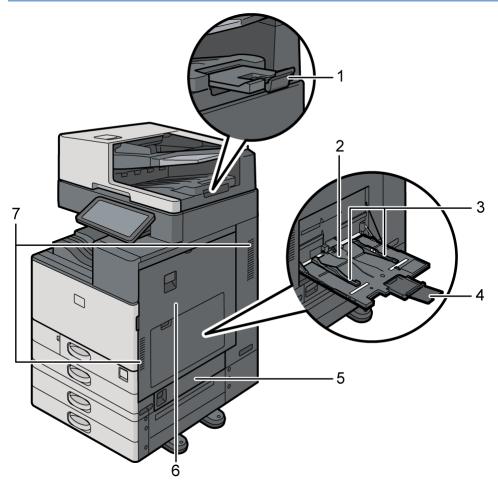

1. ADF tray extender

Pull this extender out to prevent originals larger than B4 JIS or $8^{1}/_{2} \times 14$ size from falling.

2. Bypass tray

Use to copy or print on adhesive labels or paper that cannot be loaded in the paper trays.

page81"Loading Paper into the Bypass Tray"

3. Paper guides

When loading paper in the bypass tray, align the paper guides flush against the paper.

4. Extender

Pull this extender out when loading paper larger than A4 $^{\square}$, $8^1/_2 \times 11$ in the bypass tray.

5. Lower right cover

Open this cover to remove jammed paper.

6. Right cover


Open this cover to remove jammed paper.

7. Vents

Prevent overheating.

After large-volume printing, the ventilation fan may continue to work to lower the temperature inside the machine.

Rear and Left View

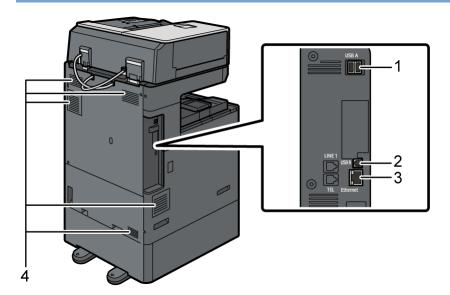

1. USB2.0 Interface Type A

This interface is not used with this machine.

2. USB2.0 Interface Type B

Use the port to connect the machine and the computer with the USB cable.


3. Ethernet interface

Used the port to connect the machine to the network or to use the remote management service (@Remote) over the Internet.

4. Vents

Prevent overheating.

After large-volume printing, the ventilation fan may continue to work to lower the temperature inside the machine.

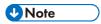

• Region A (mainly Europe)

When touching the machine, you may experience a static shock which is harmless to humans. For details, refer to the following:


https://www.ricoh-europe.com/support/health-safety/ricoh-static-shock.html

Names and Functions of the Control Panel

The touch panel (Smart Operation Panel) that displays the operation screen of the machine is referred to as the "Control Panel".

- On both sides of the control panel, interfaces for connecting external devices and slots to insert an USB flash memory device are provided.
- Even when the screen is turned off, the LED indicators on the frame of the control panel show the status of the machine.


Touch Panel/Interface

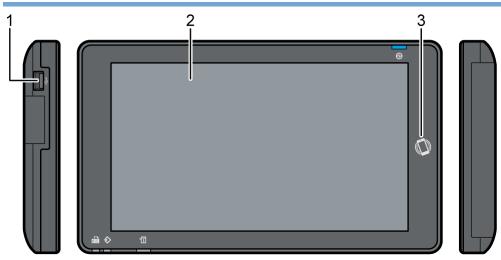

1. Media slots

Insert an USB flash memory device. You can store the scanned data or print the file stored on the media.

- Use the media formatted in FAT16 or FAT32.
- Certain types of USB flash memory devices cannot be used in the machine.
- USB extension cables, hubs, card readers, and USB flash memories with encryption functions cannot be used.
- If the power of the machine is turned off or the media is removed from the machine while the machine is reading the data in the media, check the data in the media.
- Before removing the media from the slot, press the icon displayed on the screen () to cancel the connection.

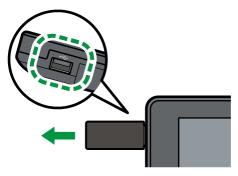

• Do not change the write protection switch of the USB flash memory device while the USB flash memory device is inserted.

2. Touch Panel


Displays the Home screen, operation screen of applications, and messages. Operate with the fingertips.

page29"How to Use the Home Screen" page32"Intuitive Screen Operation Using Fingertips"

3. Touch mark

Used to connect the machine and a smart device with the RICOH Smart Device Connector.

See "Using the Machine Functions from a Mobile Device", User Guide (HTML). page58"Logging In Using a Mobile Device"

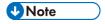

• You can adjust the angle of the control panel to improve visibility. When adjusting the angle of the control panel, be careful not to pinch your fingers.



LED Indicators



1

1. Fax indicator

Indicates the status of the fax function.

- · Flashing: transmitting and receiving data
- Lit: receiving data (Substitute RX File/Memory Lock Reception/Personal Box)

2. Data In indicator

Flashes when the machine is receiving data sent from the printer driver or LAN-Fax driver.

3. Status indicator

Indicates the status of the system. Stays lit when an error occurs or toner runs out. page 207" Checking the Indicators, Icons, and Messages on the Control Panel"

4. Main power indicator


The main power indicator lights up when you turn on the main power switch. In Sleep mode, it flickers slowly.

How to Use the Home Screen

Press [Home] (at the bottom center of the screen to display the Home screen on which icons for each function are shown. On the Home screen, you can register frequently used shortcuts and widgets.

Important

- Do not apply strong impact or force to the screen, or it may be damaged.
 Maximum force allowable is approx. 30N (approx. 3 kgf). (N = Newton, kgf = Kilogram force. 1 kgf = 9.8N.)
- Touch the Home screen to operate it.
 page32"Intuitive Screen Operation Using Fingertips"
- You can add or delete icons and widgets, and change their order.
 page62"Adding a Frequently Used Application or Widget to the Home Screen"

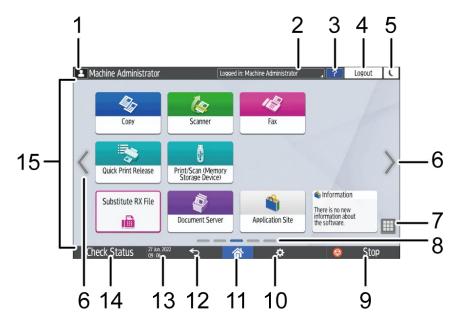

1. Login icon

This icon is displayed when users are logged in. When you press the icon, the names of the users who are currently logged in are displayed.

2. System Message

Displays system and application messages. If there are two or more messages, they will be displayed alternately.

If a message indicating that the toner has run out or an error has occurred is displayed, press the message to display the system message list to check the contents.



3. **Help**

When the machine is connected to the Internet and Help is available for the screen that is displayed or the error that has occurred, press this icon to display a Help screen.

Select the [Accept cookies] check box in the control panel browser to display Help properly.

See "Browser Settings", User Guide (HTML).

4. [Login]/[Logout]

These keys are displayed when user authentication or administrator authentication is enabled. Press the keys to log in to or log out from the machine.

page55"Logging In from the Control Panel"

5. [Energy Save]

Press to enter or exit Sleep mode.

page21"Energy Saving Mode"

6. Switch Screens ♦

Press to scroll the screens right and left. The Home screen has 5 screens.



You can switch between the screens by flicking.

page32"Intuitive Screen Operation Using Fingertips"

You can hide the screen with no icons by setting [Home Screen Blank Pages] to [Do not Display Blank Pages].

See "Display/Input", User Guide (HTML).

7. Application list

Press to display applications that are not displayed on the Home screen. page62"Adding a Frequently Used Application or Widget to the Home Screen"

8. Current display position

Shows which of the five screens is currently displayed.

9. **[Stop]**

Press to stop scanning or printing.

You can change the setting to stop only a job in progress with [Stop Key to Suspend Print Job].

See "Others (System Settings)", User Guide (HTML).

10. [Menu] 🌣

Displayed if a menu is available in the currently selected application.

On the Home screen, press to restore the icons to their factory default positions.

11. [Home] 🕋

Press to display the Home screen.

12. **[Back]** 5

Press to return to the previous screen.

13. Date/Time and Toner remaining

The current date and time is displayed.

To display the information about Toner remaining, specify [Display Time/Remaining Toner] of [System Bar Settings] to [Remaining Toner].

See "Display/Input", User Guide (HTML).

14. [Check Status]

Press to check the following system statuses of the machine. This lights up in red when an error occurs.

· Machine's status


Indicates the error status and network status.

- Operational status of each function
 Status of functions such as Copy or Scanner
- Current jobs
- Job history
- Machine's maintenance information

See "Checking the Machine Status from the Control Panel", User Guide (HTML).

15. Icon display area

Displays the icons and widgets.

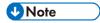

• You can change the screen displayed when the power is turned on under [Function Priority (Default Displayed Application)].

See "Displaying Frequently Used Functions on the First Screen", User Guide (HTML).


• When you press [Menu] ([Reset Home Screen] with the Embedded Software Architecture application being installed in the machine, the application icons are not deleted.

Intuitive Screen Operation Using Fingertips

On the Home screen or application screen, you can perform the following operations by touching the screen with your fingertips.


Flick (for switching between screens)

Touch and slide your finger on the screen quickly left or right to switch between the screens.

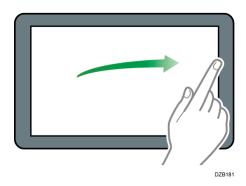

Drag (for moving an icon)


Press and hold an icon, and then slide your finger while pressing on the screen to move the icon.

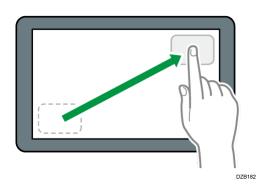

Long tap (for displaying the available menu screen)

Press and hold on a blank area on the screen to display the menu screen.


On the Home screen you can add a folder or change the wallpaper from the menu.

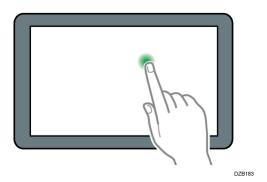

In some applications, you can also use the following actions to operate the screen:


Pinch-in (for zooming out the screen)

Touch the screen with your thumb and forefinger, and pinch them together. This feature is useful when previewing files and images.

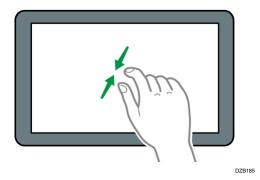

Pinch-out (for zooming in the screen)

Touch the screen with your thumb and forefinger, and spread them apart. You can also zoom in the screen by tapping the screen twice quickly. When you quickly tap the screen twice again, the screen returns to full display. This feature is useful when previewing files and images.

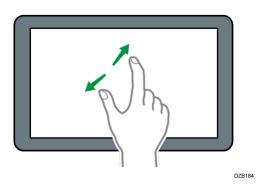

How to Use the "Settings"

Press [Settings] on the Home screen to change the settings of the machine, edit the address book, or confirm various information.

The "Settings" screen consists of the menus shown below.



1. System Settings

Specify the operation panel display, machine operation settings, operation sounds, timer, network settings and other settings.

For the list of setting items, see "System Settings Items", User Guide (HTML).

2. Address Book




Manage the destination for sending data from the fax or scanner or the authentication information for logging in to the machine.

See "How to Use the Address Book", User Guide (HTML).

You can start operation by pressing [Address Book] on the Home screen.



3. Tray/Paper Settings

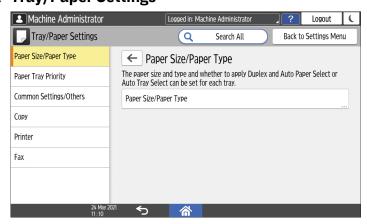

Specify the size and type of paper set in the paper tray.

See "Tray/Paper Settings", User Guide (HTML).

4. Basic Settings When Installing



You can configure the settings easily when installing the machine.

- On the "Installation Settings" screen, you can specify the settings for the items shown below in Wizard format when the machine is moved to a different location or the environment in which the machine is used changes. In [Cloud Settings], you can register or unregister the machine with RICOH Smart Integration. Also, you can change settings related to Cloud Services by using the Cloud Settings.
 - · Basic Settings
 - Network Settings
 - Cloud Settings
 - Fax Settings
- On the [Firmware Update] screen, you can update the firmware of the machine.
- On the "Scan to Folder Helper", you can easily specify the destination to send the scanned data to a computer.

5. Application Settings

Change the settings for the Copier, Document Server, Fax, Printer, and Scanner functions.

For the list of setting items, see Copier/Document Server Settings Items", "Fax Settings Items", "Printer Settings Items", and "Scanner Settings Items", User Guide (HTML).

6. Search All

You can search for a setting item by entering a keyword. Enter more than one keyword to narrow down the search results.

7. Change Language

You can change the language displayed on the control panel.


8. Inquiry



9. Maintenance

You can adjust the balance of each toner and the color registration.

10. Counter

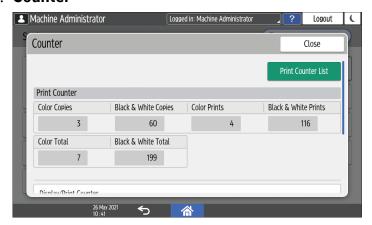

Display and print the total number of sheets printed for each function.

See "Checking the Counter of the Machine for Each Color Category", User Guide (HTML).



- If administrator authentication has been set, contact the administrator to change the settings.
- When you are finished performing an operation, press [Home] () to return to the normal screen.

Changing the Display Language

You can change the language used on the display. Default language is set as follows.

Region A (mainly Europe and Asia): English

Region A (China): Simplified Chinese

® (mainly North America): English

® (Taiwan): Traditional Chinese

1. On the Home screen, press the change language widget.



2. Select the language you want to display.



3. Press [OK].

Basic Operation of Applications

Confirming the Functions that Are Added in RICOH Always Current Technology

You can install the upgrade package for the machine's functions by RICOH Always Current Technology. You can apply the latest functions developed after purchase and security updates.

To install the latest version of RICOH Always Current Technology, access the Application Site from the control panel of the machine.



• For details about installing RICOH Always Current Technology, see the Operating Instructions for Application Site.

Confirming the Version of RICOH Always Current Technology Implemented on the Machine

- 1. Press [Machine Information] on the [Check Status] screen.
- 2. Press [Inquiry].
- 3. Check the version of the machine under the machine information.


How to Use the Copy Screen

You can select from one of two types for the Copy screen:

See page40"How to Use the Copy Screen (Standard)" or page42"How to Use the Copy Screen (No Scrolling Screen)" for how to use functions, such as Job History/Recommended Settings.


Standard View

The basic functions that are used frequently are displayed with big keys. Scroll down the screen to see the keys used to configure the functions for finishing or editing.

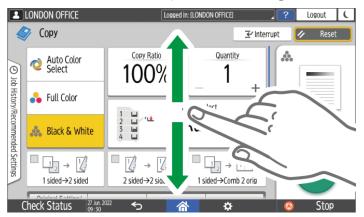

Full View


You can see all the function keys on a single screen. You do not need to scroll through the screens to select a function.

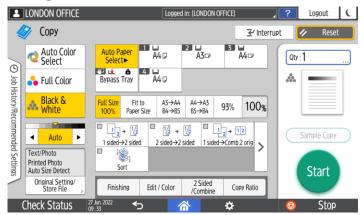

- To switch the screen type, press [Menu] (♣) ► [Screen Settings] ► [Switch Screen Type] on the Copy screen.
- You can use the same functions on either screen.
- When the administrator has configured user authentication and User's Own Customization is enabled, each login user can change the screen type.

How to Use the Copy Screen (Standard)

You can customize the layout and how the keys are displayed on the Copy screen in Standard. For details, see page44"Changing the Layout or Display of the Keys of the Copy Function".

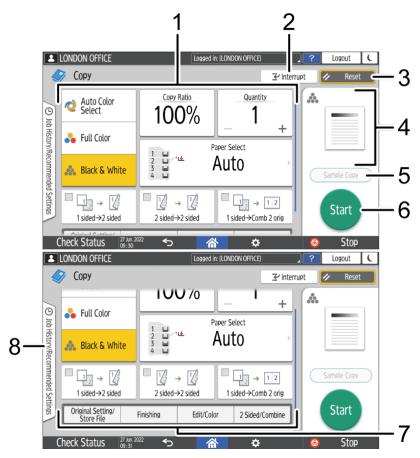

1. Copy function keys

Press a key to select the function to assign to the key. Flick up and down on the screen to display the keys out of the visible area. The keys with assigned functions are displayed in yellow or with in the upper left corner. Depending on the assigned function, the display of the key changes according to the specified setting.

2. [Interrupt]


Interrupt a copy job in progress to copy a different original.

3. **[Reset]**

Reset the settings configured on the Copy screen.

4. Preview of the current setting status

Displays an image representing the settings configured on the Copy screen. Press the image to display the list of the settings.

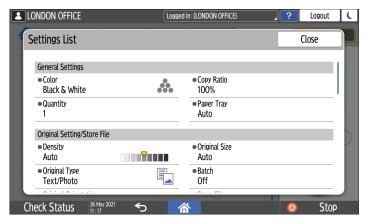

5. [Sample Copy]

Press to make a partial copy as a test before proceeding to copy the rest of the original.

See "Making a Partial Copy as a Test and Copying the Rest of the Original", User Guide (HTML).

6. **[Start]**

Press to perform copying.


7. Other keys for Copy function

Press to select the functions whose keys are out of the visible area of the screen. The key of the function that is currently configured is displayed with in the upper left corner. By pressing [Original Setting/Store File] [Store File], you can store the data scanned using the copy function.

8. [Job History/Recommended Settings]

You can see the preset settings in the machine or the job history. When user authentication is configured, display the history of the executed jobs for each login user. When selecting a job history, its settings are displayed on the current Copy screen. You can use the same settings as a previous job by selecting the job history.


How to Use the Copy Screen (No Scrolling Screen)

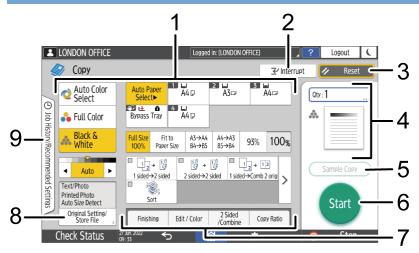

1. Copy function keys

Press a key to select the function to assign to the key. The keys with assigned functions are displayed in yellow.

To see the display area in the illustration below, press > or flick to the left or right.

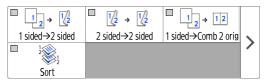

2. [Interrupt]

Interrupt a copy job in progress to copy a different original.

3. **[Reset]**

Reset the settings configured on the Copy screen.

4. Preview of the current setting status

Displays an image representing the quantity and the settings configured on the Copy screen. Press [Qty] to display the number keys. Press the image to display the list of the settings.

5. [Sample Copy]

Press to make a partial copy as a test before proceeding to copy the rest of the original.

See "Making a Partial Copy as a Test and Copying the Rest of the Original", User Guide (HTML).

6. **[Start]**

Press to perform copying.

7. Other keys for Copy function

Press to select the functions whose keys are out of the visible area of the screen. The key of the function that is currently configured is displayed with in the upper left corner.

8. [Original Setting/Store File]

Press to configure the settings, such as the original type and original orientation. Also, from [Store File], you can store the data scanned using the copy function.

9. [Job History/Recommended Settings]


You can see the preset settings in the machine or the job history. When user authentication is configured, display the history of the executed jobs for each authenticated user. When selecting a job history, its settings are displayed on the current Copy screen. You can use the same settings as a previous job by selecting the job history.

You can customize the layout and how the Copy function keys are displayed on the Copy screen in Standard mode (Arranging keys mode).

When the administrator has configured user authentication and User's Own Customization is enabled, each login user can customize the layout.


Switching to change the key layout mode

On the Copy screen, press and hold one of the keys until the screen changes, and then press [OK] to display the screen of the arranging keys mode.

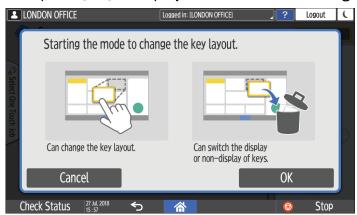


Changing the key layout

Press and hold the key to move, drag it to the location to display, and then press [OK].

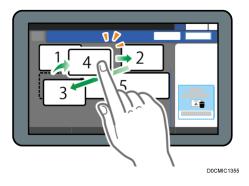

Hiding a key


Press and hold the key to hide, drag it to "Hide the Keys", and then press [OK].

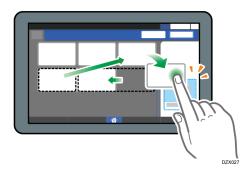

1

Displaying a hidden key

Press "Hidden Key List" to display the hidden keys. Press and hold the key to display, drag it to the location to display, and then press [OK].

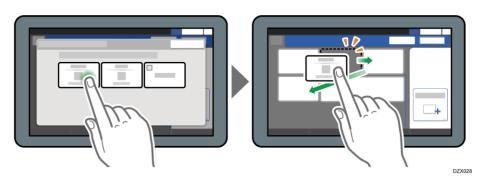

Confirming the initial placement of the keys


Press [Menu] () [Screen Settings] [Temporarily Restore Initial Key Layout] on the Copy screen. After confirming, press [Back].

Resetting the key layout to the default

Press [Menu] ((Screen Settings) [Restore Initial Key Layout] (Yes] on the Copy screen.

How to Use the Fax Screen

There are five kinds of functions and settings on the Fax screen.

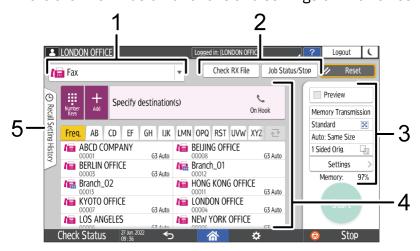

1. Destination type selection

Switch the destination type between [Fax] (including IP-Fax) and [Internet Fax]. The items displayed in the address book and destination entry screen for manual entry change also when you switch the destination type.

2. Transmission/reception information confirmation

Browse and print the received documents that are stored in the memory or on the internal storage of the machine. You can also browse and print the transmission and reception history.

3. Transmission settings

You can specify the additional features to use when sending a fax, configure the scan settings appropriately for the original to scan, and display a preview before sending the fax. You can specify four commonly used settings, such as switching transmission modes, that you can set from the shortcut keys without opening the [Send Settings] screen. You can also check the settings that are currently specified and the remaining amount of memory. You can send a document stored on the machine as a fax by [Select Stored File].

4. Destination specification

You can select an address registered in the address book through one-touch operation.

Press to perform the following operations:

- Specifying a destination by using various other methods such as by entering manually or selecting from the history.
- Registering a destination in the address book.
- Editing the registered destination in the address book.
- Storing the fax transmission file on the machine.

5. Job history

Job history of the executed jobs is displayed. When user authentication is set, the job history of each authenticated user is displayed. When you select a job history, the setting will be applied on the current Fax screen. This feature is convenient when you are using the same setting repeatedly.


Customizing the Send Settings Screen for Fax

Press and hold a key on the [Send Settings] screen to customize the layout of the keys.

When the administrator has enabled user authentication and User's Own Customization, the screen can be customized for each user.


Switching to change the key layout mode

Long-press any key and press [OK] on the screen below to switch to the key sorting mode and enable changing of the key layout.

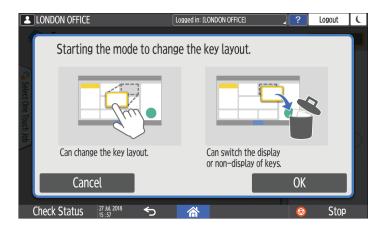


Changing the key layout

Long-press a key to change the layout, drag it to a new location, and then press [OK].

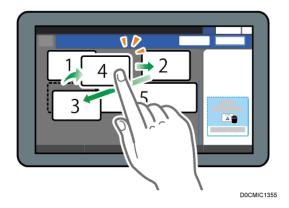


Hiding a key

Long-press a key to hide, drag it to [Hide the Keys] (Trash icon), and then press [OK].

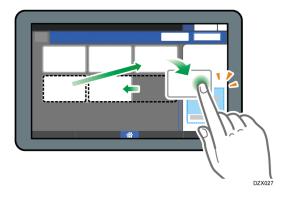

Displaying a hidden key

Press "Hidden Key List" to display the hidden keys. Press and hold the key to display, drag it to the location to display, and then press [OK].

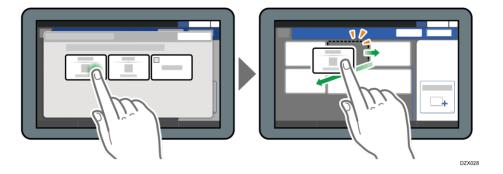

Confirming the initial placement of the keys


Press [Menu] () [Change Key Layout] [Check the key layout of the factory defaults] on the Fax screen. After confirming, press [Back].

Resetting the key layout to the default

Press [Menu] (♣) ► [Change Key Layout] ► [Reset Layout] ► [Restore] on the Fax screen.

How to Use the Scanner Screen

There are five kinds of functions and settings on the Scanner screen.

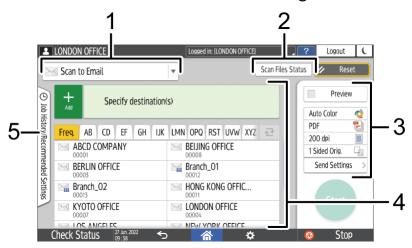

1. Destination type selection

You can switch between [Scan to Email] and [Scan to Folder]. The items displayed in the address book and destination entry screen for manual entry also change when you switch the destination type.

2. Scan Files Status

You can browse the transmission history of the sent documents and cancel sending of a document waiting in the queue. The transmission file status may not be displayed depending on the security settings.

3. Transmission settings

You can specify the scan settings according to the type of document to scan and the purpose of the scanned data, and display a preview before sending the data. You can specify four commonly used settings, such as selecting the type of the original, that you can set from the shortcut keys without opening the [Send Settings] screen. You can send a document stored on the machine by using the scanner function by [Select Stored File].

4. Destination specification

You can select a destination registered in the address book through one-touch operation.

Press to perform the following operations:

- Specifying a destination by using various other methods such as by entering manually or selecting from the history.
- Registering a destination in the address book.
- Editing the registered destination in the address book.
- Using the scanner function to store scanned documents on the machine.

5. Job History/Recommended Settings

You can see the preset settings in the machine or the job history. When user authentication is set, the job history of each authenticated user is displayed. When you select a job history, the setting will be applied on the current Scanner screen. This feature is convenient when you are using the same setting repeatedly.


Customizing the Send Settings Screen for Scanner

Press and hold a key on the [Send Settings] screen to customize the layout of the keys.

When the administrator has enabled user authentication and User's Own Customization, the screen can be customized for each user.


Switching to change the key layout mode

Long-press any key and press [OK] on the screen below to switch to the key sorting mode and enable changing of the key layout.

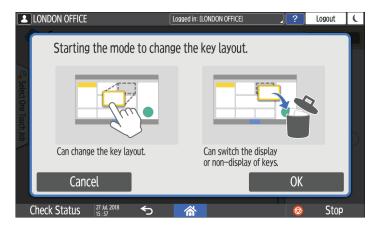


Changing the key layout

Long-press a key to change the layout, drag it to a new location, and then press [OK].

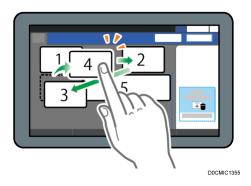


Hiding a key

Long-press a key to hide, drag it to [Hide the Keys] (Trash icon), and then press [OK].

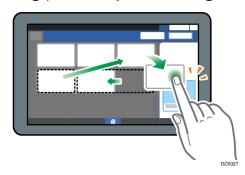

Displaying a hidden key

Press "Hidden Key List" to display the hidden keys. Press and hold the key to display, drag it to the location to display, and then press [OK].

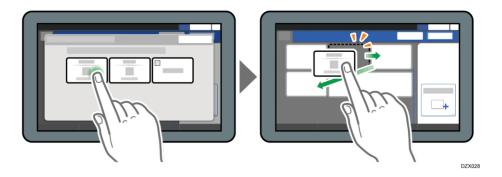

Confirming the initial placement of the keys

Press [Menu] () [Change Key Layout] [Check the key layout of the factory defaults] on the Scanner screen. After confirming, press [Back].

Resetting the key layout to the default

Press [Menu] (♣) ► [Change Key Layout] ► [Reset Layout] ► [Restore] on the Scanner screen.

How to Use the Document Server Screen

In the [Document Server] screen, you can store the documents in the machine by scanning them.

Scanned documents are stored in a folder on the document server. You can print and confirm the details of stored documents.

See "How to Use Document Server", User Guide (HTML).




Documents stored in the document server are deleted after three days (72 hours) in the factory-default configuration. Change the settings in [Auto Delete File in Document Server] to change the period until documents are deleted or to specify not to delete documents automatically.

See "Changing the Storage Period of Document Server or Specifying an Indefinite Period", User Guide (HTML).

Folder List Screen of Document Server

The scanned documents are stored in the document server, and they are organized in folders.

To display a list of folders on screen, press [Edit Folder/File] on the [Document Server] screen.

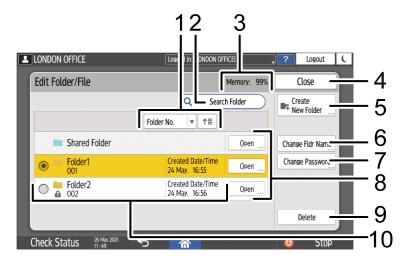

1. Sort keys

Press to sort the folders by [Folder No.], [Folder Name], or [Date/Time].

Press the same sort key again to switch between ascending and descending order.

2. Search key

Press to search for the folder.

3. Status of the document server

Shows the amount of memory available on the document server.

4. [Close]

Press to close the [Edit Folder/File] screen.

5. [Create New Folder]

Press to create a new folder.

6. [Change Fldr Name]

Press to rename a folder.

7. [Change Password]

Press to set or change the password for the folder.

8. **[Open]**

Press to display the documents stored in the folder.

9. **[Delete]**


Press to delete a folder. The documents stored in the folder are deleted.

10. Folders in the document server

Shows a list of folders registered in the document server.

a indicates folders that are protected by a password.

File List Screen of Document Server

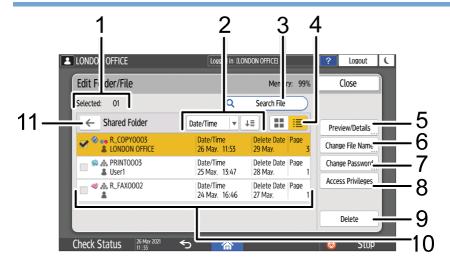

1. [Selected:]

Shows the number of selected documents.

2. Sort keys

Press to sort the documents by [Date/Time], [User Name], or [File Name].

Press the same sort key again to switch between ascending and descending order.

3. Search key

Press to search for the document.

4. Display selector

Press to switch between the list and thumbnail displays.

5. [Preview/Details]

Press to preview the document or confirm details, such as file size.

6. [Change File Name]

Press to rename the document.

7. [Change Password]

Press to set or change the password for the document.

8. [Access Privileges]

Press to set or change the access privilege for the document. Depending on the user authentication settings, [Change User Name] is displayed here. In this case, you can set or change the user name for the document by pressing [Change User Name].

9. [Delete]

Press to delete the document.

10. Documents in the folder

Shows a list of files that are stored in the folder.

indicates folders that are protected by a password.

The icons have the meanings below.

Icon	Meaning
	Document scanned on the copier screen or document server screen
	Document sent by the printer
43	Document sent by the fax
••	Document scanned by specifying the color mode to [Full Color]
٨	Document scanned by specifying the color mode to [Black & White]
A	Document protected by a password

11. **[Back] key**

Press to go back to the folder list screen.

User Authentication

Logging In from the Control Panel


When the machine is configured by the administrator to restrict use by unauthorized users, you must authenticate your login information before starting the operation.

The authentication methods are described below.


• When Basic Authentication, Windows Authentication, or LDAP Authentication is configured on the machine, enter the user name and password for authentication to log in to the machine before starting operation.



 Depending on the machine settings, you can use an IC card or mobile device for authentication.

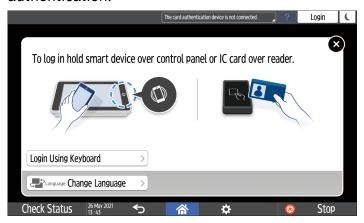

• If user code authentication is specified, you may need to enter the user code to operate the restricted application.

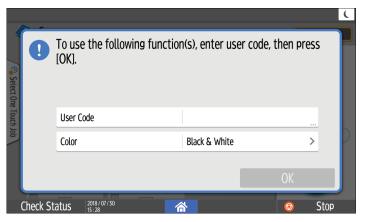

To prevent use of the machine by an unauthorized person, always log out when you have finished using the machine. While a user is logged in, the name of the user is displayed in the system message.



- If the machine is not used for a specified period, the user is automatically logged out (Auto Logout). The default setting for Auto Logout is 3 minutes. The period of Auto Logout can be changed by [Auto Logout Timer] of [System Settings] or the Auto Logout setting can be disabled.
 - See "Date/Time/Timer", User Guide (HTML).
- When the machine availability time specified in [Time Settings Allowing Operating Machine by Logging in] has passed, the user is automatically logged out even if the period of Auto Logout specified in [Auto Logout Timer] has not passed yet.
- Ask the administrator, or the custom-privileges administrator that has equal privileges, for a login user name, login password, and user code.
 See "Verifying Users to Operate the Machine (User Authentication)", User Guide (HTML).


Logging In by Entering the User Name and Password

Enter the authentication information using the keyboard displayed on the control panel.

1. Press [Login] at the top right on the screen.



2. Press [User Name].

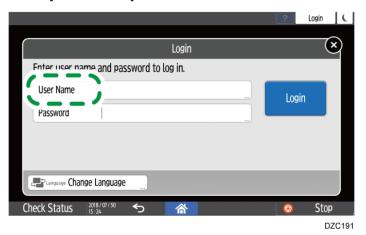

- 3. Enter the login user name, and then press [Done].
- 4. Press [Password].
- 5. Enter the login password, and then press [Done].
- 6. Press [Login].



• If an incorrect password is entered a specified number of times, login with the same name is disabled (Lockout Function). The default setting for unsuccessful attempts before a user is locked out is five. If the user is locked out, the administrator must release the lockout.

See "Specifying the Policy on Login/Logout", User Guide (HTML).

• To log out from the machine, press [Logout] at the top right on the screen, and then press [OK].

Logging In Using an IC Card

Hold an IC card over the IC card reader to the right of the control panel. If the card is not registered on the machine, enter the authentication information and register the card.

1. Hold an IC card over the IC card reader.



- When the card is registered on the machine, login operation finishes.
- When the card is not registered, the registration screen is displayed. Proceed to the next step to register the card.

- 2. Enter the Login User Name and Login Password, and then press [Register].
- 3. Hold the IC card over the IC card reader again.



- To log out, hold the IC card over the IC card reader or press [Logout] at the top right on the screen.
- If another user holds the IC card over the IC card reader while you are still logged in, you are automatically logged out and the new user logs in.

Logging In Using a Mobile Device


Log in to the machine using the RICOH Smart Device Connector app on your mobile device. You need a mobile device that supports Bluetooth Low Energy (BLE).

- 1. Enable the Bluetooth function on your mobile device.
- 2. Start the RICOH Smart Device Connector application on the mobile device, and then flick left or right to display the login screen.



If the login screen is not displayed, press [Settings] ▶ [Navigation Display Item], and then enable the display of [Login to MFP] on RICOH Smart Device Connector.

- 3. Press [NEXT].
- **4.** Display the login screen on the control panel of the machine, and hold the mobile device over the touch mark.

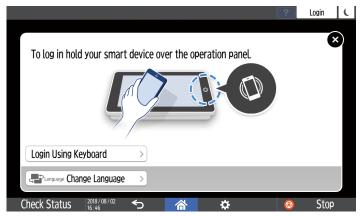




- To log out from the machine, hold the mobile device over the touch mark on the control panel or press [Logout] at the top right on the screen.
- If another user holds a mobile device over the touch mark while you are still logged in, you are automatically logged out and the new user logs in.

Authenticating Using the User Code

When User Code Authentication is specified as the authentication method on the machine, enter the user code before operating an application.

1. Enter the user code, and then press [OK].

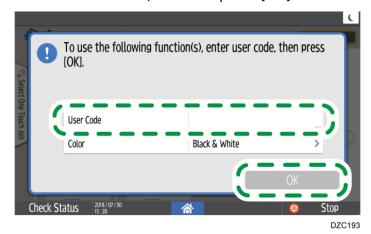

UNote

• When you finish the operation of the application, press [Energy Save] () or press and hold [Reset] to release the authentication status.

Changing the Login Password by Using the Control Panel


When Basic Authentication, Windows Authentication, or LDAP Authentication is configured on the machine, change the password periodically to prevent use of the machine by an unauthorized person.

Passwords can contain the following characters. Make the password difficult to guess.

- Uppercase letters: A to Z (26 characters)
- Lowercase letters: a to z (26 characters)
- Numbers: 0 to 9 (10 characters)
- Symbols: (space) ! " # \$ % & '() * + , . / : ; < = > ? @ [\]^_`{|}~ (33 characters)
- 1. Log in to the machine.
- 2. Press [Address Book] on the Home screen.



3. Select the login user from the address book, and then press [Edit].

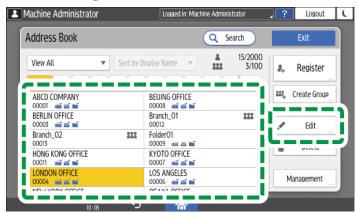

- **4.** Press the [User Management / Other] tab ► [User Management].
- 5. Enter the new password in [Login Password], and then re-enter the password in [Confirm Login Password] for confirmation.



You can enter up to 128 characters.

- 6. Press [OK] twice.
- 7. After completing the procedure, press [Home] (1).
 - If a message prompting you to contact the administrator to back up the address book appears on the screen, ask the administrator to back up the address book.
 - If you select [Close], you can close the address book without backing up and go back to the Home screen. When a message prompting you to back up the address book appears on the screen, press [Go to Backup] to back up the address book.


See "Making a Backup or Restoring the Address Book", User Guide (HTML).

Customization of the Machine Settings

Adding a Frequently Used Application or Widget to the Home Screen

You can use a frequently used icon or widget easily by adding it to the Home screen. You can organize the icons on the Home screen as you like by changing their order or using folders.

- Add an icon or widget from the application list screen.
- Each page of the Home screen can display up to 12 icons, widgets or folders, for a total of 60 items. A folder can hold up to 80 icons.
- You can add the following items to the Home screen: shortcuts of bookmarks in the browser on the screen and programs registered in the Copy, Fax or Scanner.

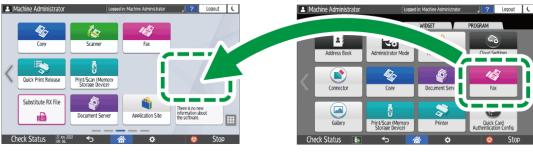




- You cannot add a shortcut of a program registered by the document server function to the Home screen.
- When you have set user authentication, log in and customize it. Each user can register their own Home screen.
- A shortcut, folder, or widget cannot be created or moved if there is no space on the Home screen. In this case, delete one of the registered items, and then perform the same operation.
- The names of icons and widgets are displayed up to 20 double-byte or 30 single-byte characters. Names composed of 21 or more double-byte characters are displayed with "...", indicating the 20th and later characters.

1

Adding an Icon/Widget to the Home Screen

1. Press the application list icon on the Home screen.

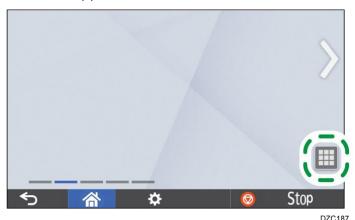

2. Press and hold the icon or widget to be added to the application list screen.



- Select the [WIDGET] tab to add a widget, or select the [PROGRAM] tab to add a program.
- 3. After the screen changes to the Home screen, move the icon or widget to the desired position and release it.

To add a classic application or program, select the type of application or program from the displayed menu.



Moving or Deleting Icons and Widgets

- To move an icon or widget, press and hold the icon and move it to the desired position, and then release it.
- To delete an icon or widget, press and hold the icon and move it to the trash icon, and then release it.
- When you delete a shortcut icon of a function or program from the Home screen, the function or program is not deleted.
- To reset the Home screen, perform the following procedure.
 - 1. Press [Menu] (*) on the bottom center of the Home screen.
 - 2. Press [Reset Home Screen], and then press [OK].

Creating a Folder to Organize Icons

- 1. Press and hold a spot on the Home screen where you want to create a folder.
- 2. When the "Add to Home Screen" screen is displayed, press [Folder].




- 3. Open the created folder, press and hold its title, and then change the folder name. You can enter up to 30 characters for a folder name.
- 4. Drag the icon and release it over the folder.

Registering/Changing/Deleting a Program that is Component of Frequently Used Settings

You can register a "program" made of a combination of the functions used in the Copy, Fax, Scanner, or Document Server, such as the scan setting, output setting, and address.

• You can load the registered program easily from the application screen.

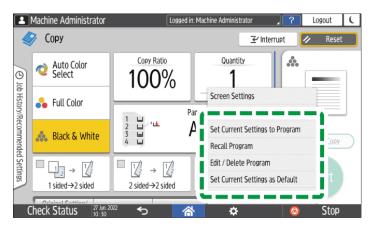

- When you press the icon of a program on the Home screen, the machine applies the settings and performs the function registered in the program automatically.
- You can register the following number of items as programs.


Copy: 25 itemsFax: 100 items

• Scanner: 100 items

· Document Server: 25 items

You can prohibit users other than the machine administrator, or a custom-privileges administrator that has equal privileges, from registering a program.

See "Specifying Menu Protect", User Guide (HTML).

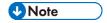

- You cannot register the following settings as a program:
 - Copy
 Orientation of [2 Sided/Combine]
 - Fax [Subject], [Sender]
 - Scanner
 [Sender], [PDF Security Settings], Start Number
 - Document Server[Print Specified Page] settings
- When you register a program that includes a destination, set [Program Setting for Destinations] of [Scanner Settings] to [Include Destinations].


See "Address Book Settings", User Guide (HTML).

- When [Program Setting for Destinations] of [Scanner Settings] is set to [Exclude Destinations], the destination registered on the recalled program in the scanner function is not displayed.
- A folder destination with a destination protection code cannot be registered on a program of the scanner function.

Registering Settings as a Program

First, configure the settings to be registered on the Copy, Fax, Scanner, or Document Server screen, and then register them.

1. On the Home screen, press [Copy], [Fax], [Scanner] or [Document Server].

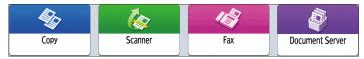

If the icon is not displayed on the Home screen, add the icon from the application list screen.

page62"Adding a Frequently Used Application or Widget to the Home Screen"

2. Specify scan and output settings to be registered as a program.



When using the Document Server, specify the settings on the [Print Settings] screen. To display the [Print Settings] screen, select the document to print on the [Print File] screen, and then press [Print Settings].

- 3. Press [Menu] (*).
- 4. Press [Set Current Settings to Program].




- 5. Press a program number to register the settings.
- **6.** Enter a program name and select an icon.
- **7**. Press [OK].

If you selected [Document Server] in Step 1, proceed to Step 9 after pressing [OK].

8. Press [OK].

The selected icon is displayed on the Home screen.

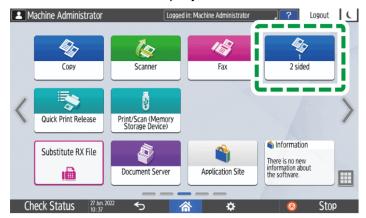

Even if you select [Cancel], you can add shortcuts to the program to the Home screen after the program registration is complete.

Shortcuts to programs stored in Document Server mode cannot be registered to the [Home] screen.

9. Press [Exit].

Changing the Contents of the Program

You can change a part of the program and overwrite it or change the contents and register them as a new program.


1. On the Home screen, press [Copy], [Fax], [Scanner], or [Document Server].




If the icon is not displayed on the Home screen, add the icon from the application list screen.

page62"Adding a Frequently Used Application or Widget to the Home Screen"

When using the Document Server, select the document to print on the [Print File] screen, and then press [Print Settings] to display the [Print Settings] screen.

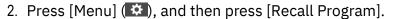

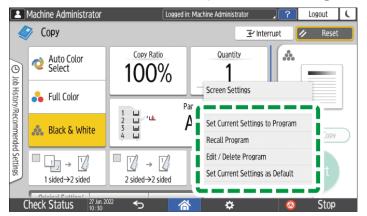

- 3. Press the program number to be changed.
- 4. Change the scan and output settings.
- 5. Press [Menu] (), and then press [Set Current Settings to Program].
- 6. Select a program number to register the changed settings.
 - To overwrite the program, select the number of the loaded program, and then press [Program] on the message appears.
 - To register the contents as a new program, select a number that is not programmed.
- 7. Enter a program name and select an icon.
- 8. Press [OK].


If you selected [Document Server] in Step 1, proceed to Step 10 after pressing [OK].

9. Press [OK].

Even if you select [Cancel], you can add shortcuts to the program to the Home screen after changing the settings of the program is complete.

Shortcuts to programs stored in Document Server mode cannot be registered to the [Home] screen.

10. Press [Exit].

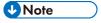

• To change the icon or program name or to delete the program, press [Menu] (*) and operate from [Edit / Delete Program].

Placing an Original and Loading Paper

Placing an Original on the Exposure Glass


Use the exposure glass to scan originals that cannot be placed in the auto document feeder (ADF), such as books and license cards.

CAUTION

• When lowering the ADF, do not place your hands on the hinges and exposure glass. Your hands or fingers are caught, which can result in injury.


Mportant (

- Do not lift the ADF forcefully. The cover of the ADF might open and cause injury. The ADF, or its hinges may also become damaged.
- Lift the ADF or the exposure glass cover.
 Lift the ADF or the exposure glass cover by more than 30 degrees to detect the document size automatically when placing an original on the exposure glass.
- 2. Place the original face down and aligned to the mark on the upper left corner of the scan area.

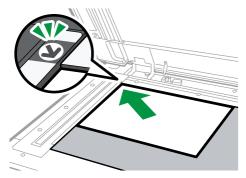


page301"Recommended Original Size and Weight" page303"Sizes Detectable with Auto Paper Select"


3. Lower the ADF or the exposure glass cover.

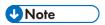

• When you place a thick book or three-dimensional original on the exposure glass and lower the ADF, the back side of the ADF rises up to accommodate the original.

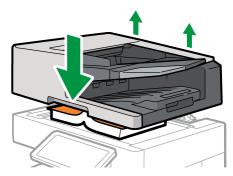

 Do not open or close the ADF with your hands placed in the space between the ADF and exposure glass.

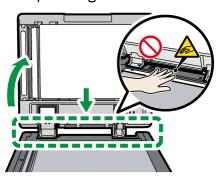


Placing an Original in the Auto Document Feeder (ADF)

The ADF automatically scans multiple sheets of originals or two-sided originals at one time.

There are two types of ADF as follows:

Auto Reverse Document Feeder (ARDF)

When scanning a two-sided original, the machine scans the front side of the original first, and then turns it over to scan the back side.

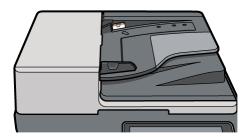

One-pass duplex scanning ADF

When scanning a two-sided original, the machine scans the front and back sides of the two-sided original at one time.



- For details about the sizes of originals that you can place in the ADF, see the following:
 - page301"Recommended Original Size and Weight" page303"Sizes Detectable with Auto Paper Select"
- If the originals described below are placed in the ADF, it may cause misfeeds, white lines, or black lines, or result in damage to the originals. Place these originals on the exposure glass.
 - Stapled or clipped originals
 - Perforated or torn originals
 - Curled, folded, or creased originals
 - Pasted originals
 - Originals with adhesive tape, glue or paste stuck to them
 - Originals with any kind of coating, such as thermal paper, art paper, aluminum foil, carbon paper, or conductive paper
 - Originals with perforated lines
 - Originals with indexes, tags, or other projecting parts
 - Sticky originals such as translucent paper
 - Thin or highly flexible originals
 - Bound originals such as books
 - Transparent originals such as transparencies or translucent paper page69"Placing an Original on the Exposure Glass"
- When loading an original written by pencil on the ADF, the original may be dirty from by being scraped.
- Correct an original that tends to curl before setting on the machine.
- Fan sheets before loading so that multiple originals do not stick to each other and are not fed at the same time. If the edge of the paper is not cut well, the edges of the

paper curl back, forming what are called burrs. Before you set originals with burrs, fan the originals carefully.




- Do not set an original that is wet with correcting fluid or ink. The scanning glass will be stained and the stain will be scanned with the original.
- When the page keeper is attached, the machine detects originals that double-feed. However, the following types of originals may not be scanned correctly.
 - Folded, damaged, or torn originals
 - · Perforated originals
 - Completely stuck originals
 - Originals with perforated lines
 - Originals that are partially divided in two
 - Originals with sticky notes, paper tape, or other things, on them

Placing Originals in the ARDF


ACAUTION

• Do not directly touch the parts illustrated below. Doing so might cause a malfunction.

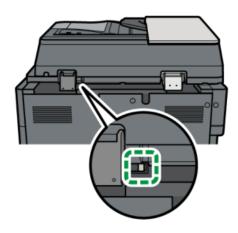




 Do not block the sensors with your hand. Be sure to load the originals neatly and do not push them into the ADF forcibly. It may cause paper misfeeds or paper size error.

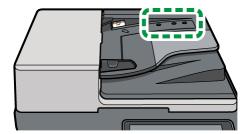

1. Adjust the original guide to the original size.

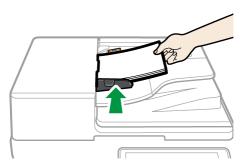


2. Place the aligned originals squarely face up in the ARDF.

Place the originals with the first page facing up.


Fan sheets before loading so that multiple papers do not stick to each other and are not fed at once.

Do not stack the originals beyond the limit mark.

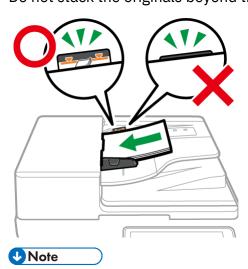


• When you place originals that have different widths at the same time (Mixed Sizes), adjust the original guide to the largest original, and place the smaller originals to align to the fence on the back side.

• To scan originals larger than B4 JIS or $8^{1}/_{2} \times 14$ size, raise the ADF's extender on the ADF output tray.

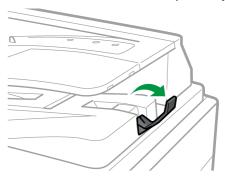


• When using the ARDF to scan originals with a paper weight less than 40.7 g/m² (approx. 11 lb. Bond), move the slide tray on the original output tray to the left side. When the slide tray of the Auto Reversible Document Feeder (ARDF) is in the left, the amount of output paper will be low. After scanning a thin original, return the slide tray to the previous position.

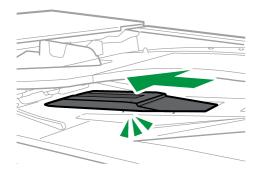

Placing Originals in the One-pass Duplex Scanning ADF


Important

 Do not block the sensors with your hand. Be sure to load the originals neatly and do not push them into the ADF forcibly. It may cause paper misfeeds or paper size error.

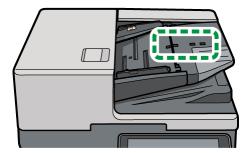

- Do not add originals while other originals are being fed.
- If you want to add the originals to the bottom of the original stack on the ADF, remove the originals temporarily to add the new originals, and then reload the combined stack of originals.

1. Adjust the paper guides to the size of the originals.

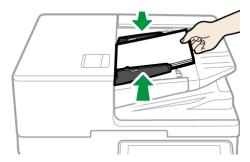


2. Place the aligned originals squarely face up and place them all the way straight into the one-pass duplex scanning ADF.

Place the originals with the first page facing up.


Fan sheets before loading so that multiple originals do not stick to each other and are not fed at once. If the edge of the paper is not cut well, the edges of the paper curl back, forming what are called burrs. Before you set originals with burrs, fan the originals carefully.

Do not stack the originals beyond the limit mark.

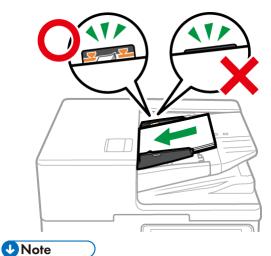

• When you place originals that have different widths at the same time (Mixed Sizes), adjust the original guide to the largest original, and place the smaller originals to align to the fence on the back side.

• To scan originals larger than B4 JIS or $8^{1}/_{2} \times 14$ size, pull out the ADF's extender on the original output tray, and then raise the stopper.

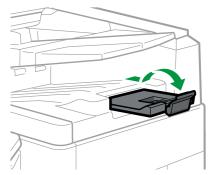

- When you place an original that has a side that is shorter than 128 mm (5.04 inches), place the original in landscape (□) orientation.
- When using the one-pass duplex scanning ADF to scan originals with a paper weight of less than 40.7g/m² (approx. 11 lb. Bond) ,move the slide tray on the original output tray to the left side. When the slide tray of the one-pass duplex scanning ADF is set to the left, the amount of output paper will be low. After scanning the thin originals, return the slide tray to the previous position.




Loading Paper into the Paper Tray

The method of loading paper varies for each tray type.



• When replacing paper or removing jammed paper, make sure not to trap or injure your fingers.

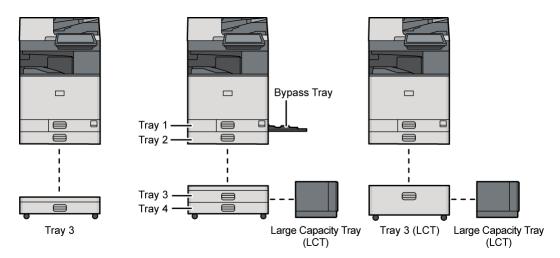

- Before loading paper into a tray, check the paper size and type that can be loaded in the tray, and confirm the paper size that is automatically detected.
 - page 285" Recommended Paper Sizes and Types"
- When loading paper of a size that is not automatically detected, specify the paper size in [Tray/Paper Settings] of [Settings].
 - page88"Specifying the Paper Size That Is Not Automatically Detected"
- To load thin paper, thick paper, or other special paper, specify the paper type or thickness in [Tray/Paper Settings] of [Settings].
 - See "Tray/Paper Settings", User Guide (HTML).
 - page92"Specifying Paper Type and Thickness Settings"
- Check the paper setting before printing. If the paper differs from the paper setting, a mismatch error will occur when you print.
- Straighten curled or warped paper before loading.
- When loading paper on a tray which has a few sheets of paper, multiple sheets of paper may be fed at once from the tray. Take out all sheets, fan the sheets, and then load them again.
- If a paper tray is pushed vigorously when putting it back into place, the position of the tray's side fences may slip out of place.
- When loading a low number of sheets, be sure not to squeeze the side fences in too tightly. If the side fences are squeezed too tightly against the paper, the edges may crease, thin paper may wrinkle, or the paper may misfeed.
- You may hear the sound of rubbing paper. This is not a malfunction.
- Do not stack paper over the limit mark.

Loading Paper into Tray 1 to 4

Adjust the side and end fences according to the paper size. When loading paper larger than A3 or 11×17 to tray 2-4, also change the position of the auxiliary side fence.


Tray 1 can hold A4 portrait paper only. If you want to print on A5, B5 JIS, or $8^{1}/_{2} \times 11$ portrait paper from Tray 1, contact your service representative.

Region B (mainly North America)

Tray 1 can hold $8^{1}/_{2} \times 11$ portrait paper only. If you want to print on A4, A5, or B5 JIS portrait paper from Tray 1, contact your service representative.




- Tray 1 does not have the auto detect function for the paper size. On the control panel, specify the paper size to use.
 - page88"Specifying the Paper Size That Is Not Automatically Detected"
- Do not stack paper over the limit mark. If you load paper over the limit mark, the printed images may become slanted or a paper jam may occur.

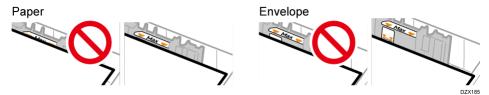


Load paper into every tray in the same way. In the following example procedure, Tray 2 is used.

1. Check that paper in the paper tray is not being used, and then pull the tray out carefully.

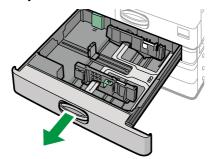


- 2. Remove paper if loaded.
- 3. While pressing the release lever of the side fence, slide the side fences outward.

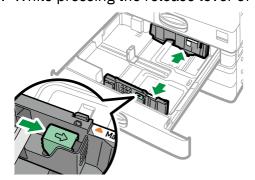


4. To load paper larger than A3 or 11×17 , pull the tray out completely and then change the positions of the auxiliary side fence.

Place the tray on a flat surface.

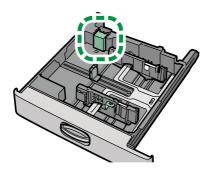


1. Pinch the auxiliary side fence, and then take it out of the tray.

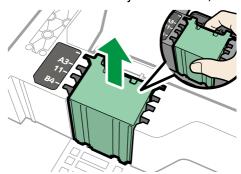


2. Put the auxiliary side fence into the groove for the paper size to use.



5. While pressing the release lever of the end fence, slide the end fence outward.

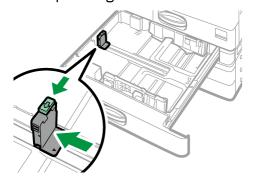

If the end fence is fixed with the stopper, rotate the fixing screw of the stopper 90 degrees counterclockwise with a coin or similar object and remove the stopper.

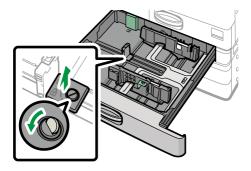


6. Square the paper and load it with the print side facing up.

Fan sheets before loading so that multiple sheets of paper do not stick to each other and are not fed at once.


Check the paper edges are aligned at the right side.

Do not stack paper over the limit mark.

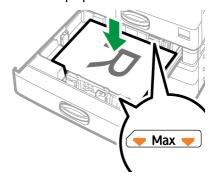


7. While pressing the release lever, adjust the side and end fences to the paper size.

Do not leave spaces between the paper and fences.

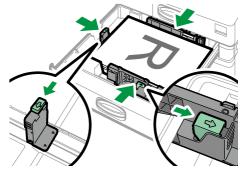


To fix the end fence, engage the two projections of the stopper with the holes on the end fence, and then tighten the fixing screw by rotating it 90 degrees clockwise with a coin or similar object.

• If you will not fix the end fence, put the stopper in the position as shown in the illustration, and then rotate the fixing screw 90 degrees clockwise with a coin or similar object.

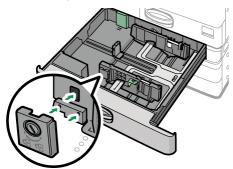

8. Push the tray in the original position carefully.

To return the completely pulled out tray to the original position, push the tray straight in. If the paper tray is damaged, it may cause a paper jam. Also, if you push the tray forcibly, the side fence of the tray may be moved.

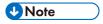

You can load envelopes into Tray 2 to 4.
 page296"Envelope Orientation and Recommended Status"


Loading Paper into the Bypass Tray

Use the bypass tray to load paper of a size that cannot be loaded into Tray 1 to 4, such as label paper (adhesive labels).


The maximum number of sheets you can load at the same time depends on paper type. page285"Recommended Paper Sizes and Types"



• Do not stack paper over the limit mark. If you load paper over the limit mark, the print image may be slanted or the paper may be jammed.

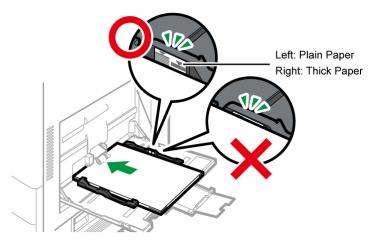

1. Open the bypass tray.

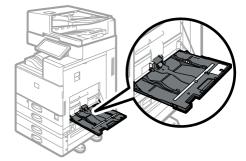

Make sure that the bypass tray is fully opened.


When loading paper larger than the bypass tray (longer than A4 or 8 $^{1}/_{2} \times 11$ paper in landscape orientation), pull out the extender.

2. Load the paper with the print side down, and push it in lightly until you hear a beep. Fan sheets before loading so that multiple sheets of paper do not stick to each other and are not fed at once.

When loading envelopes or letterhead paper, confirm the orientation, face and back, or location of flaps.

page296"Envelope Orientation and Recommended Status" page298"Loading Orientation-fixed Paper or Two-sided Paper"

3. Align the paper guides to the paper size.

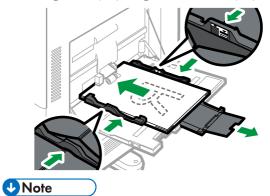


• To load paper on the bypass tray, it is better to orient it in the direction of \Box .

Loading paper into the banner paper guide tray

You can load banner paper when the banner paper guide tray is attached.

Turn the knob clockwise until its triangle mark stops at the unlock mark.
 Be careful that your hand does not hit the banner paper guide tray when turning the knob.

If you cannot turn the knob, turn it while pushing the banner paper guide tray toward the machine.

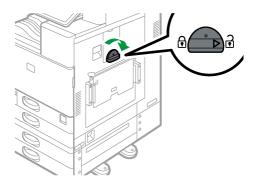


2. Hold the handle in one hand while supporting the back of the bypass tray with the other hand, and then open the bypass tray slowly.

Open the bypass tray until it is parallel to the floor.

When loading paper that has a horizontal width of 148–457.2 mm (5.83–18.00 inches), proceed to Step 4.




3. Raise the banner paper guide tray, and then insert it into the bypass tray until it becomes stable.

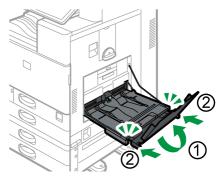


- 4. Load the paper face down until you hear the beep.
- 5. Align the paper guides to the paper size.

If the guides are not flush against the paper, images might be skewed or paper misfeeds might occur.


When loading paper that has a horizontal width of 148–899 mm (5.83–35.4 inches), proceed to Step 7.

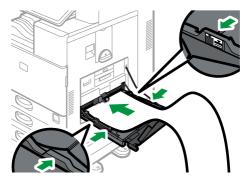


6. Open the subtray, and then raise the minor banner paper guide tray.

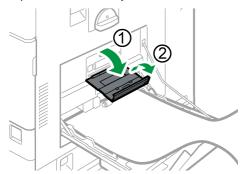


- 7. Set the leading edge of the paper according to the paper size.
 - When using paper that has a horizontal width of 966-1,260 mm (38.1-49.6 inches), curl the paper so that its leading edge touches the minor banner paper guide tray.

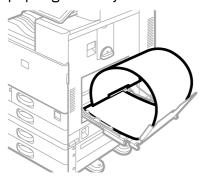


• When using paper that has a horizontal width of 900-965 mm (35.5-38.0 inches), curl the paper so that its leading edge touches the side of the machine.

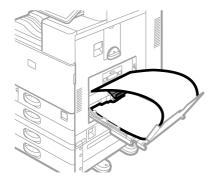

• When using paper that has a horizontal width of 457.2–900 mm (18.00–35.5 inches), set the paper so that its leading edge protrudes from the banner paper guide tray.

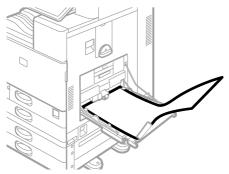

• When using paper that has a horizontal width of 148–457.2 mm (5.83–18.00 inches), set the paper as loading paper into the bypass tray.

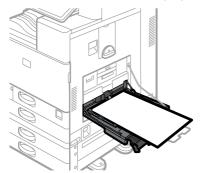



- If you cannot load a certain type of paper as shown in the illustrations above, refer to the loading method for a different length of paper to load that paper. If you still cannot load the paper, support the paper to keep it straight so it does not the fold.
- You can load up to 10 sheets of recommended paper (297 1200 mm (11.7 47.3 inches)) into the banner paper guide tray. When loading multiple sheets of paper into the banner paper guide tray, be sure to separate them one by one before loading them.
- When [Notification Sound] is set to [No Sound], it does not sound if you load paper into the banner paper guide tray.
- Remove the sheets of printed banner paper one by one after every printing.
- When you output banner paper, support the printed paper gently so it does not fall from the output tray.

Closing the banner paper guide tray

- 1. Remove any paper that is loaded.
- 2. Fold the subtray up.
- 3. Slide the paper guides outward to the maximum width.
- 4. Fold up the banner paper guide tray.
- 5. Hold the handle in one hand while supporting the back of the bypass tray with the other hand, and then close the bypass tray slowly.
- **6.** Turn the knob counter-clockwise until its triangle mark stops at the lock mark.

Loading Paper into Tray 3 (LCT)


Tray 3 (LCT) can hold A4 portrait paper only. If you want to print on $8^{1}/_{2} \times 11$ portrait paper from Tray 3 (LCT), contact your service representative.

Region B (mainly North America)


Tray 3 (LCT) can hold $8^{1}/_{2} \times 11$ portrait paper only. If you want to print on A4 portrait paper from Tray 3 (LCT), contact your service representative.

- You can load paper in both the left and right sides of the tray.
- The paper in the right side of Tray 3 (LCT) is fed to the machine. When the paper loaded in the right side of Tray 3 (LCT) runs out, paper on the left side is automatically shifted to the right, and the tray continues to feed the paper.
- While printing from Tray 3 (LCT), you can pull out the left side of the tray and load new paper.

• When the paper loaded in the right side of Tray 3 (LCT) runs out, paper on the left is automatically shifted to the right. Do not pull out Tray 3 (LCT) while you hear the sound of moving paper.

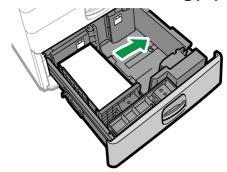

1. Pull Tray 3 (LCT) out carefully.

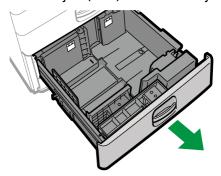


2. Square the paper and load it with the print side facing up.

Fan sheets before loading so that multiple sheets of paper do not stick to each other and are not fed at once.

For the right stack, align the right edge of the paper with the right edge of the tray. For the left stack, align the left edge of the paper with the left edge of the tray.


Do not stack paper over the limit mark.

When the whole tray can be pulled out

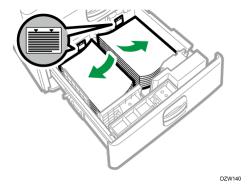

When half of the tray can be pulled out

Load 30 or more sheets of paper in the left half of the tray.

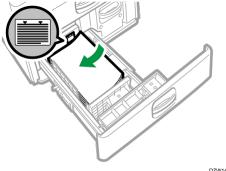

3. Carefully push Tray 3 (LCT) fully in.

Loading Paper into the Large Capacity Tray


⊕ Region A (mainly Europe and Asia) / ● Region B (Taiwan)

The large capacity tray can hold A4 portrait paper only. If you want to print on $8^{1}/_{2} \times 11$ or B5 JIS portrait paper from the large capacity tray, contact your service representative.

Region B (mainly North America)

The large capacity tray can hold $8^{1}/_{2} \times 11$ portrait paper only. If you want to print on A4 or B5 JIS portrait paper from the large capacity tray, contact your service representative.

1. Open the cover of the large capacity tray.

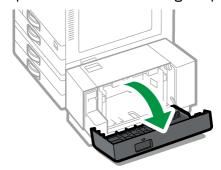


2. Square the paper and load it with the print side facing down.

Fan sheets before loading so that multiple sheets of paper do not stick to each other and are not fed at once.

Check the paper edges are aligned at the left side.

Do not stack paper over the limit mark.

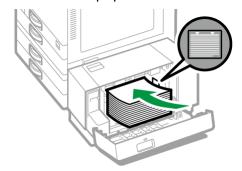

3. Close the cover of the large capacity tray.


Specifying the Paper Size That Is Not Automatically Detected

1. Press [Settings] on the Home screen.



1


2. Press [Tray/Paper Settings].

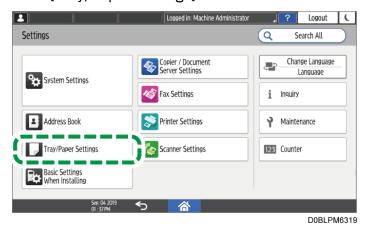

- 3. Press [Paper Size/Paper Type].
- 4. Press one tray to set.



5. Press [Paper Size].

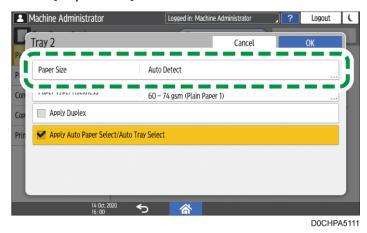

To specify for the bypass tray, press [Paper Size: Printer].

The size of the paper in Tray 1, Tray 3 (LCT), and the large capacity tray is fixed and cannot be changed.

- 6. Choose one paper size from the list shown, and then press [OK].
- 7. Press [OK].
- 8. After completing the configuration, press [Home] ().

To use paper that can be detected automatically after using paper that cannot be detected automatically, restore the setting of Auto Detect. To restore the setting of Auto Detect, load the paper again, operate steps 1 to 5, select [Auto Detect], and then press [OK].

Specifying a Custom Size Paper Using the Control Panel

1. Press [Settings] on the Home screen.



2. Press [Tray/Paper Settings].




- 3. Press [Paper Size/Paper Type].
- 4. Press one tray to set.



1


5. Press [Paper Size].

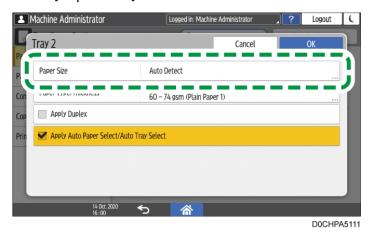

To specify for the bypass tray, press [Paper Size: Printer].


The size of the paper in Tray 1, Tray 3 (LCT), and the large capacity tray is fixed and cannot be changed.

6. Press [Custom] from the list shown.

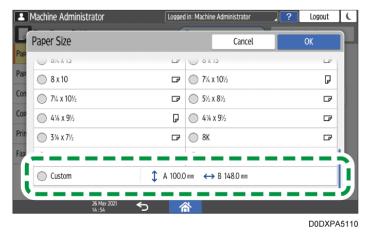

7. Press the value in the "A" or "B" field, and then enter the new value.

Specify the values within the numbers of "< >", and then press [Done].

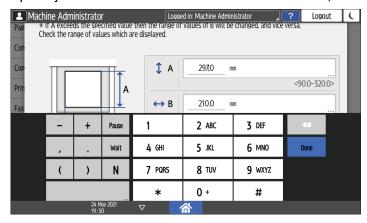

- 8. Press [OK] three times.
- 9. After completing the configuration, press [Home] (1).

Specifying Paper Type and Thickness Settings

If the print settings and the loaded paper that are used for a print job do not match, a mismatch error occurs.

Check and specify the paper settings before you start printing.



• Before you change the settings, confirm the priority of the paper settings for printing (priority to the printer driver or to the control panel).

[Settings] ► [Printer Settings] ► [System] ► [Paper In/Out] ► [Tray Setting Priority]

On the printer driver


Check the settings of paper tray and paper type on the printer driver and make sure the settings match the loaded paper.

On the control panel

1. Press [Settings] on the Home screen.




2. Press [Tray/Paper Settings].

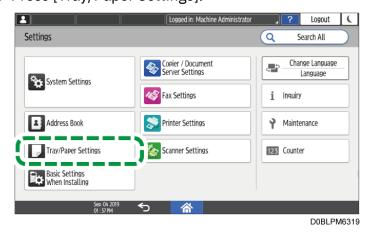

- 3. Press [Paper Size/Paper Type].
- 4. Press one tray to set.


4

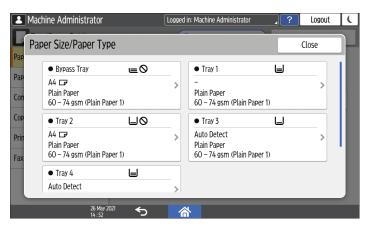

5. Press [Paper Type/Thickness].



6. Choose one paper type and paper thickness from the list shown, and then press [OK].

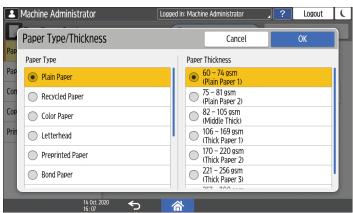

- 7. Press [OK].
- 8. After completing the configuration, press [Home] ().

Address Book

Registering/Changing/Deleting Fax Numbers in the Address Book

By registering the destinations to which you frequently send faxes together with the send conditions in the address book, you can easily send faxes.

Registering a Fax Number and Send Conditions

1. Press [Address Book] on the Home screen.




2. Press [Register] on the Address Book screen.



3. Enter the information of the destination on the [Name] tab, and then select a title to classify it.



- **4.** Press [Destinations] tab ► [Fax].
- 5. Specify the Fax Destinations and send conditions.

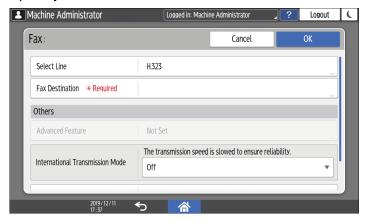

- Select Line: Select the line to use.
- Fax Destination: Register the fax destination.
- International Transmission Mode: Specify whether to reduce errors occurring when sending abroad.
- Fax Header: Select the name of the sender printed on the reception sheet of the destination. Register the fax header in advance.
 - See "Printing the Destination Name, Fax Header, and Standard Message on the Fax Received at the Destination", User Guide (HTML).
- Label Insertion: Specify the name (title + name) and fixed phrase printed on the reception sheet of the destination.
 - See "Printing the Destination Name, Fax Header, and Standard Message on the Fax Received at the Destination", User Guide (HTML).
- Advanced Feature: Register SUB code or SEP code.
- **6.** Press the [User Management / Other] tab as necessary, and specify the settings.
 - User Management: Enter the authentication information to login and use the machine.
 - Add to Group: Select a group to which this destination belongs as necessary. Register the group in advance.
 - See "Registering/Changing/Deleting Groups in the Address Book", User Guide (HTML).
 - Display Priority: When the destinations are sorted in the order of priority, a destination with higher priority is displayed prior to that with lower priority. The destinations with the same priority are displayed in the order of registration.
 - Destination Protection: Select this check box to require entering of the protection code to select the destination.
 - See "Using the Protection Function to Prevent the Misuse of Addresses", User Guide (HTML).

- 7. Press [OK].
- 8. After completing the procedure, press [Home] (1).
- **9.** When a message prompting you to back up the address book appears on the screen, press [Go to Backup] to back up the address book.
 - If a message prompting you to contact the administrator to back up the address book appears on the screen, ask the administrator to back up the address book.
 - If you select [Close], you can close the address book without backing up and go back to the Home screen.

See "Making a Backup or Restoring the Address Book", User Guide (HTML).

Changing/Deleting the Registered Data Such as Fax Number

If you delete the destination used for the personal box, file transmission will fail. Exclude the destination from the personal box before deleting it.

See "Receiving Faxes to Personal Boxes", User Guide (HTML).

1. Press [Address Book] on the Home screen.



2. Select the destination to change or delete on the Address Book screen.



You can delete multiple destinations at one time.

- 3. Press [Edit] or [Delete] to change or delete the destination information.
- **4**. When changing or deleting is complete, press [Home] (1).
- 5. When a message prompting you to back up the address book appears on the screen, press [Go to Backup] to back up the address book.
 - If a message prompting you to contact the administrator to back up the address book appears on the screen, ask the administrator to back up the address book.
 - If you select [Close], you can close the address book without backing up and go back to the Home screen.

1

See "Making a Backup or Restoring the Address Book", User Guide (HTML).

Operating or Configuring the Machine from Computer (Web Image Monitor)

Web Image Monitor is a tool that can check the machine status and configure machine settings from your computer.

If the machine and your computer are ready to connect to the network, you can access Web Image Monitor just by entering the IP address or host name of the machine in the address bar of your web browser.

The settings that can be set by using the control panel can also be set by using the Web Image Monitor, except for some functions.

For example, you can also view documents on the document server by using your computer. As mentioned above, it is recommended that you use Web Image Monitor if you want to operate the machine from your own desk.

Also, downloading of documents on the document server can be performed only by using Web Image Monitor.



Useful functions available by using Web Image Monitor

To check the help of Web Image Monitor, see to the procedure below. page104"Specifying Web Image Monitor Help"

Recommended functions for administrators

Function summary	Procedure and reference		
Registration of the address book You can add login users or destinations to the address book.	See "Registering User Information from Web Image Monitor", User Guide (HTML).		
You can enter characters by using the keyboard of your computer, which is useful for registering a large amount of information.			
You can also import and export the information in a CSV format.			

Function summary	Procedure and reference		
Displaying list/history of print jobs, and canceling print jobs You can check the printing status and print history of the machine from your computer. Also, you can cancel stored print jobs in batches from your computer.	 Job list Displayed by going to		
Managing output quantity You can check and reset the total counter and counters per user from your computer.	See [Status/Information] in Web Image Monitor help ▶ [Counter per User] for details.		
Settings for sending/receiving email You can configure the settings needed for sending emails and sending to folders from your computer.	See [Device Management] in Web Image Monitor help [Configuration] [Device Settings] [Email] for details.		
Settings for receiving faxes You can configure the settings for receiving and rejecting faxes from your computer.	See [Device Management] in Web Image Monitor help [Configuration] [Fax] [Program Special Sender] for details.		
Synchronize with time server You can synchronize with a time server when you want to adjust the clock in the machine.	See [Device Management] in Web Image Monitor help [Configuration] [Device Settings] [Date/Time] [SNTP Server Name] for details.		
Setting the time to enter sleep mode You can configure the time settings for the "Sleep mode" function that automatically turns the display of the control panel off if there is no operation within a specified period of time.	See [Device Management] in Web Image Monitor help [Configuration] [Device Settings] [Timer] [Sleep Mode Timer] for details.		

Function summary	Procedure and reference		
Setting auto email notification You can configure the machine to send emails to notify you about the machine's status, such as when paper has run out or a paper jam has occurred. This is useful when managing multiple printers.	See "Machine Status Notification by E-mail", User Guide (HTML).		
Monitoring, viewing/operating the control panel screen You can monitor the control panel of the machine from your computer. An administrator can check errors, operate the machine as a user, and change settings, to smoothly perform support operations and manage the machine.	 Monitoring control panel screen See [Device Management] in Web Image Monitor help		
Configuring/changing security/network settings You can configure/change the IP address that can access the machine and configure the settings of the DNS server, and so on.	 Security settings See "Access Control", User Guide (HTML). Network settings See "Configuring Network Settings from a Computer Using Web Image Monitor", User Guide (HTML). 		

Recommended functions for user

To use the functions below, users must be registered to the machine and logged in to Web Image Monitor.

Function summary	Procedure and reference		
Document operations on the document server	See "Accessing Documents in Document Server from a Web Browser", User Guide		
You can view, edit, and download documents on the document server.	(HTML).		
Operation of received and stored faxes	See "Viewing/Operating the Stored		
You can view or download received and stored faxes.	Documents from Web Image Monitor", User Guide (HTML).		
The user must be given the privilege to manage stored documents by the administrator beforehand.			
See the procedure below.			

Function summary	Procedure and reference		
See "Restricting the Users Who Can Access the Stored Reception Files", User Guide (HTML).			
Registration of the address book You can add login users or destinations to the address book.	See "Registering User Information from Web Image Monitor", User Guide (HTML).		
You can enter characters by using the keyboard of your computer, which is useful when you register a large amount of information.			

Recommended Web Browser

Windows	macOS		
Firefox 52 or later	Safari 3.0 or later		
Google Chrome version 50 or later	Firefox 52 or later		
Microsoft Edge 79 or later	Google Chrome version 50 or later		

• You can use the screen reader software JAWS 2018.0 or later on Windows 10 and JAWS 2021 or later on Windows 11.

What You Can Do on the Web Image Monitor

Items displayed on the Web Image Monitor and settings depend whether the machine is logged in.

- When not logged in
 - The machine status, settings, and job status are displayed. You can browse the settings of the machine but cannot change them.
- When logged in (as a user)
 - Log in as a user registered in the Address Book. The users can operate the jobs that they executed and change a part of settings of the machine.
- When logged in (as an Administrator)
 - The administrator can change all settings of the machine.

What you can do

Function	Not logged in	User	Administrator
Machine status	✓	~	>
Machine settings	√ *1	√ *1	✓
Machine setting change	-	√ *1	✓
Job list	✓	✓	→
Job history	✓	~	>
Access to Address Book	-	✓	✓
File operation in Document Server	-	✓	✓
Network settings	-	✓ *1	<
Network settings change	-	√ *1	✓
Cancel printing	-	-	✓
Security settings	-	-	~

^{✓:} Available -: Not available

Accessing to Web Image Monitor

1. Enter the IP address of the machine in the address bar of the Web browser.



Example: when the IP address of the machine is "192.168.1.10"


- If SSL is specified https://192.168.1.10/
- If SSL is not specified http://192.168.1.10/

When you do not know whether SSL is specified on the machine, enter the address starting with https. When you fail the connection, enter the address starting with http.

When entering the IPv4 address, do not enter "0" for each segment. If "192.168.001.010" is entered, you cannot access the machine.

^{*1} Depending on the Administrator settings

2. Confirming the machine status or settings on the top page of Web Image Monitor.

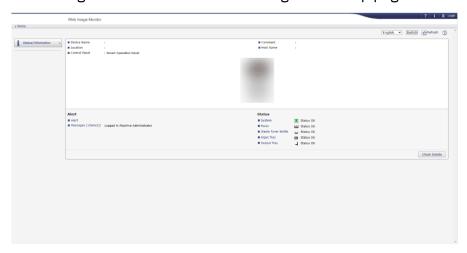


The machine status and remaining amount of consumables are displayed.

You can access Web Image Monitor more quickly by registering the machine's URL as a bookmark. Note that the URL you register must be the URL of the top page, which is the page that appears before login. If you register the URL of a page that appears after login, Web Image Monitor will not open properly from the bookmark.

To change the settings, click [Login] at the top right on the screen and enter the User Name and Password

Web Image Monitor Screen

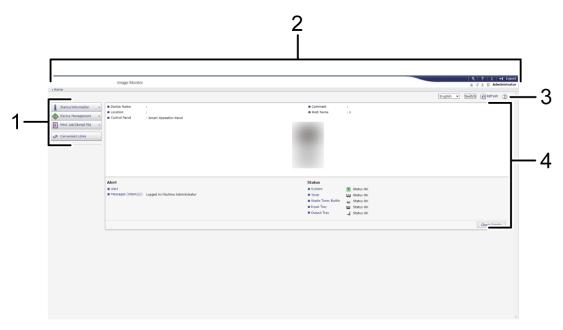

1. Menu

Menu items described below are displayed.

• Status/Information: Displays the machine status, option configuration, counter, and job status.

- Device Management: Manages the machine settings and Address Book.
- Print Job/Stored File: Operates the files stored in the printer driver or document server.
- Convenient Links: Displays the link to the Favorite URL.

2. Header

An icon to link to the Login screen is placed at the top right on the screen. The Help, Version Information, and Keyword Search buttons are also displayed.

3. Refresh/Help

- (Refresh): Update the information in the work area.
- (Help): View or download Help file contents.

4. Main Area

The machine status and settings are displayed.

Specifying Web Image Monitor Help

Web Image Monitor has Help to describe the function of setting items. When you use Help for the first time, you can select to read online Help or to download Help File.

View Online Help Now

You can view the latest Web Image Monitor Help on the Internet.


Download Help File


You can download Web Image Monitor Help to the computer and view it. When you store the downloaded Help file in the Web server and assign to the Help button (?), you can view the Help without connecting to the Internet.

To assign the downloaded Help file to the Help button (), specify the path to the Help file following the procedure below.

1. Log in to Web Image Monitor as a network administrator.

When custom-privileges administrators are registered, you can log in to the machine as a custom-privileges administrator with the Network/Interface privilege as well.

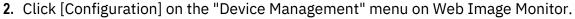

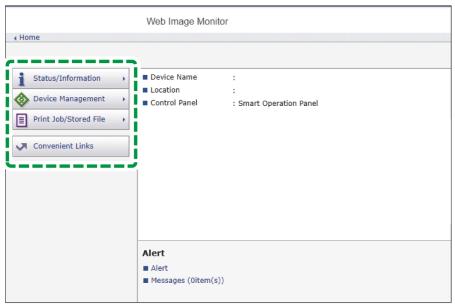

- 3. Click [Webpage] under the "Webpage" category.
- **4.** In "Download Help File", select the operating system and displayed language, and then click [Download].
- 5. Unzip the downloaded zip file and store it in the Web server.
- **6.** Enter the path to the Help file stored in the Web server in "URL" under "Set Help URL Target".

For example, when URL of the Help File is "http://a.b.c.d/HELP/JA/index.html", enter "http://a.b.c.d/HELP/".

- 7. Click [OK].
- 8. After completing the procedure, log out and finish Web Image Monitor.

2. Copy

Basic Copying

Basic Procedure for Copying Documents

Set the original on the exposure glass or auto document feeder (ADF) to make a copy.



- If the previous setting is still active, press [Reset] before copying.
- 1. Press [Copy] on the Home screen.



2. Place the original.

The reference position for placing originals differs depending on the type of ADF you are using.

page69"Placing an Original on the Exposure Glass"

page70"Placing an Original in the Auto Document Feeder (ADF)"

To copy both sides of the paper, to staple, or to punch holes, confirm the orientation of the original according to how you want the printout to appear.

Basic Original Orientation

Place	Orientation		
Exposure Glass	Place the original face down in a readable orientation.	DZB208	
ADF	Place the original face up in a readable orientation.	R P R	

If the Readable Orientation Is Not Vertical

When you copy a portrait original larger than A4 or 8 $^{1}/_{2}$ " × 11" (LT) (A3 or 11" × 17"), place it as shown below, and then specify [Original Orientation].

Place	Orientation		
Exposure Glass	Rotate the original clockwise or counter-clockwise 90 degrees and place it face down.	R DZB210	
ADF	Rotate the original clockwise or counter-clockwise 90 degrees and place it face up.	R DZB211	

When the top position is specified by the staple and punch functions

Place an original as shown below, and then specify [Original Orientation].

Place	Orientation	
Exposure glass	Place the original face down in a readable orientation.	
ADF	Place the original face up in a readable orientation.	R R


3. Press [Original Orientation] on the Copy screen.



If the key is not displayed, select it from [Original Setting/Store File].

When you place the original face up in a readable orientation, this setting is not necessary if [Readable Direction] is displayed on the key. Placing of the original is completed.

4. Specify the Original Orientation.

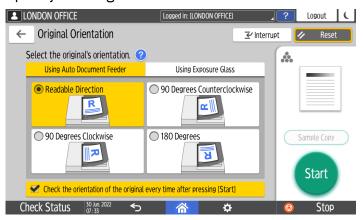

If the display of this screen is not necessary when you press [Start], clear the [Check the orientation of the original every time after pressing [Start]] check box.

Placing of the original is completed.

5. Press [Original Thickness] to specify the original thickness as necessary.



- If the key is not displayed, select it from [Original Setting/Store File].
- If you specify an original thickness, originals will be scanned at the speed and setting suitable for that thickness. This setting can be used only when the Onepass duplex scanning ADF is attached.
- 6. Select the color mode.



7. Press [+] or [-] in [Quantity] to specify the number of copies.



You can enter this using the keyboard after pressing [Quantity] or a number.


8. Press the paper tray select key and select the paper to use as necessary.



- When you select [Auto Paper Select], the paper suitable for the original is selected automatically. When the orientations of the original and paper in the paper tray do not match, the machine rotates the copied image 90 degrees automatically. However, the copied image may not be rotated depending on the settings or types of Finishing, staple or punch, for example.
- If the size of the original is not detected properly or when you make a copy on paper of a special size, specify the paper tray in which the paper to use is loaded.

9. Press [Start].

- The confirmation screen for the original orientation may be displayed depending on the settings. Select the original orientation as necessary. If you do not need to select this each time, clear the [Check the orientation of the original every time after pressing [Start]] check box.
- When you place the original on the ADF, the process of copying the original starts.
- When you place the original on the exposure glass, the copy process starts
 according to the setting contents. To make a copy of the second page or back
 side of the original, place the original accordingly on the exposure glass, and
 then press [Start]. Press [Finish Scn] after scanning all originals if necessary
 according to the setting contents.
- When you place an original on the one-pass duplex scanning ADF and select paper tray manually, if the orientation or size of the original and the selected tray are different, a warning screen may be displayed after you press [Start]. Select or change the setting by following the instructions on the screen.

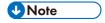


• Originals scanned when no paper is loaded or when an error has occurred will be copied automatically when the machine is ready to execute copying.

Specifying a Custom Size for the Original

To copy a custom size original, specify the horizontal and vertical sizes of the original in numeric values.

1. Measure the vertical (Y) and horizontal (X) lengths of the original.

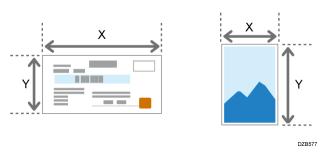

2. Press [Copy] on the Home screen.



3. Place the original.

page107"Basic Procedure for Copying Documents"


For details about the sizes of originals that you can place, see the following section: page 301" Recommended Original Size and Weight"

4. Press [Original Size].



If the key is not displayed, select it from [Original Setting/Store File].

- 5. Press [Custom Size].
- **6.** Enter the values of X and Y that you measured in Step 1, and then proceed to the next screen.

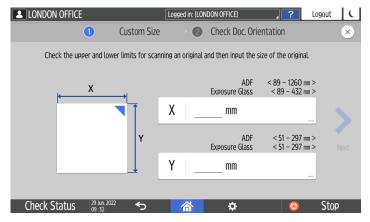

- 7. Check that the orientation of the original is specified correctly, and then press [OK].
- 8. Press the paper tray select key and select the paper to use as necessary.




9. Press [Start].

Reserving a Copy Job While Executing Another Copy Job

When [Reserve] is displayed on the execution screen of the current copy job, you can scan the original of another copy job to execute after the current job is completed (Job Preset).

You can make reservations for up to eight jobs each in the Copier and Document Server functions.


1. Press [Reserve] on the execution screen of a copy job.

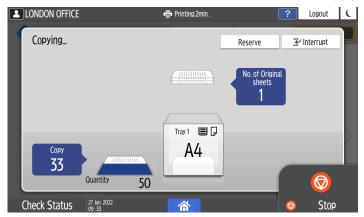

- 2. Place a new original to scan on the machine.
 page107"Basic Procedure for Copying Documents"
- 3. Specify 2 sided, Combine, Sort, and other copy settings if necessary. page118"Duplex Copying" page121"Combining and Copying a Multi-page Original onto a Single Sheet of Paper" page127"Copying in Page Order or for Each Page Number"
- 4. Press [Reserve Start].

The machine starts scanning the placed original.

After the current copy job is completed, the reserved copy job starts automatically.

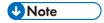


- To cancel the last reserved job or confirm the content of the current job, press [Job Confirmation].
- You can confirm and cancel reserved contents on the [Check Status] screen. For details, see the following section:
 - See "Deleting an Unnecessary Job from the Print Queue", User Guide (HTML).

Interrupting the Current Copy to Copy Another Original

When [Interrupt] is displayed on the copy processing screen, you can pause the current copy to scan and copy another original (Interrupt mode).

1. Press [Interrupt] on the execution screen of a copy job.

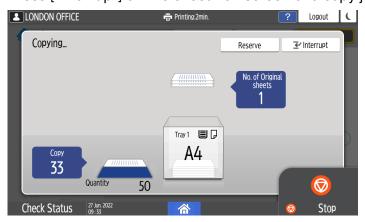

- 2. When the scanning stops, remove the original being copied.
- **3.** Place a new original to scan on the machine. page107"Basic Procedure for Copying Documents"
- 4. Specify 2 sided, Combine, Sort, and other copy settings if necessary. page118"Duplex Copying" page121"Combining and Copying a Multi-page Original onto a Single Sheet of Paper" page127"Copying in Page Order or for Each Page Number"
- 5. Press [Interrupt Start].
- 6. When the Interrupt mode is finished, remove the original and copied paper.
- 7. Press [Cancel Interrupt].
- **8.** If the scanning of the original was interrupted in Step 2, reset the rest of the original onto the machine, and press [Start].

The previous copy job settings are restored. Simply press [Start] to continue copying from where it left off.



- You cannot use the Interrupt mode while scanning a fax original.
- You cannot use the Interrupt mode with the staple mode while copying in the staple mode.
- When the Booklet Finisher SR3330 or Booklet Finisher SR3350 is installed in the machine, you cannot use the Interrupt mode while [Center Folding] is set when copying using [Center Folding].
- When the internal multi-fold unit is installed in the machine, you cannot use the Interrupt mode with the fold mode while copying in the multi-sheet fold mode.

Making Enlarged or Reduced Copies

You can enlarge or reduce the original when copying with the following methods:

- Enlarging or reducing at a specified reduction ratio or into a specified size (Zoom/Reduce/Enlarge/Size Magnification/Directional Magnification (%)/Directional Size Magnification)
- Enlarging or reducing according to the paper size (Auto Reduce/Enlarge)
- Reducing slightly (Create Margin)

Specifying a Copy Ratio or Size

1. Press [Copy] on the Home screen.



2. Place the original.

page107"Basic Procedure for Copying Documents"

The base point of reduce/enlarge is different for the exposure glass and Auto Document Feeder (ADF) as shown in the following table:

Setting position	Base point	Enlarge	Reduce
Exposure glass	Enlarged or reduced from the top left.	DZB224	R DZB225
ADF	Enlarged or reduced from the bottom left		

When you place two-sided originals in the One-pass duplex scanning ADF, the top right corner of the original will be the base point for the enlargement/reduction of

2

the reverse side. To enlarge or reduce from the same point, set the original on the exposure glass and perform 2-sided copy.


3. Press [Copy Ratio] and select a copy ratio or size.



To specify a copy ratio or size other than the displayed setting, press [Others] and perform the following procedure.


Specifying a copy ratio (Zoom/Reduce/Enlarge)

Enter a value or select the copy ratio.

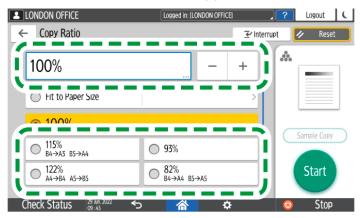


Specifying a size (Size Magnification)

Scroll down the [Copy Ratio] screen to press [Specify Copy Size], and then enter the length of the original and copied image, and then press [OK].

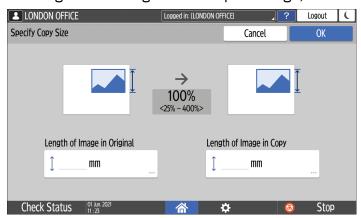


Specify the vertical and horizontal magnification individually (Directional Magnification(%))

Scroll down the [Copy Ratio] screen to press [Directional Magnification(%)], and then enter the vertical and horizontal magnification, and then press [OK]. You can separately enlarge or reduce the vertical length and horizontal length of the image.

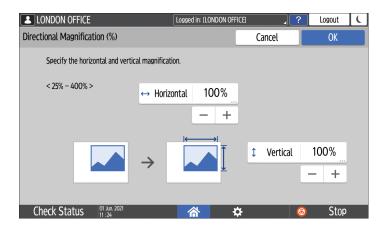

Specify the vertical and horizontal lengths (Directional Size Magnification)


Scroll down the [Copy Ratio] screen to press [Directional Mag.(mm)] or [Directional Mag.(inch)], and then enter the length of the original and copied image, and then press [OK]. You can separately enlarge or reduce the vertical length and horizontal length of the image.

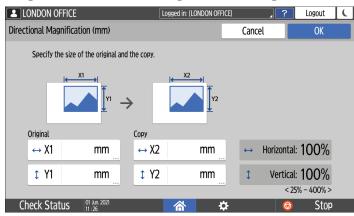

4. Press [Start].



 You can change the options of the copy ratio that is displayed on the Copy screen when pressing [Copy Ratio]. You can also change the enlargement and reduction ratios that appear when [Copy Ratio] (Others) is pressed on the Copy screen.

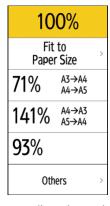

See "Reduce / Enlarge", User Guide (HTML).

2

Enlarging or Reducing According to the Paper Size

The original is enlarged or reduced to fit on the specified paper size (Scale to Paper Size).



To copy a document whose size cannot be detected, specify [Original Size] on the Copy screen.

For the original size detected on the exposure glass or in the ADF automatically, see the following section:

page303"Sizes Detectable with Auto Paper Select"


1. Press [Copy] on the Home screen.



2. Place the original.

page107"Basic Procedure for Copying Documents"

3. On the Copy screen, press [Copy Ratio] and [Fit to Paper Size].

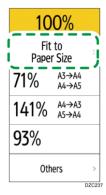

4. Select the tray loaded with the paper to use.



When the orientations of the original and paper in the paper tray do not match, the machine rotates the copied image automatically. To reduce an original of A4 ($8^1/2 \times 11$) size to A5 ($8^1/2 \times 5^1/2$) size, for example, you can select either A5 ($8^1/2 \times 5^1/2$) or A5 ($8^1/2 \times 5^1/2$).



5. Press [Start].

Reducing Slightly to Increase the Margins

The original is reduced to 93% in size and printed in the center of the paper. This setting is useful if you want to copy an original to a paper of the same size without the edges being slightly cropped when copied in full size or to increase the margins.

1. Press [Copy] on the Home screen.



2. Place the original.

page107"Basic Procedure for Copying Documents"


3. On the Copy screen, press [Create Margin].



If the key is not displayed, register [Create Margin], by using [Customize Function: Copy (Standard Mode)] or [Customize Function: Copy (All View Mode)].

See "Customize Function", User Guide (HTML).


4. Press [Start].

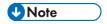

You can change the copy ratio of [Create Margin] to a value other than 93%.
 See "Reduce / Enlarge", User Guide (HTML).

Duplex Copying

You can copy two 1-sided pages or one 2-sided page onto the front and back sides of a single sheet of paper.

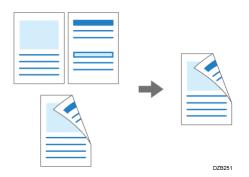

When you scan the original with the ADF, the size of the original that can be copied differs from that of the 1-sided copy.

page301"Recommended Original Size and Weight"

For details about the sizes, orientations, and weights of paper that can be used in the duplex function, see the following section:

page308"Specifications for the Main Unit"

page347"Specifications for One-pass Duplex Scanning ADF"

page348"Specifications for Auto Reverse Document Feeder (ARDF)"

1. Press [Copy] on the Home screen.



2. Press [1 sided \rightarrow 2 sided] or [2 sided \rightarrow 2 sided] on the Copy screen.




Duplex Copying with the Settings Other Than Those Displayed on the Keys

- 1. Press [2 Sided/Combine].
- 2. Press [2 Sided/Combine].



3. Specify the original side and print side settings.

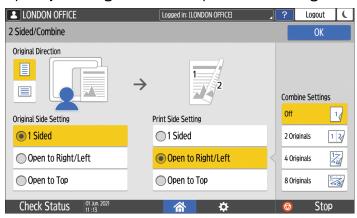


- Original Direction: Specify the orientation to place the originals.
- Original Side Setting: Specify the condition of the originals to copy (1 sided/2 sided (Page Opening Direction)).
- Print Side Setting: Select the finish from [Open to Right/Left] or [Open to Top].
- 4. Press [OK].
- 3. Place the original.

page107"Basic Procedure for Copying Documents"

4. Press [Start].

When placing the originals on the exposure glass, press [Finish Scn] after scanning all of the originals if necessary according to the setting contents and number of originals.

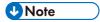

You can specify the margins in [Settings]
 [Edit / Stamp]
 [Margin].

See "Margin", User Guide (HTML).

- You cannot perform Duplex Copy onto the following paper types:
 - Label paper (adhesive labels)
 - Envelopes
 - Thick Paper 4:257–300g/m² (Approx. 140 lb. Index–110 lb. Cover)*1
 - Coated paper
 - *1 Region A (mainly Europe)

When using IM C2010/C2010A/C2510/C2510A, you cannot perform Duplex Copy onto Thick Paper 2-Thick Paper 4.

*1 Region A (mainly Asia) / Region B (mainly North America and Taiwan)

When using IM C2010/C2510/C2519J/GS4020c/GS4025c, you cannot perform Duplex Copy onto Thick Paper 2-Thick Paper 4.

- You can change the setting contents of the two-sided copy key on the Copy screen. See "Customize Function", User Guide (HTML).
- Use the [Series] function to copy the front and back sides of a two-sided original onto one side of a sheet page by page.

See "Copying Facing Pages of a Book Type Original or Two-sided Original", User Guide (HTML).

Combining and Copying a Multi-page Original onto a Single Sheet of Paper

You can copy multiple sheets in an original onto one side or both sides of a sheet of paper to save paper.




The arrangement of copied pages and copy ratio varies depending on the original orientation and combined pages.

Original Orientation	Combine 2 pages	Combine 4 pages	Combine 8 pages
DZB254	1 DZB256	DZB257	OZ8258
DZB255		Q DZB260	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0

1. Press [Copy] on the Home screen.



2. On the Copy screen, press [1 sided→Comb 2 orig].

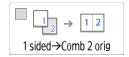


To combine with the settings other than those displayed on the keys

- 1. Press [2 Sided/Combine].
- 2. Press [2 Sided/Combine].



3. Specify about the original side, print side, and combining.

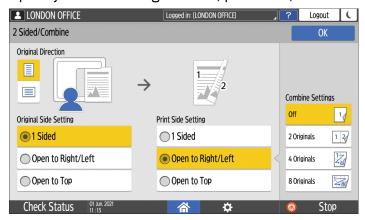

- Original Direction: Specify the orientation to place the originals.
- Original Side Setting: Specify the condition of the originals to copy (1 sided/2 sided (page opening direction)).
- Print Side Setting: Specify the condition of the copied sheet (1 sided/2 sided (page opening direction)).
- Combine Settings: Specify the number of pages to combine on one side of a sheet.
- 4. Press [OK].
- 3. Press the paper tray select key and select the paper to copy onto.




4. Place an original.

page107"Basic Procedure for Copying Documents"


To position the right-page first and then the left page when copying an original written longitudinally, place the original upside down in the ADF.

Example: Combining 2 Pages

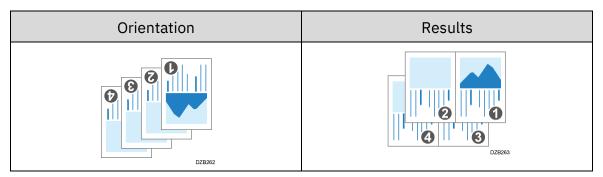

5. Press [Start].

When placing the originals on the exposure glass, press [Finish Scn] after scanning all of the originals if necessary according to the number of originals.

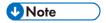

- The minimum copy ratio in the Combine function is 25%. For example, if you copy an A4 (8¹/₂ × 11)-size original onto A5 (5¹/₂ × 8¹/₂)-size paper with [1 sided→Comb 4 orig], the copy ratio becomes less than 25% and parts of the image might not be copied.
- You can configure the following settings in [Settings] ► [Copier / Document Server Settings] ► [2 Sided/Combine] ► [Combine]:
 - [Copy Order in Combine]: The order of combined images
 - [Separation Line in Combine]: The separation line between combined pages See "Combine", User Guide (HTML).
- You can configure the following settings in [Settings] ► [Copier / Document Server Settings] ► [Edit / Stamp] ► [Erase]:
 - [Erase Original Shadow in Combine]: Determine whether to erase the boundary margin around each original to maintain the margin

 See "Erase", User Guide (HTML).
- You can change the setting contents of the Combine key on the Copy screen. See "Customize Function", User Guide (HTML).

Copying onto Envelopes

To copy onto envelopes that are not usually used, set them in the bypass tray.

If you copy onto envelopes frequently, set them in the paper tray.

Copying onto Envelopes in the Bypass Tray

Important


 The Duplex Copy function cannot be used for envelopes. If Duplex Copy is specified, press one of the following keys to cancel the setting.



1. Press [Copy] on the Home screen.



2. Set the envelope in the bypass tray with the copying side face down. page296"Envelope Orientation and Recommended Status"
The "Bypass Tray Paper Settings" screen is displayed.

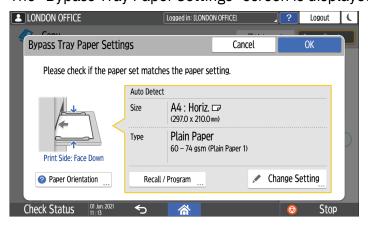


3. Press [Change Setting].

When the paper type is set to [Envelope], the envelope size is detected automatically. If the displayed envelope size is not the same as the actual size, manually select the correct envelope size.

When the paper type is not set to [Envelope], manually select the type and size.

4. Select [Envelope], and then proceed to the next screen.

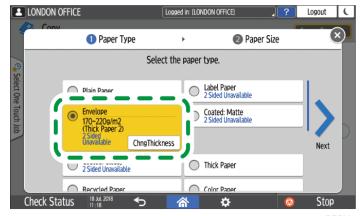


DZC265

To change the envelope weight, press [ChngThickness] to specify the weight.

5. Check that the selected envelope size is correct, and then press [OK].



- If the selected envelope size is not the same as the actual size, select the correct envelope size.
- When you select [Custom Size], enter the envelope size. When the envelope is set with the flap opened, be sure to include the width of the flap.

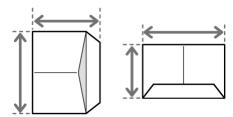

- 6. Press [OK].
- 7. Place the original on the exposure glass.
 page296"Envelope Orientation and Recommended Status"
- 8. Press [Start].

Copying onto Envelopes in the Paper Tray



• The Duplex Copy function cannot be used for envelopes. If Duplex Copy is specified, press one of the following keys to cancel the setting.



1. Set the envelopes in the paper tray.

page 296" Envelope Orientation and Recommended Status"

You can load envelopes into Trays 2-4.

page 285" Recommended Paper Sizes and Types"


2. Press [Copy] on the Home screen.



3. Press the paper tray select key on the Copy screen.



4. Select the paper tray in which the envelopes are set.

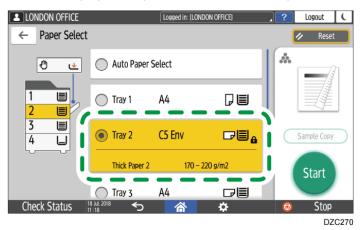

When you change settings for paper type or thickness, see the following section: page 92" Specifying Paper Type and Thickness Settings"

- Place the original on the exposure glass.page296"Envelope Orientation and Recommended Status"
- 6. Press [Start].

Special Copying

Copying in Page Order or for Each Page Number

When copying two or more copies of multi-page originals, you can specify the page order as described below.


Sort

Copies in the order of the original.



Stack

Groups together copies of each page in a multi-page original.

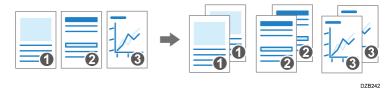

Rotate Sort

Copies in the order of the original and outputs by rotating each copy set. Each copy set is output lengthwise and breadthwise alternately to identify each set.



To specify Rotate Sort, use two paper trays and set the same size and type of paper in the trays in different orientations, vertically (\square) and horizontally (\square) . When the paper cannot be set in vertical (\square) orientation, you cannot specify Rotate Sort.

 The optional equipment such as the internal shift tray or finisher is required to use this function.

page392"Functions Requiring Optional Configurations"

1. Press [Copy] on the Home screen.



2. Place the original.

page107"Basic Procedure for Copying Documents"

3. Press [+] or [-] under [Quantity] on the Copy screen to specify the number of copies.



You can enter this using the keyboard after pressing [Quantity] or a number.


4. Press [Sort/Stack] on the Copy screen.



If the key is not displayed, select it from [Finishing].


If the optional equipment that can stack the copied sheets is not attached to the machine, only [Sort] is displayed on the key.

5. Select the function to specify.

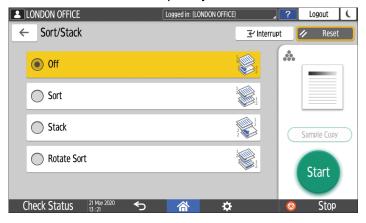

6. Press [Start].

When selecting [Sort] or [Rotate Sort] and placing an original on the exposure glass, a single set of copies is made. After scanning all of the originals, press [Finish Scn] to copy the rest of the sets.

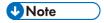

- If you specify sort or stack with the finisher or internal shift tray installed, the output sheets will be shifted by each set.
- You can change the action to perform when paper or memory runs out during sorting under [Rotate Sort: Auto Paper Continue] or [Memory Full Auto Scan Restart].

2

See "Sort", User Guide (HTML).

3. Document Server

Saving Documents

Saving Documents in Document Server

You can save documents scanned by the machine in the document server.

You can also save them using the printer driver.

See "Storing Documents to Print in the Machine", User Guide (HTML).




Documents saved in the document server are deleted after three days (72 hours)
in the factory-default configuration. You can change the period until documents
are deleted or specify not to delete documents automatically in [Auto Delete File
in Document Server].


See "Changing the Storage Period of Document Server or Specifying an Indefinite Period", User Guide (HTML).

1. On the Home screen, press [Document Server].



2. On the document server screen, press [Save Original].

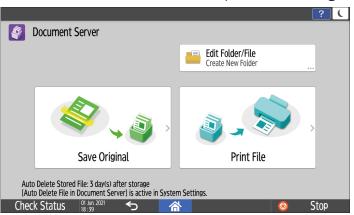

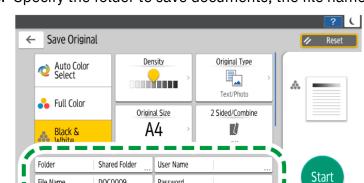

3. Specify the folder to save documents, the file name, and other settings.

• Folder: Select the "Shared Folder" created in the factory default configuration or a user folder created by a user to save the document. To select a user folder, create it in advance. If you select a password-protected folder, enter the password, and then press [OK].

See "Organizing Document Server Using Folders", User Guide (HTML).

- User Name: Specify the user name displayed as the owner of the document. Select a user from the address book or enter the name. Depending on the user authentication settings, [Access Privileges] is displayed. For details about access privileges settings, see the following section:
 - Specifying Access Privileges for Documents Stored in Document Server
- File Name: Specify the name of the scanned document. If you do not specify the file name, a name such as "DOC0001" or "DOC0002" is assigned automatically.
- Password: Specify the password required for printing the document. You can specify a number of 4 to 8 digits as the password.
- 4. Place the original.

Place the original in the same way as in the Copy function. page107"Basic Procedure for Copying Documents"

- 5. Specify the scanning conditions such as original size or color mode.
- 6. Press [Start].
 - When you place the original on the exposure glass, press [Finish Scn] after scanning all originals to save document.
 - When you place an original on the one-pass duplex scanning ADF and select a paper tray manually, if the orientation or size of the original and the selected tray are different, a warning screen may be displayed after you press [Start]. Select or change the setting by following the instructions on the screen.



- When you scan a document whose size is not detected automatically, the scanned document may be saved with a size that differs from the original.
- You can specify whether to allow other users to read or edit the saved document.

3

See "Specifying Access Privileges for Documents Saved in Document Server", User Guide (HTML).

- To prevent documents from being deleted automatically, set [Auto Delete File in Document Server] to [Off], and then save the documents.
- Even if you change the settings to [Specify Days] or [Specify Hours] after documents have been saved with [Auto Delete File in Document Server] set to [Off], the documents will not be deleted automatically. Only the documents saved after a setting change are deleted automatically.

See "Changing the Storage Period of Document Server or Specifying an Indefinite Period", User Guide (HTML).

Printing Documents

Printing Documents in Document Server

You can print the documents saved in the document server with the same settings, paper size, color mode, and other settings specified when the documents were scanned. You can also change the print settings or specify a page to print.



You can also use Web Image Monitor to print a document in the document server.
 See "Accessing Documents in Document Server from a Web Browser", User Guide (HTML).


Printing a Document with the Settings Specified When Scanned



- When printing two or more documents at a time, the print settings specified for the first document are applied to all the remaining documents.
- Some of the selected documents may not be printed due to the difference in the size or resolution.
- 1. On the Home screen, press [Document Server].



2. On the document server screen, press [Print File].

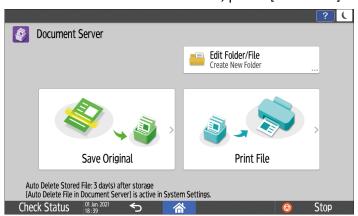


3

3. Select a folder.




- Press [Search Folder] to search for a folder by folder name or number.
- If you select a password-protected folder, enter the password, and then press [OK].
- 4. Select the document to print.

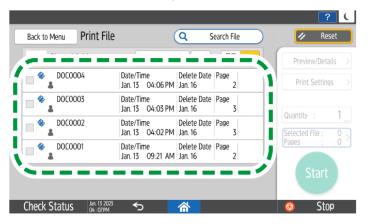

- Press [Search File] to search for a document by document name or user name.
- If the document is password protected, enter the password and press [OK].
- To print two or more copies, press [Quantity], and then enter the quantity using the number keys.
- To print multiple documents at once, select the documents to print in the printing order. You can select up to 30 documents.

• When you select [Printing Order] in the menu to the right of the folder name after selecting multiple documents, the selected documents are displayed in the order they are print.

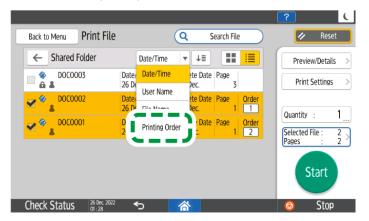

- Press [Selected File:] to display only the documents that you have selected.
- Press to change the type of display to thumbnails or a list.
- 5. Press [Start].



- To stop printing, press the [Stop], and then press [Cancel Printing].
- You can change the number of sets during printing. This function can be used only when the Sort function is selected in the printing conditions. To change the quantity while printing is in progress, press [Stop], enter the quantity, and then press [Resume Printing]. The quantity you can enter differs depending on when you press [Stop].

Printing a Document with Settings Changed




- When you select two or more documents to change the print settings, the first
 document keeps the changed contents after printing. The second document and
 later documents do not keep the changed contents and instead keep the settings
 of when they were saved.
- 1. On the Home screen, press [Document Server].



- 2. On the document server screen, press [Print File].
- 3. Select a folder.



- Press [Search Folder] to search for a folder by folder name or number.
- If you select a password-protected folder, enter the password, and then press [OK].
- **4.** Select the document to print, and then press [Print Settings].
 - Press [Search File] to search for a document by document name or user name.
 - If the document is password protected, enter the password and press [OK].
 - To print two or more copies, press [Quantity], and then enter the quantity using the number keys.
- 5. Change the print settings.

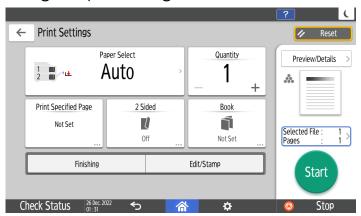

- When specifying Sort/Rotate Sort, you can make a set of prints as a test and print the rest by pressing [Preview/Details]
 [Sample Copy].
- Press to return to the screen for selecting documents.

6. Press [Start].

Specifying a Page to Print


1. On the Home screen, press [Document Server].



- 2. On the document server screen, press [Print File].
- 3. Select a folder.




- Press [Search Folder] to search for a folder by folder name or number.
- If you select a password-protected folder, enter the password, and then press [OK].
- **4.** Select the document to print, and then press [Print Settings].
 - Press [Search File] to search for a document by document name or user name.
 - If the document is password protected, enter the password and press [OK].
 - To print two or more copies, press [Quantity], and then enter the quantity using the number keys.
- 5. Press [Print Specified Page].

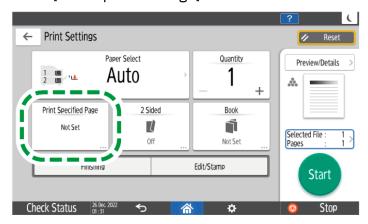

3

- 6. Specify the page to print.
 - Specify Page: Enter the page to print.
 - Specify Range: Enter the page printing starts in "Start Page" and the page printing ends in "End Page".
 - Select Tray: Select a paper tray to use for printing.
- 7. Press [Start].

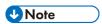

• In Print Specified Page, print settings other than the paper tray are automatically canceled.

4. Fax

Fax Transmission

Basic Procedure for Transmitting Faxes

The machine scans an original to transmit it by fax into the machine's memory before establishing a communication with the destination (Memory Transmission).

You can also transmit a fax while confirming the status of the fax destination.

See "Sending a Fax While Scanning the Original", User Guide (HTML).

You can specify a destination easily by registering the destination in the address book.

page94"Registering/Changing/Deleting Fax Numbers in the Address Book"



- It is recommended that you call the receivers and confirm with them when sending important documents.
- 1. Press [Fax] on the Home screen.



2. Check that [Fax] and [Memory Transmission] are displayed on the fax screen.



Press an item on the fax screen to select [Memory Transmission] if [Immed. Transmission] is selected.


3. Place the original in the ADF or on the exposure glass.

See "Setting an Original to Send by Fax on the Scanner", User Guide (HTML).

- Press [Settings], and then specify the scan settings.
 See "Sending a Fax at the Image Quality Suitable for the Original", User Guide (HTML).
- 5. Specify the destination.




• To enter the fax number manually, select the destination from the destination history, or search for the destination in the machine address book and registered LDAP server, press , and specify the destination. You can also enter the fax number manually by pressing.

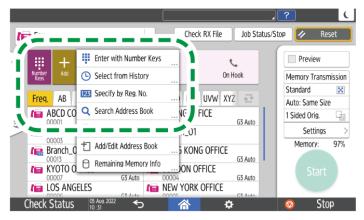


You can select only the destination entered using the numeric keypad from the history.

• To specify the destination again, press **②**.

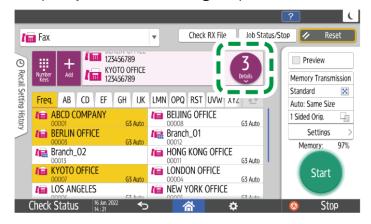

• If you want to change the registered contents of the specified destination or register a new destination, press and then select [Add/Edit Address Book] to change or newly register the destination on the address book screen. page94"Registering/Changing/Deleting Fax Numbers in the Address Book"

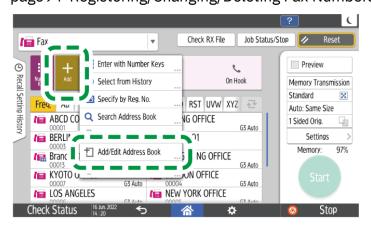

When you select [Add/Edit Address Book], the settings you have made will be reset. Close the address book screen, and then specify the destination again on the fax screen.


- 6. On the [Settings] screen, specify [Sender] as necessary.
 - You can select a sender from the users for which the [Use as Sender] check box was selected when they were being registered to the address book.
 - See "Registering/Changing/Deleting E-mail Addresses in the Address Book", User Guide (HTML).
 - When a login user is operating the machine, the login user becomes the sender.
 - To receive a transmission result by e-mail, select [Notification of Result].
 - To print the sender's name on the page received at the destination, select [Stamp Sender Name].
- 7. Press [Start].

After scanning the originals, you can check and operate the originals waiting to be sent that are stored in the memory until the transmission is complete.

See "Confirming and Handling a Document in the Fax Queue", User Guide (HTML).

Press [Job Status/Stop] [Transmission Result] to confirm if the fax document was sent correctly.

page147"Confirming the Transmission Result on the Fax Screen"

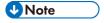

• If the telephone line you are connected to requires time to connect to the public line after you dial the external number, enter a [Pause] after entering the number to specify the time to wait before dialing the number. The machine pauses for about two seconds for each single [Pause] entered.

- To use tone-dialing in a pulse-dialing environment, press [Tone]. A tone signal is generated for every number you enter afterward.
- You can perform immediate transmission only when the total number of destinations specified for all documents exceeds the maximum value.
- The communication that has been initiated first is displayed on the screen when performing three simultaneous communications.
- When searching for a destination in the machine address book and registered LDAP server, if the search takes too long, you can press [Cancel] to stop the search. Also, if there are too many search results to find the desired destination, you can change the search character string and search again by pressing the character input field on the search result display screen.

4

Fax Transmission (Application)

Confirming the Scanned Image Before Sending a Fax

You can display the preview of the scanned document on the display of the machine to check if it is scanned as specified.

This function cannot be used when sending a fax while using any of the following:

- Immediate Transmission
- · On-hook dialing
- · Manual dialing


See "Speaking with a Person at the Destination Before Sending a Fax (Manual Dialing)", User Guide (HTML).

To display the preview in the correct orientation, specify [Original Orientation] in [Settings] correctly.

1. Press [Fax] on the Home screen.




- 2. Place the original in the Auto Document Feeder (ADF) or on the exposure glass. See "Setting an Original to Send by Fax on the Scanner", User Guide (HTML).
- 3. On the fax screen, press [Settings] ► [Original Orientation] to specify the orientation of the original, and then press [Preview].

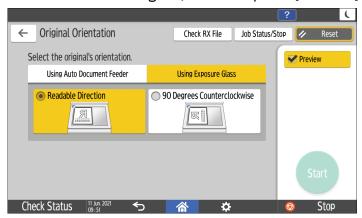

4. Configure the scan settings.

See "Sending a Fax at the Image Quality Suitable for the Original", User Guide (HTML).

- **5**. Specify the destination on the fax screen, and then press [Start].
- **6.** Check the preview.

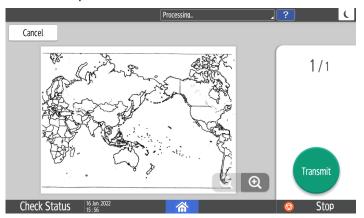

- Flick the image left or right to switch between the pages.
- Pinch in or out on the image to zoom in or out.
- 7. Press [Transmit].

To cancel transmission and perform the procedure from scanning the original again, press [Cancel].

Confirmation of the Transmission Information

Viewing the Transmission Result of Sent Faxes

You can check the result of a fax transmission on the fax screen, in various reports, or on the screen of a computer.

The following reports are printed according to the transmission result or the settings:

- Communication Result Report: The result of Memory Transmission is printed.
- Immediate TX Result Report: The result of Immediate Transmission is printed.
- Communication Failure Report: This report is printed when a fax could not be sent to all specified destinations by Memory Transmission.
- Error Report: This report is printed when sending a fax by Immediate Transmission failed.
- Memory Storage Report: This report is printed when the document to send by Memory Transmission is stored in the memory.



- The fax transmission results can also be confirmed in Records.
 See "Viewing the History of Sent and Received Faxes", User Guide (HTML).
- Specify [Notification of Results] when sending a fax to receive the transmission result by e-mail.


page150"Checking by E-mail"

Confirming the Transmission Result on the Fax Screen

1. Press [Fax] on the Home screen.



2. Press [Job Status/Stop] on the fax screen.

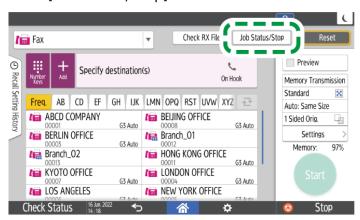

3. Press [Transmission Result], and select the transmission result to display.



Display All

Displays the transmission results from among the total number of both transmission and reception results, which cannot exceed 1,000.

Display per User

Press this to display the result of transmissions performed by a specific user. Select the user to display the results and press [Display].


· Display Specified Period

Press this to display the result of transmissions performed in the specified period. Specify the period by entering the start and end dates or selecting from the calendar displayed on the screen, and press [Display].

- 4. Check the transmission results and press [Exit].
 - "--LAN-Fax -->" is shown as the result of transmission to the machine when you send a fax from your computer. For the result of transmission to the destination, refer to the transmission result of the same document number.
 - The destination may be displayed as "*" depending on the security settings.
 - In a field for an e-mail that was encrypted and distributed or forwarded, the encryption icon (a) is displayed.

4

• To display the result of the transmission that is completed while displaying the transmission results, close the transmission result screen and open it again.

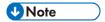

• You cannot confirm or change an outgoing document in LAN-Fax, document waiting, or document whose status is "Trnsmtg.".

Checking the Result in Communication Result Report


When [Print] is selected in "Communication Result" under [Fax Settings] [Others] [Report Output Settings] [Report Auto Print Settings], the report is printed every time you send a document by Memory Transmission.

See "Others (Fax Settings)", User Guide (HTML).

Checking the Result in Immediate TX Result Report

When [Print] is selected in "Immediate Transmission Result" under [Fax Settings]
[Others]
[Report Output Settings]
[Report Auto Print Settings], the report is printed every time you send a document by Immediate Transmission.

See "Others (Fax Settings)", User Guide (HTML).

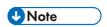

• If the page was sent successfully, the Page column gives the total number of pages sent successfully.

Checking the Result in Communication Failure Report

When [Do not Print] is selected in "Communication Result" under [Fax Settings] [Others] [Report Output Settings] [Report Auto Print Settings], this report is printed if the fax could not be sent to all specified destinations by Memory Transmission. See "Others (Fax Settings)", User Guide (HTML).

Checking the Result in Error Report

This report is printed in the following cases:

- When [Do not Print] is selected in "Immediate Transmission Result" under [Fax Settings] ▶ [Others] ▶ [Report Output Settings] ▶ [Report Auto Print Settings] and an error has occurred during Immediate Transmission.
- When an error has occurred while receiving a document or an e-mail.
 An error report is not printed if the error occurs while receiving an SEP code.

See "Others (Fax Settings)", User Guide (HTML).

Viewing Memory Storage Report

This report is printed when [Print] is selected in "Memory Storage Report" under [Fax Settings] ▶ [Others] ▶ [Report Output Settings] ▶ [Report Auto Print Settings] and a document to be sent by Memory Transmission is stored in the memory.


See "Others (Fax Settings)", User Guide (HTML).



- Even if the machine is set up not to print this report, it is still printed if an original could not be stored.
- It is not printed when you are using Parallel Memory Transmission.

Checking by E-mail

You can check the fax transmission result on your computer by sending an e-mail to the sender or the e-mail address specified when sending the fax. The image of the original sent by fax, along with the destination, date and time, and transmission result is included in the e-mail.

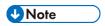

- To view the report without text disruption, select a font of even character width in your e-mail application's settings.
- 1. Press [Fax] on the Home screen.



- 2. Place the original in the Auto Document Feeder (ADF) or on the exposure glass. See "Setting an Original to Send by Fax on the Scanner", User Guide (HTML).
- 3. To send a notification e-mail to the sender, press [Settings] [Sender], and then specify the sender.
 - You can select a sender from the users for which the [Use as Sender] check box was selected when they were being registered to the address book.
 - See "Registering/Changing/Deleting E-mail Addresses in the Address Book", User Guide (HTML).
 - When a login user is operating the machine, the login user becomes the sender.



4. Select the [Notification of Result] check box, and then press [OK].

5. To send a notification e-mail to a destination other than the sender, press [Notification of Result] on the [Settings] screen, and then specify the destination of the e-mail.



6. Configure the scan settings.

Check Status 28 Jun. 2022

See "Sending a Fax at the Image Quality Suitable for the Original", User Guide (HTML).

7. After configuring the send settings, specify the destination on the fax screen, and send the fax.

page141"Basic Procedure for Transmitting Faxes"

See "Basic Procedure for Sending Internet Faxes", User Guide (HTML).

See "Basic Procedure for Sending IP-Faxes", User Guide (HTML).



 The file type for notification of e-mail transmission results can be selected from [TIFF], [PDF], or [PDF/A] in [Fax Settings] ▶ [Detailed Initial Settings] ▶ [Email Transmission Results Settings] ▶ [File Format of Transmission Results Email].

Confirming the Transmission Result in Web Image Monitor

In Web Image Monitor, you can view up to 200 of the latest total results of the transmission and reception history.

1. Log in to Web Image Monitor as the machine administrator.

When administrators with custom privileges are registered, an administrator with privileges to operate jobs can also log in to the machine and change settings.

See "Logging in to Web Image Monitor", User Guide (HTML).

- 2. From the "Status/Information" menu, click [Job].
- 3. Click [Transmission] under [Fax History].
- 4. Confirm the transmission history.
 - Click , the Details icon to view the details.
 - To save the history as a list to a file in the CSV format, click [Download Transmission List].
- 5. Click [Logout] and then close the Web browser.

5. Printer

Basic Printing

Basic Procedure for Printing Documents

Specify the printer driver and configure the Document Size, Paper Type, and other settings to print a document.

To print a document on the computer, you must install the printer driver on the computer.

Selecting the Printer Driver Installation Method

Important

- Duplex printing is selected as the default setting. If you want to print on only one side, select [Off] for the two-sided printing setting.
- If you send a print job via USB while the machine is in Sleep mode, an error message may appear after the print job is completed. In this case, check whether the document was printed.
- If you set [On] for [Prohibit Printing PS/PDF], you cannot print a data that is PS/PDF format.


See "Data Management/Maintenance", User Guide (HTML).

Printing a Document in Windows


1. Open a document to print on the computer, and display the setting screen of the printer driver from the print menu in the application.

The procedure to display a document varies depending on the applications.

For example in Microsoft Word/Excel, click [Print] on the [File] menu, select the device to use, and then click [Printer Properties].

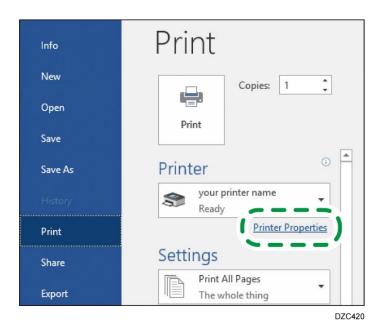

2. Specify the Document Size, Paper Type, Input Tray, and other settings. You can configure the basic settings just by using the [Basic] tab.

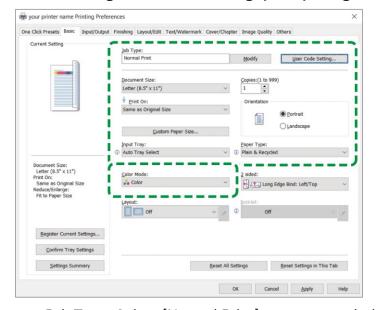

• Job Type: Select [Normal Print] to execute printing immediately.

You can make a partial print as a test and proceed to print the rest of the document (Sample Print).

See "Making a Partial Print as a Test and Printing the Rest of the Document", User Guide (HTML).

You can store documents in the machine (Locked Print, Hold Print, or Stored Print).

See "Storing Documents to Print in the Machine", User Guide (HTML).

- Document Size: Select the size of the document to print.
- Print On: Select the size of the paper to print on.

- · Copies: Enter the print quantity.
- Orientation: Specify the orientation of the document. Select Portrait or Landscape.
- Input Tray: Select the tray loaded with the paper to use. When you select [Auto Tray Select], a suitable paper tray is selected automatically according to the specified [Print On] and [Paper Type].
 - If you do not want to use particular trays when [Auto Tray Select] is specified, set the machine so it does not automatically select those trays.
 - To prevent the machine from selecting other trays automatically, disable auto tray switching.


See "Tray/Paper Settings", User Guide (HTML).

- Paper Type: Select the type of paper to use.
- Color Mode: Select the print color.

You can print in universal color by using the following settings:

• [Image Quality] tab F [Barrier-free Color Management:] F [On]


You can configure some advanced settings using the [Input/Output] to [Image Quality] tabs.

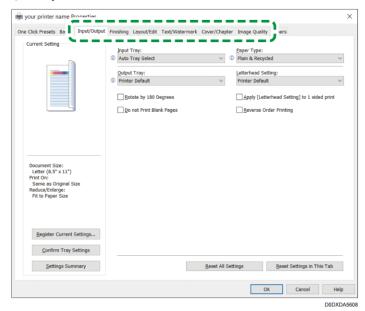

The caution icon (1) indicates that there are disabled items. Click the icon to check the cause.

To set each function in details, click the detail settings button (🗷).

3. After completing the configuration, click [OK] to print.

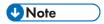


• On the [Devices and Printers] screen, right-click the printer icon of the machine, and then click [Printing preferences] to change the default values of the printer settings.

- When "Staple" or "Punch" is disabled on the setting screen, check that the option configuration of the machine is specified correctly.
 - Specifying the Option Configuration or Paper Settings Manually
- When you use the driver distributed from the print server, [Standard settings] specified in the print server are displayed as the default.


Printing a Document in macOS


In the following example procedure, macOS 12.2 is used. The procedure may vary for different versions.

- 1. Open a document to print on the computer, and click [Print] on the [File] menu.
- 2. Select the printer you use from [Printer:].
- 3. Specify Paper Size, Orientation, and other settings.

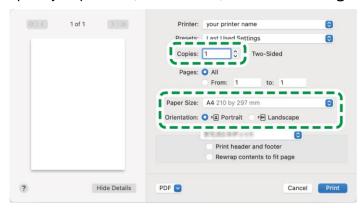

- Copies: Enter the print quantity.
- Paper Size: Select the size of the document to print.
- Orientation: Specify the orientation of the document. Select [Portrait] or [Landscape].

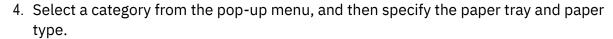

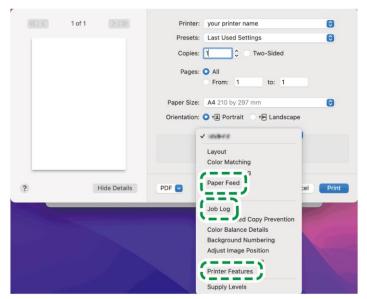

Paper Feed

• All Pages From: Select the tray loaded with the paper to use. When you select [Auto Select], a suitable paper tray is selected automatically according to the specified paper size and paper type.

When the paper of the specified size is not loaded on the machine, printing is performed following the settings of the machine.

Job Log

- Job Type: Select [Normal Print] to execute printing immediately.
- You can make a partial print as a test and proceed to print the rest of the document (Sample Print).
- See "Making a Partial Print as a Test and Printing the Rest of the Document ", User Guide (HTML).
- You can store documents in the machine (Locked Print, Hold Print, or Stored Print).
- See "Storing Documents to Print in the Machine", User Guide (HTML).

Printer Features

Select a category in "Feature Sets", and then specify the setting items.

- Basic
- Color Mode: Select the print color.
- Paper
- Paper Type: Select the type of paper to use.

5. After completing the configuration, click [Print] to print.

Printing on Both Sides of Paper

Specify 2-sided Print in the printer driver.

Specifying 2-sided Print (Windows)

Specify 2-sided Print on the [Basic] tab.

- 1. Open a document to print on the computer, and display the setting screen of the printer driver from the print menu in the application.
- 2. Specify Document Size, Paper Type, Orientation and others. page153"Basic Procedure for Printing Documents"
- 3. In [2 sided:] on the [Basic] tab, specify the binding side of and way to open the paper.

Orientation of the original and opening type

Orientation	Long Edge Bind: Left/Top	Short Edge Bind: Top/Left
Portrait		
Landscape		

4. After completing the configuration, click [OK] to print.


Specifying 2-sided Print (macOS)

Specify 2-sided Print on the [Layout] menu.

- 1. Open a document to print on the computer, and display the setting screen of the printer driver from the print menu in the application.
- 2. Specify Paper Size, Orientation, Paper Type, and other settings. page153"Basic Procedure for Printing Documents"

3. Select the [Two-Sided] check box, and then select [Layout] to specify the binding side and opening type of the paper.

Orientation of the original and opening type

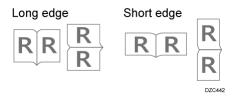

4. After completing the configuration, click [Print] to print.

Combining and Printing Multiple Pages on a Single Sheet of Paper

You can print multiple pages on a single sheet at a reduced size (Combine 2 Originals).

For example, you can reduce an original of A4 size to A5 size and print two pages on an A4 sheet. You can use the 2 Sided Print and Combine 2 Originals functions at the same time to economize on paper.

You can print up to 16 pages on a single sheet and specify the order to arrange the pages on the sheet.



Specifying the Combine 2 Originals Function (Windows)

Specify the Combine 2 Originals function on the [Basic] tab.

- 1. Open a document to print on the computer, and display the setting screen of the printer driver from the print menu in the application.
- 2. Specify Document Size, Paper Type, Orientation and other settings. page153"Basic Procedure for Printing Documents"
- 3. In [Layout:] on the [Basic] tab, specify the number of pages to combine. Click the detail settings button of [Layout:] to do the following settings:
 - Page Order: Select the order of the pages.
 - Draw Frame Border: Select the check box to draw a line between pages.

4. After completing the configuration, click [OK] to print.

When printing from an application that supports the same function as the machine, do not set the function in the application. If the setting in the application is enabled, the print result may not be as intended.

Specifying the Combine 2 Originals Function (macOS)

Specify the Combine 2 Originals function on the [Layout] menu.

- 1. Open a document to print on the computer, and display the setting screen of the printer driver from the print menu in the application.
- 2. Specify Paper Size, Orientation, Paper Type, and other settings. page153"Basic Procedure for Printing Documents"
- 3. Select [Layout], and then specify the number of pages to combine and the order of the pages.

Configure the following settings:

- Pages per Sheet: Select the number of pages to combine.
- Layout Direction: Select the order of the pages.
- Border: Select a type of border line to draw between the pages.
- **4**. After completing the configuration, click [Print] to print.

Printing on Envelopes


Load envelopes in the bypass tray or paper tray.

Load envelopes in the machine and change the Tray Paper Settings in the Control Panel.

Printing on Envelopes Loaded on the Bypass Tray

1. Load an envelope in the Bypass Tray.

Types and orientations of envelopes	Bypass Tray
Side-opening envelopes□	
	Flap: open
	Bottom side of the envelope: left
	Printing surface: lower side

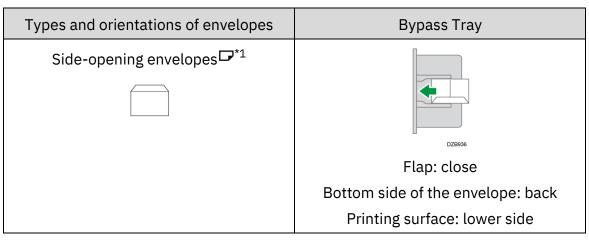

^{*1}To print in landscape orientation, specify [Rotate by 180 Degrees] in step 11.


2. On the Home screen, press [Settings].




3. On the Settings screen, press [Tray/Paper Settings].



- 4. Press [Paper Size/Paper Type].
- 5. Press [Bypass Tray] [Paper Size: Printer], and then select the size of the envelopes.

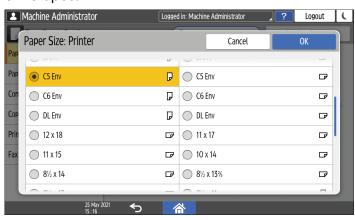


- If the size of the loaded envelope is not included in the list, select [Custom] and enter the value.
- 6. Press [OK].
- 7. Press [Paper Type/Thickness], and then select [Envelope] from "Paper Type". Also, select the thickness of the loaded envelopes from "Paper Thickness".

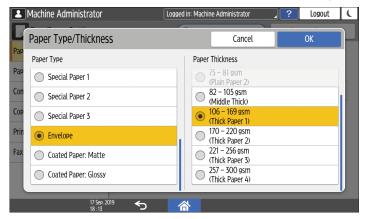

- 8. Press [OK] twice.
- **9.** After completing the configuration, press [Home] ().
- **10.** Open a document to print in the computer, and display the setting screen of the printer driver from the print menu application.
- 11. Specify the paper size and paper type.

Windows

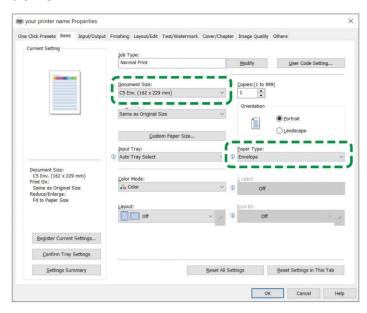


- Document Size: Select the envelope size. If the envelope size is not included among the options, enter the value in [Custom Paper Size...].
- Paper Type: [Envelope]

You can specify a custom paper size, which is commonly used as the option of the Document Sizes.

See "Printing on Custom-sized Paper Loaded on the Bypass Tray", User Guide (HTML).

To print in landscape orientation, select the [Rotate by 180 Degrees] check box on the [Input/Output] tab, and then print.

macOS

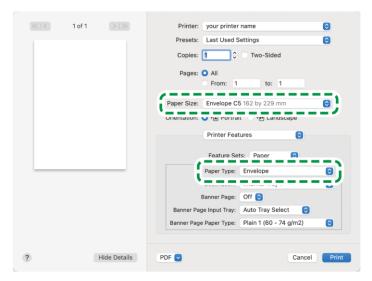


- Paper Size: Select the envelope size. If the envelope size is not included among the options, select [Manage Custom Sizes] and enter the value.
- Paper Type: Envelope


To print in landscape orientation, select [On] for [Rotate by 180 degrees] in [Basic] in "Feature Sets".

12. Execute printing.

Printing on Envelopes Loaded in the Paper Tray

1. Load an envelope in the Paper Tray.

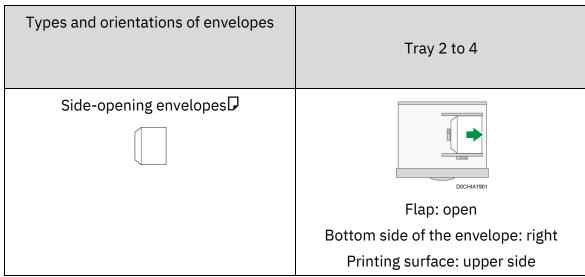

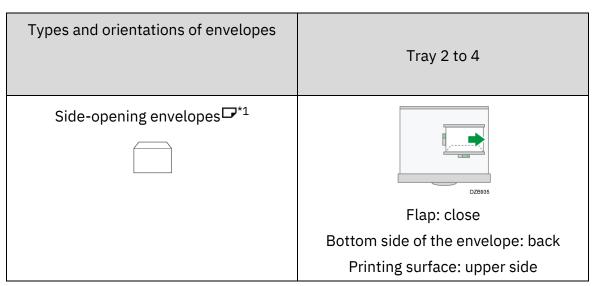

^{*1}To print in landscape orientation, specify [Rotate by 180 Degrees] in step 11.


2. On the Home screen, press [Settings].




3. On the Settings screen, press [Tray/Paper Settings].



- **4.** Press [Paper Size/Paper Type], and then select the tray in which the envelopes are loaded.
- 5. Press [Paper Size], and select the size of the envelopes.

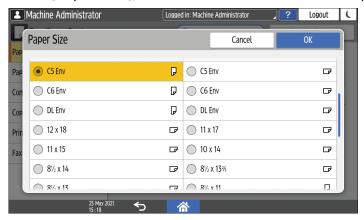


- If the size of the loaded envelope is not included in the list, select [Custom] and enter the value.
- 6. Press [OK].
- 7. Press [Paper Type/Thickness], and then select [Envelope] from "Paper Type". Also, select the thickness of the loaded envelopes from "Paper Thickness".

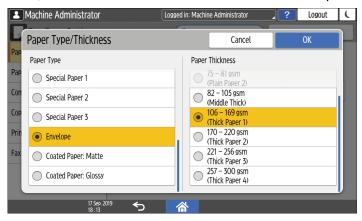

- 8. Press [OK] twice.
- 9. After completing the configuration, press [Home] (1).
- **10**. Open a document to print in the computer, and display the setting screen of the printer driver from the print menu application.
- 11. Specify the paper size and paper type.

Windows

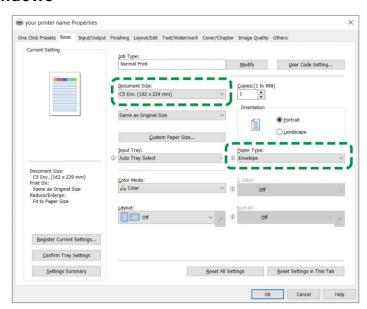


- Document Size: Select the envelope size. If the envelope size is not included among the options, enter the value in [Custom Paper Size...].
- Paper Type: [Envelope]

You can specify a custom paper size, which is commonly used as the option of the Document Sizes.

See "Printing on Custom-sized Paper Loaded on the Bypass Tray", User Guide (HTML).

To print in landscape orientation, select the [Rotate by 180 Degrees] check box on the [Input/Output] tab, and then print.

macOS

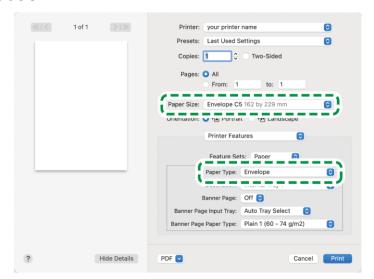

- Paper Size: Select the envelope size. If the envelope size is not included among the options, select [Manage Custom Sizes] and enter the value.
- Paper Type: Envelope

To print in landscape orientation, select [On] for [Rotate by 180 degrees] in [Basic] in "Feature Sets".

12. Execute printing.

Storing and Printing Documents


Printing Documents Stored in the Printer from the Control Panel

To print a document stored from the printer driver in the machine, perform the print operation on Quick Print Release of the control panel. The file administrator also can delete unneeded documents and unlock documents locked by entering an invalid password.

1. On the Home screen, press [Quick Print Release].



- 2. On the Quick Print Release screen, select the user ID used to store the document. Enter the password when the Locked Print documents or the Stored Print documents protected by passwords are stored. The screen shows the documents corresponding to the entered password and the documents without passwords.
- 3. Select a document to print.

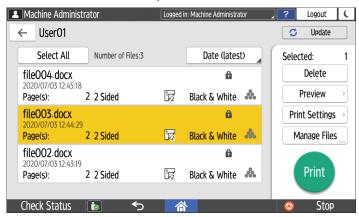

- Preview: The first page of the document is displayed. If you select multiple documents, the preview cannot be displayed. Preview cannot be displayed if the document was encrypted while storing it in the printer driver.
- Print Settings: Change the print settings for the selected document.
 The following stored files cannot be changed: files automatically stored by [Store and Skip Errored Job] or [Restrict Direct Print Jobs], files encrypted by the printer driver, and files for which unauthorized copy prevention or Background Numbering has been specified.
 - See "Print Settings Configured on the Control Panel", User Guide (HTML).
- Manage Files: Change the print time of a Hold Print job or the password specified on the document. If you select multiple documents or encrypt the document to store in the printer driver, the item is disabled.

5

5

See "Encrypting the Document when Storing It", User Guide (HTML).

4. Press [Print] twice.

Printing from a Storage Media

Printing from a USB Flash Memory Device Directly

You can connect a memory storage device to the media slot of the machine and print the files stored on it. Use this to print external data easily.



• Keep SD cards and USB flash memory devices out of reach of children. If a child accidentally swallows an SD card or USB flash memory device, consult a doctor immediately.



- USB flash memory device is supported for direct printing. However, certain types of USB flash memory device cannot be used.
- The machine cannot print a document over 1 GB.
- You can select up to 100 files within 1 GB total.
- If the print job of PDF file is canceled, execute printing from a PDF viewer such as Acrobat Reader while using the printer driver.
- Characters will not be printed correctly if the document contains fonts that cannot be used on the machine.

You can print the installed font list of the machine from [PDL Information] in [Settings] ► [Printer Settings] ► [List/Test Print].


List/Test Print

Printable File Formats

File format	Details	
JPEG files	Exif version 1.0 or later	
TIFF files	Uncompressed TIFF files TIFF files compressed using the MH, MR, or MMR method	
PDF files	PDF version 1.7 (Acrobat 8.0 compatible) or earlier*1	
XPS files	Possible for all XPS files	

^{*1} The machine does not support the following functions: Crypt Filter, DeviceN Color Space (more than eight components), watermark note, optional contents (version 1.6), AcroForm

5

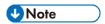


• The PDF file of a custom size may not be printed.

Printing from a Memory Storage Device or Scan Application

1. On the Home screen, press [Print/Scan (Memory Storage Device)]



2. Insert a memory storage device in the media slot on the side of the control panel.

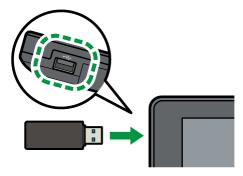


3. On the Print/Scan (Memory Storage Device) screen, press [Print from Storage Device]




4. Select the file to print.

Files in the external media are displayed as icons or thumbnail images.

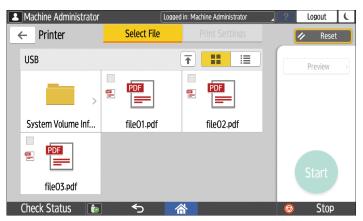

5. Press [Print Settings] to specify the settings of 2-Sided Print or Finishing as necessary.

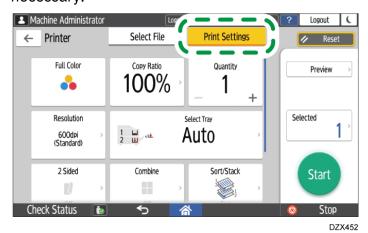

- Full Color: Select whether to print in color. The machine may print a document that appears to be black-and-white in color printing mode. To print a document in full black-and-white, select [Black and White].
- Copy Ratio: Select whether to print in the original size or to reduce or enlarge to match the paper size.
- · Quantity: Enter the print quantity.
- Resolution: Select the resolution of the image to print.
- Select Paper Tray: Select the paper tray.
- 2 Sided: Select the opening direction of the printed sheet.
- Combine: Select whether to combine multiple pages into a sheet.
- Sort/Stack: Select whether to print in ordered sets or in a batch page by page.
- Book: Select the opening direction of the Magazine binding. You can specify the setting of Magazine binding only when printing a file in the PDF/XPS format.
- Staple: Select the staple position.
- Punch: Select the punch position.
- Fold: Select the type of fold or printing side.
- **6.** Press [Start] to start printing.

6. Scan

Basic Scanning

Scanning Documents and Sending the Scanned Data by E-mail

Scan a document and attach the scanned data to an e-mail and send it from the machine.


- Configure the SMTP server and network settings in advance.
 See "Configuring the Settings to Send E-mails from the Machine", User Guide (HTML).
- Register an e-mail address in the address book to select the address as the destination easily when sending an e-mail.
 - See "Registering/Changing/Deleting E-mail Addresses in the Address Book", User Guide (HTML).



- This machine supports SMTPS (SMTP over SSL).
- · This machine supports Web mail sending.
- To use Message Disposition Notification, log in to the machine as a user and specify the sender. Note, however, that the [Reception Notice] notification e-mail may not be transmitted if the e-mail software of the recipient does not support Message Disposition Notification.
- If you press [Preview] and then start scanning, the Preview screen appears. You can
 use this screen to check how the originals are scanned and the scan setting used for
 scanning. After checking the preview, you can specify whether to send the file or not.
 See "Displaying a Preview Before Sending the Scanned Document", User Guide
 (HTML).
- After an e-mail is sent, the destination, sender, subject, text, and file name fields will be automatically cleared. If you want to preserve the information in these fields, contact your local dealer.
- 1. Press [Scanner] on the Home screen.



2. Select [Scan to Email] on the scanner screen.

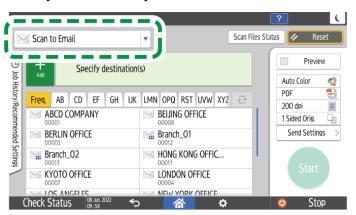

3. Place the original on the scanner.

See "Placing an Original to Scan", User Guide (HTML).


4. Press [Send Settings] on the scanner screen.



- 5. Press [Sender] and specify the sender.
 - When a logged in user is operating the machine, the logged in user becomes the sender.
 - When [On] is specified in [System Settings] [Send (Email/Folder)] [Email]
 [Auto Specify Sender Name], you can send an e-mail even when the sender is not specified. The administrator's e-mail address that is registered on the machine is used as the sender.
 - Specify the sender to receive an opening confirmation.
- **6.** Select the [Reception Notice] check box to receive an opening confirmation of the email from the destination.



7. Specify the destination on the scanner screen.

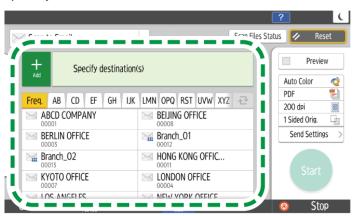

• To enter the e-mail address manually, select the destination from the destination history, or search for the destination in the machine address book and registered LDAP server, press , and specify the destination.



- When specifying an e-mail address by entering it manually, you can register the e-mail address in the address book before sending the e-mail.
 - 1. Press , and then select [Enter Using Keyboard].
 - 2. Enter the e-mail address, and press 3.
 - 3. Specify the e-mail address that was entered manually and press [Reg. to Add. Book].



- 4. Enter the name and other additional information.
- When specifying an e-mail address by entering it manually, you can register the e-mail address in the address book before sending the e-mail.
 - 1. Press , and then select [Select from History].
 - 2. Press [Register] for the destination to register.
 - 3. Register the name and other additional information.
- Press ② to specify the destination again or select [To], [Cc] or [Bcc].




• If you want to change the registered contents of the specified destination or register a new destination, press and then select [Add/Edit Address Book] to change or newly register a destination on the address book screen.

See "Registering/Changing/Deleting E-mail Addresses in the Address Book", User Guide (HTML).



When you select [Add/Edit Address Book], the settings you made will be reset. Close the address book screen, and then specify the destination again on the scanner screen.

- 8. Specify the scan settings according to the purpose of the scanned data. page188"Scanning an Original with Suitable Quality and Density" page192"Specifying the File Type or File Name When Scanning a Document"
- 9. Press [Start].

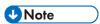

- You can specify multiple destinations.
- If the target destination does not appear, display the destination by selecting its initial letter from the title.
- Depending on the security setting, some destinations may not appear in the destination list.
- When the specified destination is updated using the Central Management function, the spooled documents are sent to the destination after updating.


 When searching for a destination in the machine address book and registered LDAP server, if the search takes too long, you can press [Cancel] to stop the search. Also, if there are too many search results to find the desired destination, you can change the search character string and search again by pressing the character input field on the search result display screen.

Scanning Documents and Sending the Scanned Data to a Folder

To send the data of a scanned original to a shared folder on a computer, create the shared folder on the computer in advance and register the destination folder in the address book.

- You also need to configure the settings for connecting to the network from the machine.
 - See "Connecting to a Wired LAN", User Guide (HTML).
 - See "Connecting to a Wireless LAN", User Guide (HTML).
- You can add a folder destination in the address book easily using Scan to Folder Helper.

See "Specifying the Destination of Send to Folder Using the Scan to Folder Helper App", User Guide (HTML).

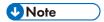


- Using the SMB 3.0 protocol, you can save a file to a folder, in the fileserver or in a shared folder, that has been encrypted separately.
- The scanned file can be also saved to an FTP server.
 See "Registering the Destination Folder to Use for Send to Folder", User Guide (HTML).
- You can set the authentication level for sending folders in Web Image Monitor. When
 the authentication level is set to Kerberos authentication, you can send folders only
 to computers in domains of computers whose names have fewer characters than 15
 single-byte characters.

Confirming the Computer Information (Windows)

Confirm the name, IP address, and other information of the computer used to create a shared folder, and write down the information on the check list.

- Print the check sheet.
 See "Printing the Check Sheet", User Guide (HTML).
- 2. Click [Start] on the computer and click [Windows System] ► [Command Prompt]. When using Windows 11, click [Start] ► [All apps] ► [Windows Tools], and then double-click [Command Prompt].

- 3. Enter "ipconfig/all" and press the [Enter] key.
- 4. Check the host name, enable/disable status of the DHCP server and IP address, and write down the information in [1] on the check sheet.

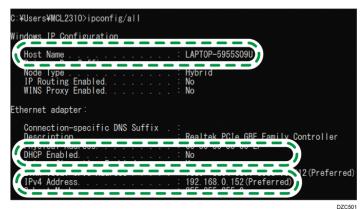


When the screen shown above is displayed, fill in the sheet as follow:

	Host Name	LAPTOP-5955S09U
[1]	DHCP Enabled	No
	IPv4 Address	192.168.0.152

5. Enter "set user" and press the [Enter] key.

Enter a space between "set" and "user".

6. Check the domain name, workgroup name and login user name, and write down the information in [2] on the check sheet.

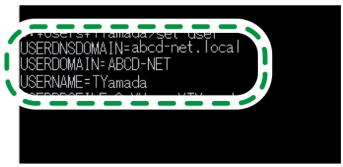

CKX007


When the screen shown above is displayed, fill in the sheet as follow:

D	Domain name/workgroup name	USERDNSDOMAIN [abcd-net.local]	
[2]		USERDOMAIN [ABCD-NET]	
	Computer login user name	TYamada	
		D7C524	

"USERDNSDOMAIN" is not displayed when the login user who executed the command is a local user.

7. Check the login password on the computer, and write down the information in [3] on the check sheet.

The required information on the computer is confirmed. Now create a shared folder on your computer and specify the access permissions of the folder.

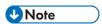


 Depending on the operating system or security settings, it might be possible to specify a user name that does not have a password assigned. However, we recommend that for greater security you select a user name that has a password.

Creating a Shared Folder (Windows)


Create a shared folder on the Windows Desktop and specify the access permissions of the folder.

- 1. Log on to Windows as a user with administrative privileges.
- 2. Create a new folder and write down the folder name in [4] on the check sheet.
- 3. Right-click the created folder, and then click [Properties].
- 4. On the [Sharing] tab, click [Advanced Sharing].

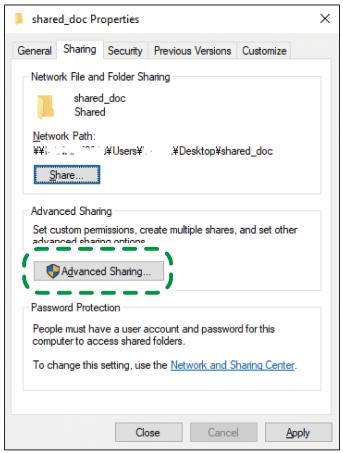

DZC318


- 5. Select the [Share this folder] check box, and then click [Permissions].
 - After completing the procedure, remove Everyone (unspecified user), and then add a user allowed access the folder. The user whose information is written down on the check sheet is used in the example shown below.
- 6. Select [Everyone] under [Group or user names], and then click [Remove].
- 7. Click [Add] ► [Advanced] ► [Object Types].
- 8. Select [Users], and then click [OK].

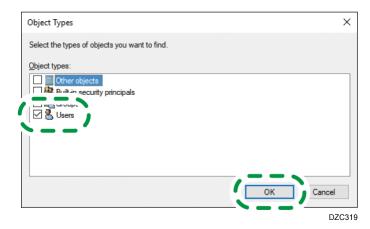

- **9.** Click [Locations], select the name of the domain or work group the user belongs to ([2] on the check sheet) and then click [OK].
- 10. Click [Find Now].
- 11. From the Search results, select the login user name of the computer to be added ([2] on the check sheet) and then click [OK].

When you cannot find a specific user, click [Columns], or right-click the [Search results] field, select [Choose columns], and then add [Logon Name] or [Logon Name (pre-Windows 2000)] from the [Columns available] list.

- 12. Click [OK].
- **13.** Select the added user, and then select the [Allow] check box of [Change] under [Permissions].

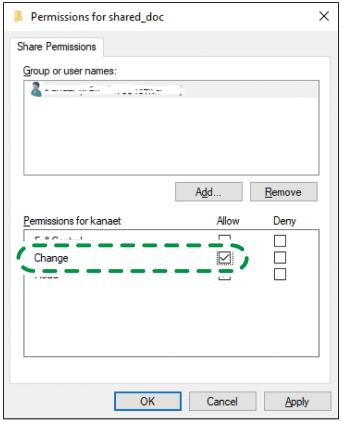


DZC320

- 14. Click [OK].
- **15**. Click [OK] ▶ [Close].

The access permissions on the folder have been successfully configured. If you want to specify access permissions for the folder to allow other users or groups to access the folder, configure the folder as follows:

6

- 1. Right-click the created folder and then click [Properties].
- 2. Click [Edit...] on the [Security] tab.
- 3. Click [Add] ► [Advanced].
- 4. Select [Object Types] or [Locations] and click [Find Now].
- 5. Select the user or group to assign permissions and click [OK].
- 6. Click [OK].
- 7. Select the added user, and then select the [Allow] check box of [Modify] under [Permissions].
- 8. Click [OK] to close all windows.

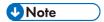


- If you are creating a shared folder for the first time on this computer, you must enable the file sharing function. For details, see Windows Help.
- To register a shared folder in the machine's address book, you need the computer's IP address or host name, and the user name and password of a user who has access permissions for the shared folder.

Confirming the Computer Information (macOS)

Confirm the name of the computer used to create the shared folder, login user name and other settings and write down the information on the check list.

- 1. Print the check sheet.
 - See "Printing the Check Sheet", User Guide (HTML).
- 2. Log on to macOS as a user with administrative privileges.
- 3. Click the Apple menu.
- 4. Click [About This Mac].
- 5. Click [System Report].
- 6. Click [Software] on the left pane and write down the displayed computer name in [1] and the user name in [2] on the check sheet.

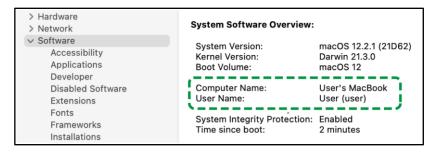

When the screen shown above is displayed, fill in the sheet as follow:

[1]	Host Name	User's MacBook
[2]	Computer login user name	User

6

- 7. Click the Apple menu and select [System Preferences].
- 8. In [Network], click an Ethernet connection name or [Wi-Fi] and write down the displayed IP address in [1] on the check sheet.

The required information on the computer is configured. Now create a shared folder.



• Depending on the operating system or security settings, you might be able to specify a user name that does not have a password assigned. However, we recommend that you select a user name that has a password.


Creating a Shared Folder (macOS)

Create a shared folder and specify the access permissions of the folder.

- 1. Create a new folder and write down the folder name in [4] on the check sheet.
- 2. Click the Apple menu and select [System Preferences].
- 3. Click [Sharing], select the [File Sharing] check box and then click [Options].



4. Select the check boxes of [Share files and folders using SMB] and the user account to use for file sharing and then click [Done].

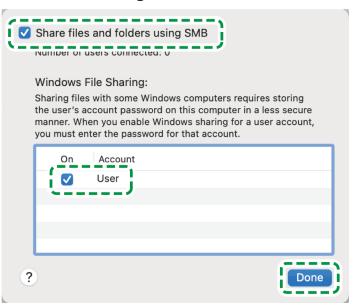

When the [Authenticate] screen is displayed, enter the password of the selected account and then click [OK].

5. Click [+] below [Shared Folders] on the [Sharing] screen.



- 6. Specify the folder created in Step 1 and click [Add].
- 7. Select the folder added in Step 6 and confirm that the permission of the user to access the folder is set to "Read & Write".





 To register a shared folder in the machine's address book, you need the computer's IP address, and the user name and password of a user who has access permissions for the shared folder.


Registering the Created Shared Folder in the Address Book

This section describes the procedure for registering a shared folder created in Windows using the information on the check sheet as an example.

1. Press [Address Book] on the Home screen.



2. Press [Register] on the address book screen.

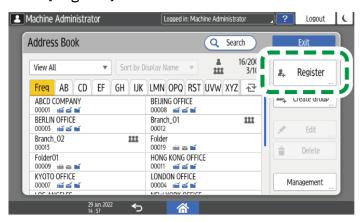

3. Enter the information of the destination in the input boxes displayed on the [Name] tab, and select the title to classify the destination.



- 4. Press the [Destinations] tab, and then press [Folder].
- 5. Select [SMB (Send to Shared Folder on PC)] in [Protocol].
- **6.** Under [Folder Authentication Info], select [Specify Other Authentication Information] and then enter the name and password of the login user who will access the shared folder.
- 7. Specify the network path to the shared folder in "Path".

Entering the path name manually

If the host name is "YamadaPC" ([1] on the check sheet) and the shared folder name is "shared_doc" ([4]), enter as follows:

\\YamadaPC\shared doc


When you cannot connect to the computer using the host name, enter the IP address ([1] on the check sheet) and the shared folder name ([4] on the check sheet) as follows:

\\192.168.0.152\shared_doc

Selecting a folder from the list

Enter the IP address or host name of the computer on which to search for a shared folder, press [Browse Network], and then select the destination folder. Depending on the connection destination, you may need to enter the login user name and password.


- 8. Press [Connection Test] ► [Exit].
 - When no connection is established, check the message that appears.
 page256"When a Message Appears While Using the Scanner Function"
 - Press [Cancel] to abort the connection test, such as when you make a mistake specifying Path.
- 9. Press [OK] twice.
- 10. If necessary, press the [User Management / Other] tab and specify the settings.

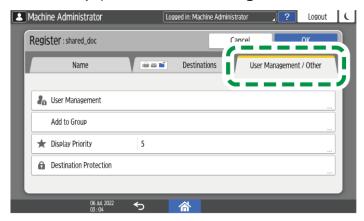

- 11. Press [OK].
- **12.** Press [Home] (after specifying the settings.
- 13. When a message prompting you to back up the address book appears on the screen, press [Go to Backup] to back up the address book.

If you select [Close], you can close the address book without backing up and go back to the Home screen.

See "Making a Backup or Restoring the Address Book", User Guide (HTML).

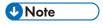

- The connection test may take time.
- Even if the connection test was successful, the machine may fail to transfer the file if you do not have write privileges for the shared folder or there is not enough space in the internal storage.
- When the specified destination is updated using the Central Management function, the spooled documents are sent to the destination after updating.

Basic Procedure for Performing Send to Folder

1. Press [Scanner] on the Home screen.



2. Select [To Folder] on the scanner screen.



3. Place the original on the scanner.

See "Placing an Original to Scan", User Guide (HTML).

4. Press [Send Settings] and configure the scan settings according to the purpose of the scanned data.




page188"Scanning an Original with Suitable Quality and Density"
page192"Specifying the File Type or File Name When Scanning a Document"

5. Press , select [Search Address Book] or [Specify by Reg. No.] and then specify the shared folder that is registered in the address book.



• To enter the information manually, press , and select [Manual Entry]. Select SMB as the protocol and enter the required information. Press [Connection Test] to test the connection. Press [Cancel] to abort the connection test, such as when you make a mistake specifying Path.

- To specify the destination again, press <a>3.
- You can also select the destination using the address book displayed on the scanner screen.
- 6. Press [Start].

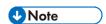

- If any of the machine's security functions are enabled, select the destination from the registered folder only when you send files by Scan to Folder.
- If the firewall of an antivirus program is active, you may not be able to specify a shared folder on the computer as a folder destination. If this is the case, see the antivirus program's Help.
- If Windows firewall is active and you cannot specify a shared folder on the computer as a folder destination, the machine may be able to communicate with the computer by changing the exceptions of the Windows firewall. For details, see Windows Help.
- After scan files are sent, the destination and file name fields will be automatically cleared. If you want to preserve the information in these fields, contact your local dealer.
- When the specified destination is updated using the Central Management function, the spooled documents are sent to the destination after updating.

Scanning an Original with Suitable Quality and Density

Specify the quality and density to scan on the [Send Settings] screen.

1. Press [Scanner] on the Home screen.



- 2. Place the original on the scanner.
 - See "Placing an Original to Scan", User Guide (HTML).
- 3. Press [Send Settings] on the scanner screen and specify the original type (quality), density and resolution.

When specifying the original type




Original Type	Appropriate for
Black & White: Text	A document mainly composed of text in black and white. The original is scanned in two tones of black and white.

Original Type	Appropriate for
	Dropout Color
	The machine scans the original while erasing the specified color (Chromatic Color, Red, Green, Blue). To specify a color to erase more precisely, move toward [Narrow] in the color range to erase.
Black & White: Text / Photo	A document with text and photos in black and white. The original is scanned in two tones of black and white.
Black & White: Text / Line Art	A document with text and figures in black and white. The original is scanned in two tones of black and white.
Black & White: Photo	A document with figures and photos in black and white. The original is scanned in two tones of black and white.
Gray Scale	A document with figures and photos in black and white. The original is scanned as an image comprising many shades of gray.
Full Color: Text / Photo	A document mainly comprising text in color.
Full Color: Glossy Photo	An original in color such as silver-halide prints or pictures.
Auto Color Select	The machine determines whether the original is color or black-and-white and scans it. It may not be determined correctly depending on the scan settings and original content.
	Small color originals, such as name cards, might be detected as black and white originals. We recommend selecting [Full Color: Text / Photo] or [Full Color: Glossy Photo] when scanning small color originals.

- You can select only [Gray Scale], [Full Color: Text / Photo], or [Full Color: Glossy Photo] when [High Comp. PDF] as the [File Type].
 page192"Specifying the File Type or File Name When Scanning a Document"
- If you select the original type not compatible with the file format specified in [File Type], a message suggesting you to change the file type or original type is displayed. In this case, select a file type or original type from those suggested in the message.

When adjusting the density

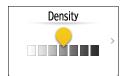

- Move to the left or right to adjust the density. The colors in the scanned image darken as you move the slider to the right.
- Press [Density], and then select the [Auto Density] check box to adjust the density automatically when scanning an original with a non-white background such as newspaper or a document that has show-through.
- You can specify the shading level in [Scanner Settings]
 [Color/Density]
 [Background Density of ADS (Full Color)].

When specifying the resolution



- Select the resolution to use for scanning the original. Image quality improves as the resolution increases, but the size of the scanned data also increases.
- To ensure the quality of scanned data, [100 dpi] cannot be selected in the following cases:
- [High Comp. PDF] is specified in [File Type]
- page192"Specifying the File Type or File Name When Scanning a Document"
 - [PDF] is selected in [File Type] and OCR setting is specified
 - See "Scanning an Original as a PDF File with Embedded Text Data", User Guide (HTML).
- **4.** To send the scanned document to an e-mail address, press [Sender] and then specify the sender.


When a logged in user is operating the machine, the logged in user becomes the sender.

page173"Scanning Documents and Sending the Scanned Data by E-mail"

5. Specify the destination on the scanner screen, and press [Start].



• You can also specify the quality and resolution from the scanner screen. Press items on the screen to specify them.

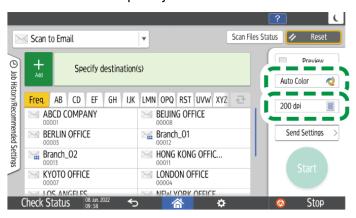

Settings for E-mail and Scan Data

Specifying the File Type or File Name When Scanning a Document

Specify the settings in [Send Settings] on the scanner screen.

1. Press [Scanner] on the Home screen.



2. Place the original on the scanner.


See "Placing an Original to Scan", User Guide (HTML).

3. Press [Send Settings] on the scanner screen.



4. Press [File Type], and select the file type to save the scanned document.

Press [Others] to display the detailed settings screen.

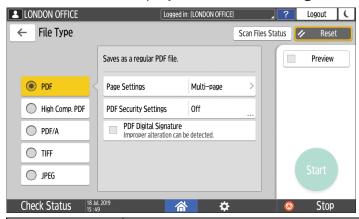


File Type	Description
PDF	Creates a standard PDF file.
High Comp. PDF	You can reduce the data size without affecting text legibility.
PDF/A	This is an international standard suitable for long-term data storage.
TIFF	This image file format is suitable for black-and-white text and lines.
JPEG	This image file format is suitable for photos and images with subtle gradations.

You can select from the following file types:

- Single Page: PDF, High Compression PDF, PDF/A, TIFF, JPEG
 If you select a single-page file type when scanning multiple originals, one file is created for each single page and the number of files sent is the same as the number of pages scanned.
- Multi-page: PDF, High Compression PDF, PDF/A, TIFF
 If you select a multi-page file type when scan multiple originals, scanned pages are combined and sent as a single file.
- Selectable file types differ depending on the scan settings and other conditions. For details about file types, see page194"Notes about and limitations of file types".
- 5. To specify the file name, press [File Name] and enter the file name.

If you do not set a file name, then a file name consisting of the scanned date (including seconds and milliseconds) is assigned.

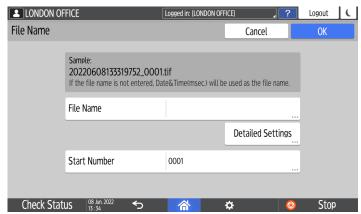

You can specify the file name with a combination of any strings, host name, login ID, and other various items by pressing [Detailed Settings].



- **6.** Specify the scan settings according to the purpose of the scanned data. page188"Scanning an Original with Suitable Quality and Density"
- 7. To send the scanned document to an e-mail address, press [Sender] and then specify the sender.

When a logged in user is operating the machine, the logged in user becomes the sender.

6

page173"Scanning Documents and Sending the Scanned Data by E-mail"

8. Specify the destination on the scanner screen, and press [Start].




 You can also embed the security and digital signature settings, and text information in the PDF file.

See "Scanning an Original as a PDF with Security Settings Specified", User Guide (HTML).

See "Scanning an Original as a PDF File with Embedded Text Data", User Guide (HTML).

- You can change the number of digits in [Scanner Settings]
 [Sending Settings]
 [File Name]
 [Number of Digits for Single Page Files].
- The version of the created PDF files is 1.4/1.5.
- You can also select File Type from the scanner screen. Press an item on the screen to select it.

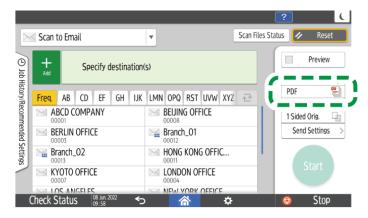

Notes about and limitations of file types

Depending on the file format you select, the following limitations will apply:

TIFF

If you select TIFF as the file format, the data is not compressed and thus results in larger files.

High Compression PDF

You cannot select [High Comp. PDF] in the following cases:

- When "Available Functions" of "Scanner Function" is set to [Black & White Only] in [System Settings]
 [Settings for Administrator]
 [Function Restriction]
 [Restrict Functions of Each Application].
- If [System Settings] ► [Settings for Administrator] ► [File Management] ► [PDF File Type: PDF/A Fixed] is set to [On].

- High Compression PDF is not compatible with Adobe Acrobat Reader 5.0/Adobe Reader 6.0 or earlier versions.
- When [High Comp. PDF] is selected as the file type for scanning, areas of uneven density may appear in the scan file. If this happens, change the PDF File setting to [PDF/A] or [PDF].

7. Maintenance

Replacement and Replenishment of Consumables

Replacing the Toner

You can view the procedure to replace the toner by watching a movie that is displayed on the control panel.

See "Contact Information", User Guide (HTML).

Important


- Replace the toner after the message prompting replacement is displayed on the control panel.
- The machine may become damaged if you use toner of a different type.
- Do not turn off the power of the machine when replacing the toner. If you turn
 off the power when replenishing the toner, the specified settings are canceled,
 and printing will not resume afterwards.
- Store the toner in a dry environment away from direct sunlight and generally under the temperature below 35°C.
- Keep the toner horizontal when storing it.
- After removing the print cartridge from the machine, do not shake it while its opening is facing downward. The remaining toner may spill out.
- After removing the print cartridge, do not touch the interior of the machine.
- Do not pull out and put back the print cartridge repeatedly. The remaining toner may leak.
- Follow the procedure displayed on the screen to replenish the toner.



Press [Check Status] and then press [Check] under [Machine Status] tab.

D0C9PA8225

- 2. Press the play (key.
- 3. Replace the toner by following the procedure shown in the video.

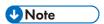

- You can transmit data in the fax or scanner function even after the toner runs out.
 However, you cannot transmit a fax when the number of times of reception and
 transmission performed in the fax function after the toner has run out and the
 number of times of communication not recorded in the Records exceeds a total of
 1,000. Replace the toner earlier.
- While the message prompting you to replace the toner is displayed, Memory Storage Report for Memory Transmission will not be printed.
- If 🛓 appears when there is a lot of toner, hold the cartridge with the opening upward, shake it well, and then reinstall it.

Precautions When Storing Toner

MARNING

• Do not store toner (new or used) or toner containers while toner is inside in a place with an open flame. The toner can ignite and result in burns or fire.

CAUTION

- Do not leave the following items in a place where children can reach them:
 - Toner (new or used)
 - Toner containers while toner is inside
 - Toner-attached parts

7

Precautions When Replacing the Toner

MARNING

- Do not dispose of the following items into a fire. Toner will ignite on contact with naked flame and burns can result.
 - Toner (new or used)
 - Toner containers while toner is inside
 - Toner-attached parts
- Do not absorb spilled toner (including used toner) using a vacuum cleaner.
 Absorbed toner may cause ignition or explosion due to electric contact sparks inside the vacuum cleaner. However, you can use a toner-compatible industrial vacuum cleaner. When toner is spilled, remove the spilled toner using a wet cloth so that the toner is not scattered.
- The following explains the warning messages on the plastic bag used in this product's packaging:
 - Do not leave the polythene materials (bags, etc.) supplied with this machine close to babies and small children. Suffocation can result if polythene materials are brought into contact with the mouth or nose.

ACAUTION

- When the following occurs while toner is handled, receive emergency measures first, and then consult a doctor if necessary.
 - When inhaling toner, gargle with a large amount of water and move into a fresh air environment.
 - When swallowing toner, dilute gastric contents with a large amount of water.
 - When getting toner into your eyes, flush them with a large amount of water.
- When removing jammed paper, replenishing or replacing toner (new or used), make sure not to inhale toner.
- When removing jammed paper, replenishing or replacing toner (new or used), be careful not to have toner dirt your skin or clothes.

- If toner (new or used) comes into contact with your skin or clothes and smears them, take the following actions:
 - If toner comes into contact with your skin, wash the affected area thoroughly with soap and water.
 - If toner comes into contact with your clothes, wash the stained area with cold water. Heating the stained area by applying hot water will set the toner into the fabric and removing the stain may become impossible.
- When replacing a container with toner (including used toner) or consumables with toner, be careful that the toner does not splatter. After removing used consumables and shutting the lid of the container if the lid is available, put them in a bag.
- Do not open toner containers forcibly while toner is inside, crush or squeeze them. Toner spillage can cause accidental ingestion or dirtying of clothes, hands, or floor.

Disposing Exhausted Toners

You cannot reuse exhausted toners.

When disposing a depleted print cartridge, place the cartridge in a box or plastic bag while paying attention not to spill any toner powder.

Region A (mainly Europe and Asia)

If you want to discard your used toner container, please contact your local sales office. If you discard it by yourself, treat it as general plastic waste material.

Region B (mainly North America)

Please see our local company website for information on the recycling of supply products, or you can recycle items according to the requirements of your local municipalities or private recyclers.


Replenishing the Staples

Contact your consumable supplier and prepare new staples for replenishment when the Staples are almost out. message is displayed. Replace the staples after the message prompting replacement is displayed on the control panel.

ACAUTION

• When operating the machine, do not put your hand inside the booklet finisher tray of the finisher's staple unit. You may trap your fingers in the machine's gap and injury can result.



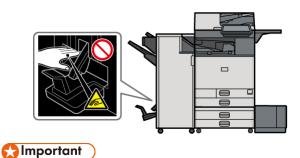

• Stapling failures or jams may occur if you use a staple cartridge other than that recommended.

Confirming the supplier of consumables


Press [Machine Information] on the [Check Status] screen to display the telephone number for ordering consumables.

See "Contact Information", User Guide (HTML).

Replenishing the staples

Replenish the staples while watching the video displayed on the screen for the procedure.


1. Press [Watch Video].

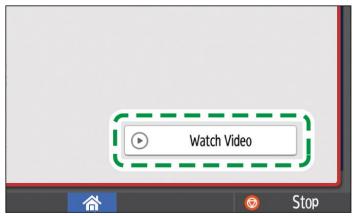

D0C9PA8225

Press [Check Status] and then press [Check] under [Machine Status] tab.

- 2. Press the play (key.
- 3. Replenish the staples while watching the video.

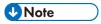

• If you cannot raise the upper unit by holding on both ends of the cartridge, there are staples still remaining inside. Continue using the machine without replenishing the staples.

Replacing the Waste Toner Bottle


The waste toner bottle needs to be replaced soon when the Waste Toner Bottle is almost full. message is displayed. Prepare a replacement waste toner bottle.

See "Contact Information", User Guide (HTML).

See the video displayed on the control panel of the machine for the procedure to replace the waste toner bottle.



- For safe and correct use, please be sure to read Safety Information before replacing the machine's supplies.
- · You cannot reuse the waste toner bottle.
- To prevent the toner being spilled on the floor, table, or other object from the removed waste toner bottle, cover these objects with sheets of newspaper.
- 1. Press [Watch Video].

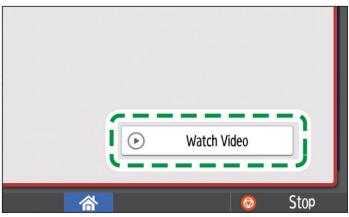

D0C9PA8225

Press [Check Status] and then press [Check] under [Machine Status] tab.

- 2. Press the play (key.
- 3. Replace the waste toner bottle by following the procedure shown in the video.

Precautions When Replacing the Waste Toner Bottle

MARNING

• Do not store toner (new or used) or toner containers while toner is inside in a place with an open flame. The toner can ignite and result in burns or fire.

- Do not dispose of the following items into a fire. Toner will ignite on contact with naked flame and burns can result.
 - Toner (new or used)
 - Toner containers while toner is inside
 - Toner-attached parts
- Do not absorb spilled toner (including used toner) using a vacuum cleaner.
 Absorbed toner may cause ignition or explosion due to electric contact sparks inside the vacuum cleaner. However, you can use a toner-compatible industrial vacuum cleaner. When toner is spilled, remove the spilled toner using a wet cloth so that the toner is not scattered.

ACAUTION

- Do not leave the following items in a place where children can reach them:
 - Toner (new or used)
 - · Toner containers while toner is inside
 - · Toner-attached parts
- When the following occurs while toner is handled, receive emergency measures first, and then consult a doctor if necessary.
 - When inhaling toner, gargle with a large amount of water and move into a fresh air environment.
 - When swallowing toner, dilute gastric contents with a large amount of water.
 - When getting toner into your eyes, flush them with a large amount of water.
- When removing jammed paper, replenishing or replacing toner (new or used), make sure not to inhale toner.
- When removing jammed paper, replenishing or replacing toner (new or used), be careful not to have toner dirt your skin or clothes.
- If toner (new or used) comes into contact with your skin or clothes and smears them, take the following actions:
 - If toner comes into contact with your skin, wash the affected area thoroughly with soap and water.
 - If toner comes into contact with your clothes, wash the stained area with cold water. Heating the stained area by applying hot water will set the toner into the fabric and removing the stain may become impossible.

- When replacing a container with toner (including used toner) or consumables with toner, be careful that the toner does not splatter. After removing used consumables and shutting the lid of the container if the lid is available, put them in a bag.
- Do not open toner containers forcibly while toner is inside, crush or squeeze them. Toner spillage can cause accidental ingestion or dirtying of clothes, hands, or floor.

Disposing the Used Waste Toner Bottle

When disposing the used waste toner bottle, place the bottle in a box or plastic bag while paying attention not to spill any toner powder.

Region A (mainly Europe and Asia)

If you want to discard your used waste toner bottle, please contact your local sales office. If you discard it by yourself, treat it as general plastic waste material.

Region B (mainly North America)

Please see our local company website for information on the recycling of supply products, or you can recycle items according to the requirements of your local municipalities or private recyclers.

8. Troubleshooting

Getting Started

Alert Sounds

The machine notifies you with an alert sound when a paper jam occurs, the original is left on the machine, or another problem occurs. Listen to the alert sound for one of the patterns described below, and perform the required procedure accordingly.

Sound pattern*1	Condition	Solution
A short beep	Touch/Notification Login/Logout	-
A short beep, followed by long beep	Invalid Operation	If you entered an incorrect password, enter the correct password.
		If you hear this sound when touching an icon or key, you do not have permission to use the function or setting. Log in to the machine as a user with permission, or consult your user administrator (or customprivileges administrator who has equivalent privilege).
A long beep	Operation Completed Copy: Job Done Fax Printing Ended Fax Transmission Ended Fax Reception Ended	Check the operation result.
Two long beeps	Warm-up	The machine is ready for use after the machine is turned on or recovers from the sleep mode.

Sound pattern*1	Condition	Solution
Five long beeps	Auto Reset	The machine has been reset to the default state after the specified period of time has passed with the machine unoperated. If you were performing and paused an operation, perform the operation from the beginning again.
		[Auto Reset Sound] sounds only when simplified screen is displayed in the classic mode applications.
Five long beeps (repeating four times)	Caution Copy: Forgot Original Scanner: Forgot Original Fax: Forgot Original	Check that an original is not left on the exposure glass and that paper is loaded in the paper tray.
Five short beeps (repeating five times)	Warning	Check the message displayed on the screen, and resolve the problem by removing the jammed paper or original, or replacing the toner.
12 short beeps	Blank Page Detected	Check that the original is placed in the ADF with the side to scan facing up.

^{*1} The factory default sound pattern is used as an example in the table above.



- You cannot pause an alert sound that has started. The machine continues to emit the sound until the preset sound pattern is completed.
- You can specify the volume and type of alert sound in [Settings]
 [System Settings]
 [Sound]. The type of sound can be specified for each condition described in the table above. You can also specify the volume of the sound emitted when using On-hook or Immediate Transmission to send a fax in [Settings]
 [System Settings]
 [Sound]
 [Adjust Sound Volume (Fax)] or [Settings]
 [Fax Settings]
 [Others]
 [Adjust Sound Volume]. Press [Home] () after specifying the settings.

See "Setting the Sound Volume and Type", User Guide (HTML).

Checking the Indicators, Icons, and Messages on the Control Panel

The machine notifies you of the machine condition or status of an application with the [Check Status] indicator or a message displayed on the control panel. Check the status and resolve the problem accordingly.



Message

Displays a message indicating the status of the machine or application. Press the message to display it in full text. You can also view more than one message as a list.

• [Check Status] indicator

If there is a problem such as a paper jam, the [Check Status] indicator lights up or flashes along with a message displayed on the screen. Press [Check Status] to check the status of the machine or application, and resolve the problem accordingly.

When an Icon is Displayed with a Message

When you need to resolve a problem such as a paper jam, an icon is displayed at the beginning of a message. See the table below for the meaning of each icon.

	_	
Icon	Condition	Solution and reference
7	Maintenance or repair is required.	Prepare for maintenance or consider repairing the machine.
₩	Paper is jammed.	See the animated illustration displayed on the control panel, and remove the jammed paper.
		See "When Paper Is Jammed", User Guide (HTML).

Icon	Condition	Solution and reference
%	An original has jammed.	See the animated illustration displayed on the control panel, and remove the jammed original. See "When Paper Is Jammed", User Guide (HTML).
	Toner is almost depleted, or has run out.	Prepare a replacement toner. Replace the toner when it runs out. page197"Replacing the Toner" Note If appears when there is a lot of toner, pull out the print cartridge by following the toner replacement procedure that is displayed on the screen, and then set it back again.
€Î	The waste toner bottle is full, or almost full.	Prepare a replacement waste toner bottle. Replace the bottle when it becomes full. page202"Replacing the Waste Toner Bottle"
\$	Staples are nearly depleted, or have run out.	Prepare a cartridge for replacement, and load it when the staples run out. page200"Replenishing the Staples"
£	The hole punch receptacle is full.	Empty the receptacle. See "When the Hole Punch Receptacle Is Full", User Guide (HTML).
[∤*	A cover is open.	Check that all covers of the machine and external devices are closed.



• For the names and the contact information of consumables, check [Settings] [Inquiry]. Press [Home] (after completing the operation to close [Settings]. See "Contact Information", User Guide (HTML).

When the [Check Status] Indicator is lit or flashing

The [Check Status] indicator notifies the user when the machine requires immediate attention.

Lit in red


The machine is unavailable for use. Press [Check Status] and resolve the problem as soon as possible.

Flashing in yellow

Maintenance on the machine needs to be performed soon. Perform the required procedure accordingly.

Follow the steps below to check the machine and the application's status, and solve the problem as needed.


1. Press [Check Status].

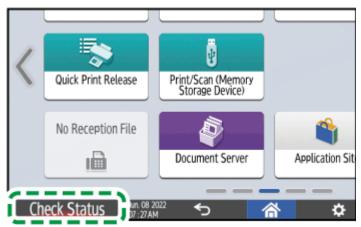

2. Press [Check] to check the details, and perform the required procedure. page207"When an Icon is Displayed with a Message"

The machine cannot be used.


①: Some of the functions cannot be used, or the toner is almost depleted.

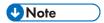

• Depending on the machine condition, such as a paper jam or open cover, the status confirmation screen may be displayed automatically without pressing [Check Status].

D0CHPA5807

When the Machine Cannot Be Operated

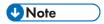

- If a message is displayed on the screen, check the message.
 page216"When a Message Appears and the Machine Cannot Be Operated"
- When confirming or changing the settings in [Settings], press [Home] (after completing the operation to close [Settings].

When the Machine Does Not Respond Correctly to an Operation on the Control Panel

Condition	Cause	Solution and reference
The screen of the control panel is not lit.	The machine is in the sleep mode.	Touch the screen.
Nothing is displayed when you touch the screen.	The power of the machine is turned off.	Check that the main power indicator is not lit, and then turn on the main power of the machine. page19"Turning On and Off the
		Power"

Condition	Cause	Solution and reference
The power of the machine does not come on.	The power cable is unplugged from the wall outlet.	Connect the ground wire, and plug the power cable into the wall outlet.
		See "Installation Requirements After Moving the Machine", User Guide (HTML).
	The machine is connected to an	You cannot use an extension cord.
	extension cord.	After checking that the screen is not lit when you touch it and the main power indicator is unlit, remove the extension cord and plug the power cable directly into the wall outlet.
	There may be a problem with the wall outlet.	After checking that the screen is not lit when you touch it and the main power indicator is unlit, plug the power cord into a confirmed operating wall outlet.
Only the copy icon is displayed when the machine is turned on.	The functions other than the copy function are starting up.	The time required for a function to start up varies depending on the function. Wait a while.
Only some of the menu items are displayed when you press [Settings] after turning on the power of the machine.	The functions other than the copy function are starting up.	The time required for a function to start up varies depending on the function. More items on the menu in [Settings] are displayed as the functions start up. Wait a while.
The login screen is displayed.	Basic Authentication, Windows Authentication, or LDAP Authentication is specified.	Enter the login user name and password, and then press [Login]. For the login user name and password, consult the user administrator (or customprivileges administrator who has equivalent privilege). page55"Logging In from the Control Panel"

Condition	Cause	Solution and reference
The User Code entry screen is displayed.	User Code authentication is specified.	Enter the User Code, and press [OK]. Consult the user administrator (or custom-privileges administrator who has equivalent privilege) for the user code.
A function is not executed, or you cannot perform an operation.	Another function that cannot be used with the specified function at the same time is being executed.	Wait for the function in progress to end, and then perform the next operation. For details about functions that cannot be used at the same time, see the following section: page 399 Function
		Compatibility" When a backup of the address book is being created using Web Image Monitor or another method, the next function is executed after the backup is completed.
The key is unresponsive, or another key is activated.	A malfunction is temporarily occurring on the machine.	Turn off the power of the machine, wait for 10 seconds or more after confirming that the
Multi-touch, such as pinch-in and pinch-out, does not work properly.	There is a device or equipment that is generating noise in the vicinity.	main power indicator is turned off, and then turn on the power again. page19"Turning On and Off the
You cannot interrupt copying even after pressing [Stop] while the copy function is operating.	A malfunction is temporarily occurring on the machine.	Power" If the message persists even after you have turned the power off and then on, consider repairing the machine.
You cannot interrupt copying or scanning even after pressing [Stop], and the login screen is displayed.	Basic Authentication, Windows Authentication, or LDAP Authentication is specified, and the user who started the copying or scanning operation has logged out.	Log in to the machine as the user who started the copying or scanning operation or as the machine administrator (or custom-privileges administrator who has equivalent privilege), and press [Stop].

Condition	Cause	Solution and reference
Help is not displayed when you press [Help]	The application that is currently in use does not support the help function, or is grayed out because "Paper Misfeed" or another message is being displayed.	The help function cannot be used when is grayed out. Close the application or message, and then try again.
	is grayed out because the user does not have permission to use the browser function.	The help function cannot be used if the user does not have permission to use the browser function. If is always grayed out, consult the user administrator (or customprivileges administrator who has equivalent privilege) to check whether you have permission to use the browser function. The user administrator can change the access permissions in the address book. See "Confirming the Available Functions", User Guide (HTML).
The screen changes to Web Browser when you press [Help] (?), but the help content is not displayed.	The machine is not connected to the network correctly.	Check if you can display a web page in [Web Browser]. If a web page cannot be displayed, check that the machine is connected to the network correctly. See "Selecting the Network Connection Method", User Guide (HTML).
	The browser is configured not to save cookies.	Check that [Web Browser] ► [Menu] (♣) ► [Settings] ► [Privacy & security] ► [Accept cookies] check box is selected.

When the Machine Does Not Respond Correctly to an Operation from a Computer

Condition	Cause	Solution and reference
When using the address book from Device Manager NX, an incorrect password error is displayed even when you enter the correct login user name and password.	A certificate is not installed on the computer when SSL/TLS is enabled on the machine.	Install the certificate on the computer. Consult your network administrator (or customprivileges administrator who has equivalent privilege) for the certificate.
	An item other than [Simple Encryption] is specified in "Driver Encryption Key:Encryption Strength".	Specify [Simple Encryption] in "Driver Encryption Key:Encryption Strength" in [Settings] [System Settings] [Settings for Administrator] [Security] [Extended Security Settings].

Condition	Cause	Solution and reference
You cannot access the machine using Web Image Monitor.	There is a problem with the connection between the machine and the computer.	Check the cable connecting the machine and the computer, and disconnect and then connect the cable again. Also, check the connection to the hub or router, and turn off and on the power of the device if possible. Next, turn off the power of the machine, wait for 10 seconds or more after confirming that the main power indicator is turned off, and then turn on the power. page19"Turning On and Off the Power"
	A proxy server is specified.	In the proxy setting of the Web browser, specify the IP address of the machine as an exception. You can check the IP address in [Check Status] Network".
"There is a problem with this website's security certificate." is displayed and you cannot connect to the machine when accessing the machine using Web Image Monitor.	[Permit SSL/TLS Communication] is set to [Ciphertext Only].	Click [Continue to this website (not recommended).]. To specify not to display the message, log in to the machine in the administrator mode, and specify [Ciphertext/Cleartext] in [SSL/TLS] "Permit SSL/TLS Communication" under [Device Management] [Configuration] "Security".
	"https" is entered at the beginning of the URL.	Do not enter "s" after "http".

When Messages Appear

When a Message Appears and the Machine Cannot Be Operated

Message	Condition	Solution and reference
"Service Call" SCXXX-XX "Contact" "Serial No. of Machine"	The machine needs to be repaired.	Consider repairing the machine.
"Functional Problems" SCXXX-XX "Contact" "Serial No. of Machine"	A malfunction that requires maintenance or repair has occurred.	Prepare for maintenance or consider repairing the machine. If a message prompts you to turn the power of the machine off and then on, the problem may be resolved by turning off the power, waiting for 10 seconds or more after confirming that the main power indicator is turned off, and then turning on the power. page19"Turning On and Off the Power" When "Press [Cancel] to cancel functions." is displayed, you can continue using the machine except for the function in which the malfunction is occurring after
"Please wait."	The machine is recovering from the sleep mode.	pressing [Cancel]. Wait a while. Turn off the power of the machine if the message persists after five minutes, wait for 10 seconds or more after confirming that the main power indicator is turned off, and then turn on the power. page19"Turning On and Off the Power"
"Please wait."	The machine is preparing to perform a function or executing the image stabilization process.	Wait a while and do not turn off the power of the machine.

8

Message	Condition	Solution and reference
	The ambient temperature is outside the temperature range specified for the machine operation.	Check the room temperature and whether it satisfies the operational requirements of the machine. If the machine has just been moved to the current location, leave it be for some time and allow it to adapt to the environment before use.
		See "Installation Requirements After Moving the Machine", User Guide (HTML).
		If the message persists after five minutes even when the room temperature is within the specifications, wait for 10 seconds or more after confirming that the main power indicator is turned off, and then turn on the power.
		page19"Turning On and Off the Power"
"Please wait."	A consumable or supply such as the toner has been replenished.	Wait a while and do not turn off the power of the machine. Turn off the power of the machine if the message persists after five minutes, wait for 10 seconds or more after confirming that the main power indicator is turned off, and then turn on the power.
		page19"Turning On and Off the Power"
"Shutting down Please wait. Main power will be turned off automatically.	The power of the machine was turned off while the machine was starting up or in the standby mode.	Wait until the power is turned off.
Maximum waiting time: 6 minute(s)"		

UNote

- If the message persists even after you have performed the operations as instructed in the following message, a malfunction may temporarily occur on the machine. Turn off the power of the machine, wait for 10 seconds or more after confirming that the main power indicator is turned off, and then turn on the power.
 - "Cover Open"
 - "Add Toner" / "Add Staples"
 - "Waste Toner Bottle is full." / "Hole Punch Receptacle is full."

- "Original(s) left on exposure glass."
- "No paper."

page19"Turning On and Off the Power"

When a Message Appears While Using the Copy Function

Message	Condition	Solution and reference
"Cannot Detect Original Size"	An original is not placed correctly on the machine.	Place the original correctly. When you place an original on the exposure glass, the machine detects the original size by opening and closing the exposure glass cover or ADF. Open the cover or ADF by more than 30 degrees when placing an original.
	An original with a difficult-to-detect size even in the regular size, such as a transparency or paper with sticky notes, is placed on the machine.	When scanning an original with a difficult-to-detect size, specify the paper tray in [Paper Select]. Also, when making an enlarged or reduced copy, select an item other than [Fit to Paper Size] page303"Sizes Detectable with Auto Paper Select"
	An original of a custom size is placed on the machine.	When scanning an original of a custom size, specify the original size in [Original Setting/Store File] [Custom Size].
"2 Sided Copy is not available with this paper size." (The name of some other specified finish, such as "Rotate Sort", may appear in "2 Sided Copy".)	A paper size that is not supported in Duplex copying or the specified finishing type is specified.	Check the paper size supported in Duplex copying and the specified finishing type and load the supported paper. page308"List of Specifications"

Message	Condition	Solution and reference
"Exceeded the maximum number of multi-sheet fold."	The maximum number of sheets that can be specified for multisheet fold has been exceeded.	Check the number of sheets that can be specified for multi-sheet fold, and then reduce the number of originals before loading them. page308"List of Specifications" When the internal multi-fold unit is attached, you can specify whether to continue or stop printing in [Settings] [Copier / Document Server Settings] [Finishing] [Fold] [If Too Many Sheets for Multi-sheet Fold, Set]. See "Finishing", User Guide (HTML).
"Exceeded the maximum number of sheets that can be used. Copying will be stopped."	When the copy volume use limitation is enabled, copying was canceled because the copy volume of the user exceeded the upper limit allotted for the user.	For details about the copy volume use limitation, consult the user administrator (or custom-privileges administrator who has equivalent privilege). The user administrator can change the limit on the copy volume use. See "Specifying Maximum Print Volume Use of Each User", User Guide (HTML).
"Set next original(s) within the following seconds, then press [Start]."	Duplex copying is specified.	When not copying onto both sides of paper, clear the [1 sided→2 sided] and [2 sided→2 sided] check boxes.
"Stapling capacity exceeded."	The number of sheets that can be stapled together is exceeded.	Check the number of sheets that can stapled together at a time, and reduce the number of sheets in the original placed on the machine. page308"List of Specifications"

When a Message Appears While Using Document Server


For details about the messages that are displayed when printing a document, see the descriptions of the messages that are displayed in the copy function.

page218"When a Message Appears While Using the Copy Function"

Message	Condition	Solution and reference
"Cannot delete the folder because it contains locked file(s). Contact the file administrator."	The folder contains a locked document.	Request the file administrator (or custom- privileges administrator who has equivalent privilege) to unlock the document. The file administrator can unlock documents. See "Managing Folders as a File
		Administrator", User Guide (HTML).
"Cannot detect original size."	An original is not placed on the machine.	Place the original correctly. When you place an original on the exposure glass, the machine detects the original size by opening and closing the exposure glass cover or ADF.
		Open the cover or ADF by more than 30 degrees when placing an original.
	An original with a difficult-to-detect size even in the regular size, such as a transparency or paper with sticky notes, is placed on the machine.	When scanning an original of a difficult-to-detect size, specify the paper tray. Also, when making an enlarged or reduced copy, select an item other than [Fit to Paper Size]. page303"Sizes Detectable with Auto Paper Select"
	An original with a custom size is placed on the machine.	When scanning an original with a custom size, specify the original size in [Original Size] [Custom Size].
"Cannot display preview of this page."	The format of the image data is corrupted.	Press [Confirm] to display the preview screen without a thumbnail. If the image data comprises multiple pages, press to display a different page.

Message	Condition	Solution and reference
"Magazine or Booklet mode cannot be used for data stored with mixed functions."	A document scanned in the copy function and a document stored in the printer function are selected together, and [Booklet] or [Magazine] is specified.	You cannot specify [Booklet] or [Magazine] to the document comprising data stored in the different functions.
"The selected folder is locked. Please contact the file administrator."	The wrong password was entered 10 times while performing operation on a password-protected folder, and the folder is locked.	Request the file administrator (or custom- privileges administrator who has equivalent privilege) to unlock the folder. The file administrator can unlock folders. See "Managing Folders as a File Administrator", User Guide (HTML).

When a Message Appears While Using the Fax Function

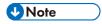

• When confirming or changing the settings in [Settings], press [Home] (after closing [Settings].

Messages that Appear During Operation or When Sending/Receiving a Fax Cannot Be Performed

Message	Condition	Solution and reference
"Cannot detect original size."	An original is not placed correctly on the machine.	Place the original correctly. When you place an original on the exposure glass, the machine detects the original size by opening and closing the exposure glass cover or ADF. Open the cover or ADF by more than 30 degrees when placing an original.

Message	Condition	Solution and reference
	An original with a difficult-to-detect size, even in the regular size, such as a transparency or paper with sticky notes or a custom size original, is placed on the machine.	Specify [Scan Size] in [Settings].
"Cannot receive emails currently."	The machine is receiving a Ondemand Email Notification (a query e-mail from the administrator), and manual reception cannot be performed.	Wait a while, and press [Manual Reception: Email].
"Error occurred, and transmission was cancelled."	An original had jammed while sending a fax.	Press [Confirm], remove the jammed original, and then send the fax again.
	An error occurred temporarily in the machine, or there was interference on the line such as excessive noise or cross-talk.	Press [Confirm] and send the fax again.
"Functional problem occurred. Stopped processing."	The power of the machine was lost while receiving an Internet Fax.	Even if you turn on the power immediately, you may not be able to resume reception until the timeout duration has passed depending on the settings of the e-mail server. Wait a while. To receive the fax manually, wait until the duration has passed and then operate the machine to perform reception. For the timeout duration, consult the administrator.

Message	Condition	Solution and reference
"Memory is full. Cannot scan more. Transmitting only scanned pages."	The memory is full.	Press [Confirm] to return to the stand-by state and start sending the pages that are already scanned and stored. Check the transmission result report for unsent pages, and send those pages later.
"Some invalid destination(s) contained. Do you want to select only valid destination(s)?"	A folder destination is included in the group.	When sending a fax to a destination other than a folder destination, press [Select].

U Note

 If the JPEG/PDF file that is attached to an e-mail sent to the machine cannot be printed, check the message and resolve the problem accordingly.
 page237"When a Message Appears While Using the Printer Function"

Messages that Appear When the Machine Cannot Connect to the Network

For details about your network environment, consult the administrator.

Message	Condition	Solution and reference
"Check whether there are any network problems." [14-01]	The destination device did not respond.	 Check that the computer specified as the destination is operating normally and connected to the network. Check that the machine is connected to the network correctly.
"Check whether there are any network problems." [14-03]	You do not have permission to access the shared folder specified as the destination.	Check the access permission settings of the shared folder on the destination computer. page177"Scanning Documents and Sending the Scanned Data to a Folder"
"Check whether there are any network problems." [14-07]	The shared folder specified as the transfer destination cannot be found in Folder Transfer.	Creating a shared folder on the destination computer. To check the folder name, select the destination in the address book, press [Edit], and see "Path" in [Destinations] tab [Folder]. See "Transferring a Received Fax Document to E-mail Address or Folder", User Guide (HTML).

Message	Condition	Solution and reference
	The amount of available internal storage space on the destination computer is insufficient to perform Folder Transfer.	Check that the computer specified as the transfer destination has enough free space.
"Check whether there are any network problems." [14-09]	The password registered in the address book is invalid when performing Folder Transfer.	Select the forwarding destination in the address book, press [Edit], and specify a password in the [Destinations] tab [Folder] Folder Authentication Info].
"Check whether there are any network problems." [14-33]	[Fax Email Account] is not specified.	Register email address, user name, and password in [Settings] [Fax Settings] [Fax Email Account].
"Check whether there are any network problems." [14-51]	The destination to which to perform Folder Transfer was deleted from the address book.	Register the destination folder to the address book. See "Registering the Destination Folder to Use for Send to Folder", User Guide (HTML).
"Check whether there are any network problems." [15-11]	The POP3 (IMAP4) server could not be found.	Check the settings in [Reception Protocol], [POP3/IMAP4 Settings] and [Email Communication Port] on [Settings] [System Settings] [Send (Email/Folder)] [Email].
	The DNS server could not be found.	Check the [DNS Configuration] setting on [Settings] ▶ [System Settings] ▶ [Network/Interface].
	The machine is not connected to the network.	Check that the machine is connected to the network correctly.

Message	Condition	Solution and reference
"Network communication has failed. Cannot access the SIP server. Please check the address setting of the SIP server or the SIP server settings." [13-18]	The SIP server could not be accessed.	Specify the correct "SIP Server IP Address" in [Settings] ▶ [Fax Settings] ▶ [Detailed Initial Settings] ▶ [IP-Fax Settings] ▶ [SIP Settings]. See "Sending Documents by IP-Fax", User Guide (HTML).
"Network communication has failed. Cannot connect to the destination normally because there is no IP-FAX function compatibility between the destination and this machine." [13-33]	The destination device is unable to connect with the IP-Fax function of the machine.	Sending a fax using the IP-Fax function is not possible. Send the fax using the G3 line if possible.
"Network communication has failed. Cannot register this machine to SIP server. Please check the address setting of the SIP server or other settings of the SIP server." [13-17]	The SIP server rejected the registration of the user name.	Specify the correct "SIP Server IP Address" and "SIP User Name" in [Settings]
	The POP3 (IMAP4) server could not be found.	Check the settings in [Reception Protocol], [POP3/IMAP4 Settings] and [Email Communication Port] on [Settings] [System Settings] [Send (Email/Folder)] [Email].

Message	Condition	Solution and reference
"Network communication has failed. Failed to connect to POP/IMAP server. Please check machine settings and the status of server and network." [15-11]	The DNS server could not be found.	Check the [DNS Configuration] setting on [Settings] ▶ [System Settings] ▶ [Network/Interface].
	The machine is not connected to the network.	Check that the machine is connected to the network correctly.
"Network communication has failed. Failed to	The SMTP server could not be found.	Check [SMTP Server] on [Settings] [System Settings] [Send (Email/Folder)] [Email].
connect to the destination. Please check if the destination is correct and destination machine status." [14-01]	The DNS server could not be found.	Check [DNS Configuration] on [Settings] ▶ [System Settings] [Network/Interface].
	The machine is not connected to the network.	Check that the machine is connected to the network correctly.
	Communication with the destination specified for Folder Transfer could not be established properly.	 Check that the computer specified as the transfer destination is operating normally and connected to the network. Check the transfer settings. See "Transferring a Received Fax Document to E-mail Address or Folder", User Guide (HTML).
	The destination could not be found when the fax was sent without using the SMTP server.	Check that the destination is specified correctly. See "Sending Internet Faxes without Using SMTP Server", User Guide (HTML).

Message	Condition	Solution and reference
"Network communication has failed. Failed to connect to the destination folder. Please check if the destination is correct and destination machine settings." [14-25]	The shared folder specified as the destination of Folder Transfer cannot be found.	Specify the destination from the address book, press [Edit], and check that the setting in the [Destinations] tab [Folder] matches the folder name or path of the shared folder on the destination computer. If the shared folder on the destination computer has been deleted, create the folder. See "Transferring a Received Fax Document to E-mail Address or Folder", User Guide (HTML).
"Network communication has failed. Failed to send. Please check a destination machine status and both authentication setting of destination machine and this machine." [14-04]	A malfunction is occurring on the SMTP server or the computer specified as the destination when sending an email without using the SMTP server.	Check that the SMTP server and the computer specified as the transfer destination are functioning normally.
"Network communication has failed. Failed to send. Please check destination machine status and remaining memory." [14-05]	No free space is available on an SMTP server, the computer specified as the destination for Folder Transfer, or the computer specified as the destination when sending an e-mail without using the SMTP server.	Check that free space is available on the SMTP server and the destination computer.
	The specified destination does not exist.	Check the destination e-mail address, and specify again if necessary.

Message	Condition	Solution and reference
"Network communication has failed. Failed to send. Please check if the destination is correct." [14-06]	The destination could not be found when the fax was sent without using the SMTP server.	Check that the destination is specified correctly. See "Sending Internet Faxes without Using SMTP Server", User Guide (HTML).
"Network communication has failed. Failed to send. Please check status and settings of the destination machine." [14-08]	A malfunction is occurring on an SMTP server, the computer specified as the destination for Folder Transfer, or the computer specified as the destination when sending an e-mail without using the SMTP server.	Check that the SMTP server and the destination computer are functioning normally.
"Network communication has failed. Failed to send. Please check the access privilege setting of the destination." [14-03]	A malfunction is occurring on an SMTP server, the computer specified as the destination for Folder Transfer, or the computer specified as the destination when sending an e-mail without using the SMTP server.	Check that the SMTP server and the destination computers are functioning normally.
	The shared folder specified as the transfer destination cannot be found in Folder Transfer.	Creating a shared folder on the destination computer. To check the folder name, select the destination in the address book, press [Edit], and see "Path" in [Destinations] tab [Folder]. See "Transferring a Received Fax Document to E-mail Address or Folder", User Guide (HTML).

Message	Condition	Solution and reference
	The user name and/or password registered in the address book are invalid when performing Folder Transfer.	Select the forwarding destination in the address book, press [Edit], and specify [Destinations] tab [Folder] [Folder Authentication Info] again. See "Registering the Destination Folder to Use for Send to Folder", User Guide (HTML).
"Network communication has failed. Failed to send. Please check the administrator email address setting." [14-00]	The administrator e-mail address is not registered when the machine is configured to send Records by e-mail.	 Specify [Settings]
"Network communication has failed. Failed to send. Please check user name and password." [14-09]	The user name and/or password registered in the address book are invalid when performing Folder Transfer.	Select the forwarding destination in the address book, press [Edit], and specify [Destinations] tab ▶ [Folder] ▶ [Folder Authentication Info] again. See "Registering the Destination Folder to Use for Send to Folder", User Guide (HTML).
"Network communication has failed. Failed to send. The registration of fax email address or administrator email address is required." [14-33]	Both the e-mail address to use for sending and receiving e-mails and the administrator e- mail address are not registered when sending an e-mail.	Specify [Fax Email Account] on [Settings] [Fax Settings] [Detailed Initial Settings] or [Administrator's Email Address] on [Settings] [System Settings] [Send (Email/Folder)] [Email]. See "Preparing the Machine for Sending and Receiving Documents by Internet Fax", User Guide (HTML).

Message	Condition	Solution and reference
"Network communication has failed. Failed to send. The specified address is invalid." [14-34]	A domain name was not specified when sending an e-mail without using the SMTP server.	 Specify a host name or IP address as the destination, and send the e-mail again. When you specified the destination from the address book, select the destination in the address book, press [Edit], and then check the settings in "Send via SMTP Server" and "SMTP Authentication Info" in [Destinations] tab ► [Email Address]. See "Sending Internet Faxes without Using SMTP Server", User Guide (HTML).
"Network communication has failed. Fax email account is not registered. Please check settings." [15-02]	[Fax Email Account] is not specified.	Specify the settings in "User Name" and "Password" in [Settings] [Fax Settings] [Fax Settings] [Fax Email Account].
"Network communication has failed. Fax email address is not registered. Please check settings." [15-03]	[Fax Email Account] is not specified.	Register Email Address in [Settings] [Fax Settings] [Detailed Initial Settings] [Fax Email Account].
"Network communication has failed. No response from the destination. Please check the cable connection and if the network equipment is turned on." [13-39]	The destination device did not respond.	 Check that the computer specified as the destination is operating normally and connected to the network. Check that the machine is connected to the network correctly.

Message	Condition	Solution and reference
"Network communication has failed. POP/IMAP server authentication error has occurred. Please check email account and password." [15-12]	A login attempt to the POP3 (IMAP4) server failed.	Check the [POP before SMTP] setting on [Settings]
"Network communication has failed. POP/IMAP server is not registered. Please check settings." [15-01]	The POP3 (IMAP4) server address is not registered.	Specify the setting in [Settings] ► [System Settings] ► [Send (Email/Folder)] ► [Email] ► [POP3/IMAP4 Settings].
"Network	A user certificate	Install the correct user certificate.
communication has failed. S/MIME certificate error has occurred. Please	(destination certificate) is not registered or has expired.	See "Encrypting Network Communication", User Guide (HTML).
check the certificate of both	A device certificate	Install the correct device certificate.
destination and this machine."	(destination certificate) is not	See "Encrypting Network Communication", User Guide (HTML).
[14-21]	registered or has expired.	Communication, Cool datas (TTT 12).
"Network communication has failed. SIP digest authentication failed. Please check the SIP digest authentication user name and password."	The authentication password on the SIP server and the password registered on the machine do not match.	Check that the password registered on the SIP server and "Password" in SIP Digest Authentication under [Settings]

Message	Condition	Solution and reference
"Network communication has failed. The certificate of destination is not currently valid. Please re-issue it."	The user certificate (destination certificate) has expired.	Install a new user certificate. See "Encrypting Network Communication", User Guide (HTML).
"Network communication has failed. The certificate of this machine is not currently valid. Please re-issue it." [14-23]	A device certificate (destination certificate) is not registered or has expired.	Install a new device certificate. See "Encrypting Network Communication", User Guide (HTML).
"Network communication has failed. The certificate of this machine or destination machine is not currently valid. Please re-issue it." [14-24]	The user certificate (destination certificate) and device certificate have expired.	Install a new user certificate and device certificate. See "Encrypting Network Communication", User Guide (HTML).
"Network communication has failed. The destination does not support IP-FAX." [13-34]	An IP-Fax was sent to a destination that does not support IP-Fax.	Sending a fax using the IP-Fax function is not possible. Send the fax using the G3 line if possible.
"Network communication has failed. The IP address is invalid. Please check the network settings."	An invalid IP address is registered.	Specify the correct [Effective Protocol] and [IP Address (IPv4)], or [IP Address (IPv6)] on [Settings] [System Settings] [Network/Interface]. See "Connecting to a Wired LAN", User Guide (HTML).

Mossaga	Condition	Solution and reference
Message [13-26]	Condition	Solution and reference
[13-27]		
"Network communication has failed. The IP address may be invalid. Please check the network settings." [13-25]	The settings in [SIP Server IP Address] and [Effective Protocol] do not match.	Check that SIP Server IP Address in [Settings]
	An invalid IP address is registered.	Specify the correct [Effective Protocol] and [IP Address (IPv4)], or [IP Address (IPv6)] on [Settings] [System Settings] [Network/Interface].
		See "Connecting to a Wired LAN", User Guide (HTML).
"Network communication has failed. The line has been disconnected. Please check the destination and caller ID notification setting." [13-32]	The destination terminated the communication.	 Check that the destination is specified correctly. If the destination refuses to receive a fax with no sender information, enable notifying of the information and send the fax again.
"Network communication has failed. The mail address for authentication does not match with administrator's one. Please check the settings." [14-20]	When a signature is specified, the SMTP authentication e-mail address or POP before SMTP authentication e-mail address does not match the administrator e-mail address.	Check that the authentication e-mail address matches the address specified in [Settings] ▶ [System Settings] ▶ [Send (Email/Folder)] ▶ [Email] ▶ [Administrator's Email Address]. See "Send (Email/Folder)", User Guide (HTML).

UNote

• Change the current value to [1] under switch number [21] and bit number [6] in [Settings] ▶ [Fax Settings] ▶ [Detailed Initial Settings] ▶ [Parameter Setting] ↑ [Parameter S

message. Change the setting when you are not using the IP-Fax or Internet Fax function.

See "Changing the Parameter Settings", User Guide (HTML).

Messages that Appear When the Remote Fax Function Is Unavailable

For details about your network environment, consult the administrator.

When a message is displayed on the main-machine

Message	Condition	Solution and reference
"Check whether there are any network problems."	The machine is not connected to the network.	Check that the machine is connected to the network correctly.
[16-00]		Press [Confirm] to use the G3 fax.
"Connection with the remote machine has failed. There is a problem with the remote machine	Another main-machine is registered in remote machine.	Register the sub-machine in [Settings] [System Settings] [Machine] [Others] [Register/Change/Delete Remote Machine].
structure. Contact the administrator."	Another main-machine is registered in remote machine on the submachine.	Register the machine in [Settings] [System Settings] [Machine] [Others] [Register/Change/Delete Remote Machine] on the submachine.
"Transfer error has occured. Check status of remote machine."	A network error occurred while transferring the data.	Check that the machine is connected to the network correctly.
		Check that the sub- machine is connected to the network and functioning normally.

8

Message	Condition	Solution and reference
		• Check that the IP address or host name of the mainmachine is specified correctly in [Settings] [System Settings] [Machine] [Others] [Register/Change/Delete Remote Machine] on the sub-machine.


When a message is displayed on the sub-machine

Message	Condition	Solution and reference
"Authentication with remote machine failed. Check remote machine's authentication settings."	Authentication failed when user authentication is enabled on the mainmachine, or the user does not have permission to use the fax function.	Specify the same user authentication setting as the main-machine, and register a user who has the permission to use the fax function. See "Verifying Users to Operate the Machine (User Authentication)", User Guide (HTML).
"Check whether there are any network problems." [16-00]	The machine is not connected to the network.	Check that the machine is connected to the network correctly.
"Connection with the remote machine has failed. Check the remote machine status."	The main-machine is turned off, or not functioning normally.	Turn on the power of the main- machine. If the power is turned on, check that the device is functioning normally.
	A network error occurred.	Check that the machine and the main-machine are connected to the network correctly.

Message	Condition	Solution and reference
	A timeout error occurred while connecting to the main-machine.	Check that the IP address or host name of the main-machine is specified correctly in [Settings] [System Settings] [Machine] [Others] [Register/Change/Delete Remote Machine] on the submachine.
"Connection with the remote machine has failed. There is a problem with the remote machine	Another sub-machine is registered in remote machine.	Register the main-machine in [Settings] [System Settings] [Machine] [Others] [Register/Change/Delete Remote Machine].
structure. Contact the administrator."	The machine is not registered in remote machine on the mainmachine.	Register the machine in [Settings] [System Settings] [Machine] [Others] [Register/Change/Delete Remote Machine] on the mainmachine.
"Remote fax is not available because [User Code Authentication] is active."	User Code authentication is specified.	User Code authentication is not supported on both the main-machine and sub-machine. Consider another method of user authentication.
"Remote machine registration is incorrect. Contact the administrator."	The main-machine could not be found.	Check that the IP address or host name of the main-machine is specified correctly in [Settings] [System Settings] [Machine] [Others] [Register/Change/Delete Remote Machine].
"Transfer error has occured. Check status of remote machine."	A network error occurred while transferring the data.	 Check that the machine is connected to the network correctly. Check that the mainmachine is connected to the network and functioning normally.

Message	Condition	Solution and reference
		• Check that the IP address or host name of the mainmachine is specified correctly in [Settings] [System Settings] [Machine] [Others] [Register/Change/Delete Remote Machine].
"Transfer error has occured. Check status of remote machine." "MACHINE_ERR_09(0)	There is no free space available on the internal storage of the main-machine.	Delete files that are no longer needed on the main-machine.
"Transfer error has occured. Check status of remote machine."		
remote machine is full."		

When a Message Appears While Using the Printer Function

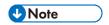

• When confirming or changing the settings in [Settings], press [Home] (after closing [Settings].

Messages that Appear without Error Codes

Message	Cause	Solution and reference
"Address Book is currently in use by another function. Authentication has failed."	The address book is in use by another function, and authentication query is not possible.	Try again later.

Message	Cause	Solution and reference
"A function which cannot be used with Fold mode was set. The job has been cancelled."	A setting that cannot be specified with folding was specified, and printing was canceled.	Check the setting, and cancel the function that cannot be specified with the fold function.
"A job via the network that was not printed exists because an error occurred. It was stored as a job not printed."	When the error job storing function is enabled, an error occurred in the print job sent via the network and the canceled job was stored.	 Check that the machine is connected to the network correctly. For details about your network environment, consult the administrator. The stored document can be printed. page168"Printing Documents Stored in the Printer from the Control Panel"
"All the remaining print volume has been allocated to another central managed client(s). The job has been cancelled."	The job was canceled because the usage count information could not be obtained from the Central Management machine.	All job slots are occupied by other devices. Check the status of the client machine.
"An error occurred while printing a job with Background Numbering. The job has been cancelled."	A size that is impossible to print was specified.	Specify a size smaller than 305.0 mm (12.0 inches) wide and 432.0 mm (17.0 inches) long in "Print On:" in the printer driver. When [Same as Original Size] is specified in "Print On:", reduce the size specified in "Print On:" or adjust the size in the application.
"An error occurred while processing an Unauthorized Copy Prevention job. The job was cancelled."	The settings in the printer driver are incorrect.	 Check the following in the printer driver: Is a value smaller than 600 dpi specified in [Resolution]? See "Applying Different Print Settings Depending on the Document Type", User Guide (HTML). Is only space(s) entered as the text to use for the background pattern in the unauthorized copy prevention function?

Message	Cause	Solution and reference
		 Is Document Server specified as the print method? See "Storing Documents to Print in the Machine", User Guide (HTML).
	Unauthorized copy prevention is given priority in [Settings for Administrator].	Consult the device administrator (or custom-privileges administrator who has equivalent privilege) for the settings of the machine. The machine administrator can change the setting in [Settings] [System Settings] [Settings for Administrator] [Security Pattern/Stamp] [Unauthorized Copy Prevention Printing: Printer]. See "Settings for Administrator", User Guide (HTML).
"Auto-registration of user information has failed."	The maximum number of items that can be registered has been exceeded and the authentication information for LDAP authentication or Windows authentication cannot be registered automatically.	Delete a user that is no longer necessary from the address book.
"Booklet/Half Fold is not available with the settings. The job has been cancelled."	A setting in which Booklet or Half-fold cannot be performed was specified, and printing was canceled.	Check the setting for the availability of the Booklet or Half-fold function. page308"List of Specifications"
"Cannot access the Memory Storage Device."	An USB flash memory device is unavailable for use.	Check that the external media is formatted in FAT16 or FAT32, and write protection is not enabled on the media.

Message	Cause	Solution and reference
		Check that the external media is not corrupted or damaged.
"Cannot store data of this size."	The paper size is too large.	Reduce the paper size of the document to send. The document to send cannot be stored at a custom size.
"Classification Code is incorrect. The job has been cancelled."	A classification code is not specified.	Consult the machine administrator (or custom-privileges administrator who has equivalent privilege) for the classification code, and enter the code in [Classification Code] in "Detailed Settings" on the [Basic] tab [Modify] under "Job Type" in the printer driver.
	The document was printed in a printer driver that does not support the	Request the machine administrator (or custom-privileges administrator who has equivalent privilege) to change the setting of the classification code.
	classification code.	Machine administrator: Change [Classification Code] to [Optional] in Web Image Monitor if necessary.
		See "Managing the Number of Printed Sheets Using the Classification Code", User Guide (HTML).
"Collate has been cancelled."	The sort function was canceled.	Turn off the power of the machine, wait for 10 seconds or more after confirming that the main power indicator is turned off, and then turn on the power.
C	A	page19"Turning On and Off the Power"
"Command Error"	A problem occurred in the data because of the communication status or another reason.	Check that the machine can communicate with the computer properly.
	A printer driver that does not support the machine was used.	Use the printer driver for the machine. Obtain and install the latest version of the driver.

Message	Cause	Solution and reference
	The print command did not complete correctly.	In the printer driver, go to the [Others] tab ▶ [Special Settings] ▶ [Image Quality] and then change [Vector/Raster:] to [Raster].
"Communication error with central management server has occurred. The job has been cancelled."	The job was canceled because a Central Management communication error occurred.	Check the status of the Central Management machine.
"Compressed Data Error."	Compressed data is corrupted.	Check that the tool used for creating the compressed data is functioning properly. Check that the machine see
		 Check that the machine can communicate with the computer properly.
"Data storage error."	Printing a document as Test Print, Locked Print, Hold Print, Store Print, or storing the document in Document Server failed. The internal storage is malfunctioning.	If the message persists even after you have turned the power off and then on, consider repairing the machine.
"Document Server is not available to use. Cannot store."	Use of the Document Server function is restricted.	Consult the user administrator (or custom-privileges administrator who has equivalent privilege).
"Duplex has been cancelled."	The paper source tray is not specified for duplex printing.	Specify to use the paper tray for duplex printing in [Settings] [Tray/Paper Settings] [Paper Size/Paper Type].
"Error has occurred."	An error such as a syntactic error has occurred.	Check that the PDF file to print does not have an error.

Message	Cause	Solution and reference
"Error occurred while processing a Compulsory Security Stamp print job. The job was cancelled."	The job was canceled because an error occurred while applying Compulsory Security Stamp.	When feeding paper from the bypass tray, specify the correct paper size and do not enable [Auto Detect].
"Exceeded max. capacity of Document Server.	The internal storage is almost full.	Reduce the size of the document to send.
Cannot store."		 Erase documents that are no longer needed.
		See "Deleting Documents Stored in the Machine", User Guide (HTML).
		See "Deleting Documents from Document Server", User Guide (HTML).
"Exceeded max. number of files. (Auto)"	The maximum number of Store Print jobs or the maximum number of jobs that can be managed for Hold Print (Auto) documents has been exceeded while storing a document printed by Normal Print as a Hold Print job by the error job storing function.	Erase a Hold Print (Auto) document that is no longer needed. See "Deleting Documents Stored in the Machine", User Guide (HTML).
"Exceeded max. number of files of Document Server. Cannot store."	The number of documents stored in the machine exceeds the maximum number.	Erase documents that are no longer needed. See "Deleting Documents from Document Server", User Guide (HTML).

Message	Cause	Solution and reference
"Exceeded max. number of pages. (Auto)"	An "exceeded max. number of pages" error occurred while storing a document printed by Normal Print as a Hold Print job by the error job storing function.	 Reduce the number of pages to print. Erase documents that are no longer needed. See "Deleting Documents Stored in the Machine", User Guide (HTML). See "Deleting Documents from Document Server", User Guide (HTML).
"Exceeded max. number of pages of Document Server. Cannot store."	The number of pages stored in the machine exceeds the maximum number.	 Reduce the number of pages in the document to send. Erase documents that are no longer needed. See "Deleting Documents from Document Server", User Guide (HTML).
"Exceeded max. pages. Collate is incomplete."	The maximum number of sheets that can be sorted has been exceeded.	Reduce the number of pages to print.
"Exceeded the maximum number of multi-sheet fold. The job has been cancelled."	The maximum number of sheets that can be specified for multisheet fold has been exceeded. The multi-sheet fold job was canceled.	Check the number of sheets that can be specified for multi-sheet fold. page308"List of Specifications"
"Exceeded the maximum number of multi-sheet fold. The job has been cancelled."	The maximum number of sheets that can be specified for multisheet fold has been exceeded.	Check the number of sheets that can be specified for multi-sheet fold, and then reduce the number of originals before loading them. page308"List of Specifications" When the internal multi-fold unit is attached, you can specify whether to continue or stop printing in [Settings] [Printer Settings] [System] [Error Action] [When Exceeded Maximum Number of Multi-sheet Fold].

Message	Cause	Solution and reference
		See "System", User Guide (HTML).
"Exceeded the maximum unit count for Print Volume Use. The job has been cancelled."	When the print volume is limited, printing was canceled because the print volume of a user exceeded the upper limit allotted for the user.	For details about the print volume use limitation, consult the user administrator (or custom-privileges administrator who has equivalent privilege). The user administrator can clear the counter or change the limit on the print volume. See "Confirming the Counter for Each User", User Guide (HTML). See "Specifying Maximum Print Volume Use of Each User", User Guide (HTML).
"File system is full."	The file system is full, and the PDF file cannot be printed.	Erase documents that are no longer needed. See "Deleting Documents Stored in the Machine", User Guide (HTML). See "Deleting Documents from Document Server", User Guide (HTML).
"Hardware Problem: Internal storage"	An error is occurring on the internal storage of the machine.	Turn off the power of the machine, wait for 10 seconds or more after confirming that the main power indicator is turned off, and then turn on the power.
"Hardware Problem: USB"	An error has occurred on the USB interface.	page19"Turning On and Off the Power" If the message persists even after you have turned the power off and then on,
"Hardware Problem: Ethernet"	An error has occurred in the Ethernet interface.	consider repairing the machine.
"Hardware Problem: Wireless Card"	An error has occurred in the wireless LAN board.	Turn off the power of the machine, check that the Wireless LAN board is correctly installed in the machine, and then turn on the power. page19"Turning On and Off the Power"
		If the message persists even after you have turned the power off and then on, consider repairing the machine.

Message	Cause	Solution and reference
"Information for user authentication is already registered for another user."	In LDAP authentication, the same name is registered under different IDs on different servers, and duplicate names (account names) occurred such as when switching the domain (server).	Consult the user administrator (or custom-privileges administrator who has equivalent privilege). User administrator: Delete the corresponding user from the address book, and register the user again after resolving the duplicate names on different servers.
"Insufficient Memory"	The amount of available memory is insufficient.	Decrease [Resolution] in the printer driver. See "Applying Different Print Settings Depending on the Document Type", User Guide (HTML).
"Out of paper in the following paper tray. Load paper." "To force print, select another tray and press [Print] key."	The paper tray specified in the printer driver has no paper loaded.	 To proceed with printing after changing the paper setting, select a tray and press [Print]. However, when Staple, Punch, Fold, Cover Sheet, Slip Sheet, Chaptering, or Designate is specified, or when Duplex printing is specified on a paper tray that does not support the function, printing cannot be performed. When Sort is specified, only one copy of the document is printed. To proceed with printing on the specified paper, load the paper in the tray. page76"Loading Paper into the Paper Tray"
"Memory Overflow"	The insufficient memory error has occurred while printing from the printer driver (PCL 6).	In the printer driver, go to the [Others] tab ▶ [Special Settings] ▶ [Image Quality] and then change [Vector/Raster:] to [Raster].

Message	Cause	Solution and reference
"Memory Retrieval Error"	The data in the memory could not be retrieved.	Turn off the power of the machine, wait for 10 seconds or more after confirming that the main power indicator is turned off, and then turn on the power. page19"Turning On and Off the Power"
"No response from the server. Authentication has failed."	In LDAP or Windows authentication, a timeout error occurred while submitting an authentication query to the server.	 Consult the administrator of the authentication server. When using the Active Directory of the Windows server for LDAP Authentication, change [Settings] [System Settings] [Settings for Administrator] [Authentication/Charge] [Administrator Authentication/User Authentication/App Auth.] [LDAP Search] "Follow Referrals on LDAP Server" to [Inactive].
"Output tray has been changed."	The destination to deliver the output paper was changed because of the paper size limitation of the output destination.	Specify the correct destination to deliver the output paper.
"Out of paper in the following paper tray. Load paper."	The paper size or paper type specified in the printer driver does not match the paper settings, in the machine, for the bypass tray.	Specify [Driver/Command] in [Settings] [Tray/Paper Settings] [Printer] [Tray Setting Priority] [Bypass Tray].

Message	Cause	Solution and reference
"There is no paper tray that matches the specified paper size/ paper type. Change the tray settings to the following paper size/ paper type, or select another tray and press [Print] key."	The paper tray loaded with paper of the size or type specified in the printer driver is not available.	 To proceed with printing after changing the paper setting, select a tray and press [Print]. When Staple, Punch, Fold, Cover Sheet, Slip Sheet, Chaptering, or Designate is specified, or when Duplex printing is specified on a paper tray that does not support the function, printing cannot be performed. When Sort is specified, only one copy of the document is printed. To proceed with printing on the specified paper, load the paper and then check that the paper size and type are correctly specified in [Settings] [Tray/Paper Settings]. page76"Loading Paper into the Paper
		Tray"
"Printer font error."	There is a problem in the font file of the machine.	Consider repairing the machine.
"Print overrun."	A page image is discarded while printing the page.	Decrease [Resolution] in the printer driver. See "Applying Different Print Settings Depending on the Document Type", User Guide (HTML).
"Punch has been cancelled."	The Punch function was canceled because the staple position is specified incorrectly.	Check the orientation of the paper and print data, and the specified punch position. See "Punching Holes on Printed Pages", User Guide (HTML).
"Receiving data failed."	Transmission of data was canceled.	Send the data again.
"Sending data failed."	Transmission of data from the printer driver was canceled.	Check that the computer is operating normally.

Message	Cause	Solution and reference
"Staple error occurred. The job has been cancelled."	The number of sheets that can be stapled was exceeded, and printing was canceled.	Check the number of sheets that can be stabled on the finisher in use. page308"List of Specifications"
"Staple has been cancelled."	The staple function was canceled because the number of sheets exceeds the maximum that can be stapled or the staple position is specified incorrectly.	 Check the specification of the finisher in use, and specify the setting accordingly. Number of sheets that can be stapled together page 308" List of Specifications" Staple position that can be specified on different paper orientation and print data orientation See "Stapling Printed Pages", User Guide (HTML). Certain settings can produce staple results that might not be as expected when the paper is delivered to the output tray.
	A malfunction occurred temporarily on the machine.	Turn off the power of the machine, wait for 10 seconds or more after confirming that the main power indicator is turned off, and then turn on the power. page19"Turning On and Off the Power"
"The job was cancelled because the specified settings are not applicable for Booklet."	A condition in which binding cannot be performed was specified, and printing was canceled.	Check the binding condition.
"The print job has been cancelled because capture file(s) could not be stored: Exceeded max. memory."	The amount of available space on the internal storage became low while saving the capture data.	 Reduce the size of the document to send. Erase documents that are no longer needed. See "Deleting Documents Stored in the Machine", User Guide (HTML).

Message	Cause	Solution and reference
		See "Deleting Documents from Document Server", User Guide (HTML).
"The print job has been cancelled because capture file(s) could not be stored: Exceeded max. number of files."	The number of documents stored in the machine exceeded the maximum number while saving the capture data.	Erase documents that are no longer needed. See "Deleting Documents from Document Server", User Guide (HTML).
"The print job has been cancelled because capture file(s) could not be stored: Exceeded max. number of pages per file."	The number of pages stored in the machine exceeded the maximum number while saving the capture data.	 Reduce the number of pages in the document to send. Erase documents that are no longer needed. See "Deleting Documents from Document Server", User Guide (HTML).
"The selected paper size is not supported. This job has been cancelled."	A paper size that cannot be fed on the machine was specified and printing was canceled by the auto job cancel function that was activated.	Print the document on paper of a size that can be fed on the machine.
"The selected paper type is not supported. This job has been cancelled."	A paper type that cannot be fed on the machine was specified and printing was canceled by the auto job cancel function that was activated.	Print the document on paper of a type that can be fed on the machine.

Message	Cause	Solution and reference
"You do not have a privilege to use this function. This job has been cancelled."	Authentication information is not registered correctly in the printer driver.	Specify the authentication information in the printer driver. For the authentication information, consult the user administrator (or custom-privileges administrator who has equivalent privilege). See "Specifying Login Information in the Printer Driver", User Guide (HTML).
	The user registered in the printer driver does not have permission to use the printer function.	Consult the user administrator (or custom-privileges administrator who has equivalent privilege). The user administrator can change the access permissions in the address book. See "Confirming the Available Functions", User Guide (HTML).
"Z-fold error."	A setting in which Z-fold cannot be performed was specified, and the Z-fold function was canceled.	Check the tray, paper orientation and print data orientation settings, and the specified position for postprocessing.

Messages that Appear with Error Codes

Check the system configuration list or print settings list. The details of the error may also be printed in the list.

See "List/Test Print", User Guide (HTML).

Message	Cause	Solution and reference
"84: Error"	The amount of available work area is insufficient for processing images.	Reduce the transmission data.
"86: Error"	The parameter in the control code is incorrect.	Specify the correct parameter.
"92: The print job was cancelled."	Printing is canceled from the control panel.	To perform printing, operate the control panel again.

Message	Cause	Solution and reference
(displayed in the error history)		
"98: Error"	Accessing the internal storage failed.	Turn off the power of the machine, wait for 10 seconds or more after confirming that the main power indicator is turned off, and then turn on the power. page19"Turning On and Off the Power"
"99: Error"	When printing a file from an USB flash memory device, the file to print is in an unsupported format or corrupt.	Check the data to print.
"AC: Internal Storage is full."	The area reserved for forms or fonts in PostScript 3 is full.	Delete a registered form or font that is no longer necessary.
"AM: Internal Storage is full. (Auto)"	An overflow error occurred in the internal storage while storing a document printed by Normal Print as a Hold Print job by the error job storing function.	 Reduce the size of the document to print. Erase documents that are no longer needed. See "Deleting Documents Stored in the Machine", User Guide (HTML). See "Deleting Documents from Document Server", User Guide (HTML).
"BA4: Background Numbering is not available because Internal Storage is not installed. The job was cancelled."	Background Numbering was done without attaching the external device HDD.	Connect the external device HDD. If the situation does not improve even after connecting the HDD, contact your service representative.
"BAI: The job was cancelled because the authentication setting(s) has been changed."	The authentication setting was changed during printing, so printing was canceled by the auto job cancel function.	Check the authentication setting.

Message	Cause	Solution and reference
"BAJ: The job was cancelled because of a functional problem with the optional finisher."	A peripheral equipment had a problem, so printing was canceled by the auto job cancel function.	Contact your service representative.
"BAL: The job was cancelled because PS/PDF printing is prohibited. Please contact the administrator."	Printing of PostScript 3 and PDF is not enabled.	Consult your machine administrator. The machine administrator checks settings on [Settings] [Printer Settings] [Data Management/Maintenance] [Administrator Tools] [Prohibit Printing PS/PDF]. See "PS Menu", User Guide (HTML). See "PDF Menu", User Guide (HTML).
"BAM: Exceeded the maximum number of multi- sheet fold."	The maximum number of sheets that can be specified for multisheet fold has been exceeded.	Check the number of sheets that can be specified for multi-sheet fold, and then reduce the number of originals before loading them. page308"List of Specifications" When the internal multi-fold unit is attached, you can specify whether to continue or stop printing in [Settings] [Printer Settings] [System] [Error Action] [When Exceeded Maximum Number of Multi-sheet Fold]. See "System", User Guide (HTML).
"CB: The job was cancelled because the password is incorrect."	The entered password was incorrect, so printing was canceled by the auto job cancel function.	Confirm the correct password for the document and enter it.
"CC: The job was cancelled because the user ID is invalid."	The user ID was invalid, so printing was canceled by the auto job cancel function.	Enter the correct login username. Confirm the login username with the user administrator (or custom-privileges administrator who has equivalent privilege).

Message	Cause	Solution and reference
"CD: The job was cancelled because of an error with PS3/PDF."	A postscript language error occurred in PS3 or PDF printing, so printing was canceled by the auto job cancel function.	Check if there is a problem with the printing data.
"CE: The job was cancelled because of an error with PCL5e/XL."	An error occurred in PCL6 printing, so printing was canceled by the auto job cancel function.	Check that the machine can communicate properly with the PC.
"CK: The job was cancelled because of an error with XPS."	An error occurred in XPS printing, so printing was canceled by the auto job cancel function.	Check that the machine can communicate properly with the PC.
"CM: The job was cancelled because of a timeout error with PS3/PDF."	A timeout error occurred in PostScript 3 or PDF printing, so printing was canceled by the auto job cancel function.	 Check that the machine can communicate properly with the PC. PostScript 3 Check the following setting items. When [Use Machine Setting(s)] is selected, set the waiting time longer. When [Use Driver/Command] is selected, set the waiting time specified by the command longer. Check the setting of [Settings] [Printer Settings] [PS Menu] [Job Timeout].

Message	Cause	Solution and reference
"CN: The job was cancelled because the print settings specified by PS3 are not consistent with the machine settings."	Some of [Printer Settings] on the print data did not match the machine settings, so printing was canceled by the auto job cancel function.	Check that the printer settings specified in the print data match the settings in [Settings] ▶ [Printer Settings] ▶ [PS Menu].
"CO: The job was cancelled because of a font error with PS3/PDF."	A font error occurred in PostScript 3 or PDF printing, so printing was canceled by the auto job cancel function.	Register the required fonts.
"CP: The job was cancelled because of insufficient memory error with PS3/PDF."	An insufficient memory error occurred in PostScript 3 or PDF printing, so printing was canceled by the auto job cancel function.	Specify [Font Priority] in [Settings] [Printer Settings] [Memory] [Memory Usage].
"CQ: Some pages were not printed because they were blank."	An error occurred in RPCS printing, so printing was canceled by the auto job cancel function.	Consider repairing the machine.
"EB: The job was cancelled because [Restrict Direct Print Jobs] has been set to [Cancel All Direct Print Jobs]."	A printing job has been set to be canceled, so printing was canceled by the auto job cancel function.	Contact your machine administrator (or custom-privileges administrator who has equivalent privilege). Machine administrator can change the setting in [Settings] [Printer Settings] [Data Management/Maintenance] [Print Jobs] [Restrict Direct Print Jobs].

Message	Cause	Solution and reference
"EC: The job was cancelled because of a failure to store and skip an error job."	A document has been set to be stored or canceled when an error occurs and it did not operate, so printing was canceled by the auto job cancel function.	 Fix the error that occurred. You can check the settings of the operation when an error occurs in [Settings] ▶ [Printer Settings] ▶ [System] ▶ [Error Action] ▶ [Store and Skip Errored Job].
"ED: The specified paper size is not valid for 2 sided print and therefore Magazine finishing is not available. The job was cancelled."	A paper size that cannot be used for 2 sided print was specified and [Magazine] finishing was not available, so printing was canceled by the auto job cancel function.	When specifying [Magazine], check and specify the paper size that corresponds to 2 sided print. page308"List of Specifications"
"EE: There are mixed paper sizes therefore Magazine finishing is not available. The job was cancelled."	Two or more paper sizes were used and [Magazine] finishing was not available, so printing was cancelled by the auto job cancel function.	When specifying [Magazine], use sheets of the same size.
"P6: Print command from printer driver of another manufacturer has been received."	The document was printed using the printer driver of another manufacturer.	Check the type of printer driver being used.
"P7: RPCS driver for another model is being used."	The document was printed using an RPCS driver for another model, and in a condition that the machine cannot print.	Check the type of RPCS driver being used.

Message	Cause	Solution and reference
"P8: The data communication environment has become unstable."	A malfunction might be occurring in the data, such as corruption or a drop out.	Check that the machine is connected to the network correctly, and then send the data again. For details about your network environment, consult the administrator.

When a Message Appears While Using the Scanner Function



• When confirming or changing the settings in [Settings], press [Home] (after closing [Settings].

Messages that Appear on the Control Panel

Message	Cause	Solution and reference
"All the pages are detected as blank. No file was created."	The original was placed with the wrong side facing down when [Delete Blank Page] or [Delete Blank Page] in OCR setting is specified.	 When scanning on the exposure glass, place the original with the side to scan facing down. When scanning on the ADF, place the original with the side to scan facing up.
	All pages in the scanned original were determined to be blank when [Delete Blank Page] is specified.	Decrease the value specified in the following setting items. [Settings] [Scanner Settings] [Scan] [Blank Page Detection] [Blank Page Detection Level]
	All pages in the scanned original were determined to be blank when [Delete Blank Page] in OCR is specified.	Change the following setting items. [Settings] ▶ [Scanner Settings] ▶ [Scan] ▶ [Blank Page Detection] ▶ [Blank Page Detection Level] to [Sensitivity Level 1]

8

Message	Cause	Solution and reference
"Authentication with the destination has failed. Check settings. To check the current status, press [Scan Files Status]."	The user name/password of SMTP authentication specified when sending the e-mail are incorrect.	Select the destination in the address book, press [Edit], and check the setting in [Destinations] tab [Email Address].
	The user ID/password specified on the destination folder in Send to Folder are incorrect.	 Select the forwarding destination in the address book, press [Edit], and check the information registered in [Destinations] tab ► [Folder] ► [Folder Authentication Info]. Adding "@domain-name" behind the user name may resolve the problem.
		 When a login password is not specified on your computer, specify a login password on the computer and register it to the machine.
"Cannot access the Memory Storage Device."	An USB flash memory device is unavailable for use.	 Check that the external media is formatted in FAT16 or FAT32, and write encryption or protection is not enabled on the media.
		 Check that the external media is not corrupted or damaged.
"Cannot detect original size. Select scan size."	An original is not placed correctly on the machine.	Place the original correctly. When you place an original on the exposure glass, the machine detects the original size by opening and closing the exposure glass cover or ADF. Open the cover or ADF by more than 30 degrees when placing an original.
	An original with a difficult-to-detect size even in the regular size is placed on the machine.	When scanning an original with a difficult-to-detect size, specify [Send Settings] [Scan Size]. page303"Sizes Detectable with Auto Paper Select"

Message	Cause	Solution and reference
	An original with a custom size is placed on the machine.	When scanning an original with a custom size, specify the original size in [Send Settings] ▶ [Scan Size] ▶ [Custom Size].
"Cannot find the specified path. Please check the settings."	The machine or the computer is not connected to the network correctly.	Check that the machine or the computer is connected to the network correctly. For details about your network environment, consult the administrator.
	The computer name or folder name specified in the path name is incorrect.	Register the computer name and folder name again.
	The firewall function is enabled on the computer.	In the firewall function on the computer, register the machine IP address and the port to use for sending files as exceptions. You can check the IP address in [Check Status] "Network". For details about the ports, see the following: page308"List of Specifications"
"Check original's orientation."	The original is placed in the wrong orientation.	Depending on the combination of the specified settings, the orientation to set the original differs. Be sure to place the original in the correct orientation. See "Placing an Original to Scan", User Guide (HTML).
"Connection with PC has failed. Check the settings."	The machine or the computer is not connected to the network correctly.	Check that the machine or the computer is connected to the network correctly. For details about your network environment, consult the administrator.
	The computer name or folder name specified in the path name is incorrect.	Register the computer name and folder name again.
	The firewall function is enabled on the computer.	In the firewall function on the computer, register the machine IP address and the port to use for sending files as exceptions.

Message	Cause	Solution and reference
		You can check the IP address in [Check Status] ▶ "Network". For details about the ports, see the following: page308"List of Specifications"
"Connection with the destination has failed. Check the settings. Entered path name might be incorrect, or firewall and security settings might be blocking network connectivity."	The firewall function is enabled on the computer.	Enable file and printer sharing in the firewall function on your computer.
"Exceeded max. data capacity. Check resolution and ratio then press [Start] again."	The data scanned by specifying [Scan Ratio] [Specify Size] exceeds the limit.	 Decrease [Send Settings] [Resolution]. Specify a smaller paper size in [Send Settings] [Scan Ratio] [Specify Size].
"Exceeded max. data capacity." "Check the scanning resolution, then press [Start] again." (A procedure other than [Start] may be described in [Start].)	A large size original was scanned at a high resolution, and the resulting data size exceeds the limit.	 Decrease [Send Settings] [Resolution]. Specify a smaller size in [Send Settings] [Scan Size].
"Exceeded max. email size. Sending email has been cancelled. Contact the administrator about max. email size."	The file size per page has exceeded the maximum email size specified in [Maximum Email Size].	 Specify a lower value in [Send Settings] ► [Resolution], or select a smaller paper size in [Send Settings] ► [Scan Ratio] ► [Specify Size].

Message	Cause	Solution and reference
		You can change the [Maximum Email Size] setting on [Settings] [Scanner Settings] [Sending Settings] [Email (Size)]. To divide an e-mail that exceeds the maximum size, specify [Yes (per Page)] or [Yes (per Max. Size)] in [Divide & Send Email].
"Exceeded max. number of alphanumeric characters."	The number of entered characters has exceeded the maximum.	Check the maximum number of characters. page381"The Setting Values of the Transmission Function"
"Failed to connect to the destination. Please contact the administrator to check the following. *The correct root certificate is registered to this machine and destination. *The root certificate check function is not enabled by mistake."	Email was sent to the destination without an installed certificate of the destination server when "Root Certificate Check" was set to [Active].	Contact your network administrator. (or custom-privileges administrator who has equivalent privilege) Network administrator should install the root certificate of the destination server in Web Image Monitor if required, or set "Root Certificate Check" to [Inactive]. See "Controlling Access to Untrusted Websites from the Control Panel", User Guide (HTML).
"Insufficient memory in the memory storage device."	There is no free space available on the USB flash memory device, or the file could not be saved due to insufficient space on the media.	Change the external media. When scanning an original in the dividedocument or single-page mode, the saved data may not contain all pages in the original. Change the external media and press [Retry] to resume saving the remaining data.
"Not all of the image will be scanned.	The scaling factor specified in [Scan Ratio] is too large.	Specify a smaller value in [Send Settings] [Scan Ratio].

Message	Cause	Solution and reference
Check the ratio and then press [Start] again."	The paper size specified in [Scan Ratio] [Specify Size] requires a reduction value smaller than 25%.	Specify a paper size for which a reduction ratio greater than 25% is specified in [Send Settings] ▶ [Scan Ratio] ▶ [Specify Size].
"Programmed. Cannot program the destination(s) that is not programmed in the address book."	A folder specified by Manual Entry is included among the programmed destinations.	Register the destination in the address book of the machine, and then register it to a program.
"Programmed. Cannot program the folder destination(s) with protection code(s)."	A destination specified with a protection code is included among the programmed destinations.	 You cannot program a destination specified with a protection code. Specify this destination individually. To program this destination, cancel the protection code and then register the destination to a program. See "Using the Protection Function to Prevent the Misuse of Addresses", User Guide (HTML).
"SMTP authentication email address and administrator email address mismatch."	The SMTP authentication e- mail address is not registered in the administrator e- mail address.	Register the SMTP authentication e-mail address in [Settings] [System Settings] [Send (Email/Folder)] [Email] [Administrator's Email Address].
"Some invalid destination(s) contained. Do you want to select only valid destination(s)?"	The group contains an e-mail address.	When sending data to a destination other than an e-mail address, press [Yes].
"The program is recalled. Cannot recall the folder destination(s) with protection code(s)."	A folder destination specified with a protection code is included among the programmed destinations.	You cannot recall a destination specified with a protection code in a program. Specify this destination individually.

Message	Cause	Solution and reference
		To program this destination, cancel the protection code and then register the destination to a program. See "Using the Protection Function to Prevent the Misuse of Addresses", User Guide (HTML).
"The size of the scanned data is too small. Check the resolution and the ratio and then press [Start] again."	The data scanned by specifying [Scan Ratio] ▶ [Specify Size] is too small.	 Increase [Send Settings] [Resolution]. Specify a larger paper size in [Send Settings] [Scan Ratio] [Specify Size].
"Transmission has failed. Insufficient memory in the destination internal storage. To check the current status, press [Scan Files Status]."	The amount of available internal storage space on the destination computer, SMTP server, or FTP server is insufficient.	Check that the amount of free space is sufficient.
"Transmission has failed. To check the current status, press [Scan Files Status]."	A network error occurred while transferring the data due to a busy network or another reason.	If the same message is displayed after scanning the original again, consult the administrator.
	The machine or the computer is not connected to the network correctly.	Check that the machine or the computer is connected to the network correctly. For details about your network environment, consult the administrator.
"Authentication with the destination has failed. Check settings. To check the current status, press [Scan Files Status]."	The user name or password is incorrect.	 Please check the SMTP authentication user name and password. Please check the destination folder ID and password. The maximum number of alphanumeric characters that can be registered to a password is 128. Set a different password that is less than 128 characters.

Messages that Appear on the Computer

Message	Cause	Solution and reference
"Any of Login User Name, Login Password or Driver Encryption Key is incorrect."	The login user name or password entered in [General User Authentication] is incorrect.	Enter the correct login user name and password in [General User Authentication]. For the login user name and password, consult the user administrator (or custom-privileges administrator who has equivalent privilege).
	The driver encryption key is not registered correctly in the TWAIN driver.	Register the driver encryption key on [Details] [Authenticate] tab in the TWAIN driver. For the driver encryption key, consult the network administrator (or custom-privileges administrator who has equivalent privilege).
"The authentication password and / or authentication algorithm may be incorrect, or the machine does not support the authentication algorithm. Please check."	The SNMPv3 authentication information registered in Network Connection Tool does not match the information of the machine.	Consult the network administrator (or custom-privileges administrator who has equivalent privilege) for the SNMPv3 authentication information, and change the information registered in Network Connection Tool. See "Installing the TWAIN Driver", User Guide (HTML).
"Authentication succeeded. However, the access privileges for scanner function has been denied."	The logged-in user does not have access privileges to use the scanner function.	Consult the user administrator (or custom-privileges administrator who has equivalent privilege). The user administrator can change the access permissions in the address book. See "Confirming the Available Functions", User Guide (HTML).
"Cannot add any more scanning mode."	The maximum number of scanning modes that can be registered exceeds the maximum number (100).	Delete scanning modes that are no longer necessary.

Message	Cause	Solution and reference
"Failed to connect to the destination. Please contact the administrator to check the following. *The correct root certificate is registered to this machine and destination. *The root certificate check function is not enabled by mistake."	The firewall function is enabled on the computer.	Configure the firewall function of the computer to allow communication of the application used, or disable the firewall function.
"Cannot detect the paper size of the original. Specify the scanning size."	The original is not placed correctly on the machine.	When you place an original on the exposure glass, the machine detects the original size by opening and closing the exposure glass cover or ADF. Open the cover or ADF by more than 30 degrees when placing an original.
	An original with a difficult-to-detect size even in the regular size is placed on the machine.	When scanning an original with a difficult-to-detect size, specify [Send Settings] [Scan Size]. page303"Sizes Detectable with Auto Paper Select"
	An original with a custom size is placed on the machine.	When scanning an original with a custom size, specify the original size in [Send Settings] [Scan Size] [Custom Size].
"Cannot specify any more scanning area."	The maximum number of scanning areas that can be registered exceeds the maximum number (100).	Delete scanning areas that are no longer necessary.
"Communication error has occurred on the network."	A communication error has occurred on the network.	Check that the settings for the communication protocol (TCP/IP) are configured correctly on the computer.


Message	Cause	Solution and reference
"Entered User Code is not registered or you do not have access privileges to use the scanner function, please contact your administrator."	The correct user code is not registered in the TWAIN drive when User Code authentication is specified on the machine.	Register the User Code on [Details] [Authenticate] tab in the TWAIN driver. For the User Code, consult the user administrator (or custom-privileges administrator who has equivalent privilege).
	The User Code registered in the TWAIN driver is not assigned with the privileges to use the scanner function.	Consult the user administrator (or custom-privileges administrator who has equivalent privilege). The user administrator can change the access permissions in the address book. See "Confirming the Available Functions", User Guide (HTML).
"Error has occurred in the scanner."	The scan condition specified in the application exceeds the range that can be specified on the machine.	Specify the scan condition within the range that can be specified on the machine. page308"List of Specifications"
	A malfunction is occurring in the driver.	 Restart the application, and perform scanning again. Install the TWAIN driver again. See "Installing the TWAIN Driver", User Guide (HTML).
	A malfunction is temporarily occurring on the machine.	Turn off the power of the machine, wait for 10 seconds or more after confirming that the main power indicator is turned off, and then turn on the power. page19"Turning On and Off the Power"
"Error has occurred in the scanner driver."	An error is occurring in the driver or operating system.	Restart the computer.

Message	Cause	Solution and reference
	There is a problem with the network environment.	Check that the computer is connected to the network correctly and in an environment where the TCP/IP protocol can be used.
"Fatal error has occurred in the scanner."	An unrecoverable error is occurring on the machine.	Consider repairing the machine.
"Insufficient memory. Close all other applications, then restart scanning."	Other applications are running on the computer, and the amount of free memory is insufficient.	 Close applications on the computer. If the same message is displayed when no other applications are running after starting the computer, uninstall the TWAIN driver, restart the computer, and then install the TWAIN driver again.
"Insufficient memory. Reduce the scanning area."	The memory allocated for the scanner function is insufficient.	 Reduce the scan size or resolution. You may be able to resolve the error also by reducing the brightness value when Duotone (black and white) or a high resolution is specified. Specify [No Compression] on [Initial Settings] (Compression] tab in the TWAIN driver.
"Invalid Winsock version. Please use version 1.1 or higher."	Winsock is corrupted.	Restore Winsock on the computer.
"Scanner is not available. Check the	An access mask is specified.	Consult your administrator.
scanner connection status."	The power of the machine is not turned on, or the machine is not connected to the network correctly.	Check that the machine is turned on, and connected to the network correctly.
	The firewall function is enabled on the computer.	Configure the firewall function of the computer to allow communication of the application used, or disable the firewall function.

Message	Cause	Solution and reference
	The IP address of the machine could not be resolved from the host name.	Check that the host name of the machine is configured in Network Connection Tool that is installed with the TWAIN driver. See "Installing the TWAIN Driver", User Guide (HTML).
	The IPv6 address could not be obtained when only IPv6 is enabled on the machine.	Log in to Web Image Monitor in the administrator mode, and select [Active] in [IPv4] "LLMNR" under [Device Management] [Configuration] "Network".
"Scanner is not available on the specified device."	The TWAIN scanner function is disabled on the machine.	The TWAIN scanner function cannot be used.
"Scanner is not ready. Check the scanner and the options."	The ADF is open.	Close the ADF.
"Scanning has been aborted because memory in Mainframe became full."	The amount of available space on the internal storage of the machine is insufficient when scanning is performed with the [Read-ahead] check box selected in the TWAIN driver.	 Clear the [Read-ahead] check box in the TWAIN driver. Erase documents that are no longer needed from the machine.
"The device's authentication service cannot be performed."	Authentication cannot be performed because the authentication service is starting up or busy.	 When User Code or Basic authentication is specified, wait a while until processing the machine address is completed. When Windows or LDAP authentication is specified, wait a while until the server becomes ready for processing. If authentication is not possible even after waiting for a while, consult your administrator.
	The network is busy.	Wait a while.

Message	Cause	Solution and reference
"There is no response from the scanner. There may be a number of	The firewall function is enabled on the computer.	Configure the firewall function of the computer to allow communication of the application used, or disable the firewall function.
reasons for this, e.g. the data between the computer and scanner has been lost because of an increase in network traffic, the firewall in the virus protection software may be activated, or there might be problems with the hardware etc. If you can not fix this problem, please call service."	The machine or the computer is not connected to the network correctly.	Check that the machine or the computer is connected to the network correctly.
"User Authentication in SNMPv3 connection has failed."	The authentication information is registered incorrectly in Network Connection Tool when SNMPv3 encrypted communication is enabled on the machine.	Register the SNMPv3 authentication information in Network Connection Tool that is installed on the computer with the TWAIN driver. For the SNMPv3 authentication information, consult your network administrator (or customprivileges administrator who has equivalent privilege). See "Installing the TWAIN Driver", User Guide (HTML).

When Other Messages Appear

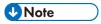

• When confirming or changing the settings in [Settings], press [Home] (after closing [Settings].

Message	Cause	Solution and reference
"Administrator Authentication for User Management must be set to on before this selection can be made."	The User Management privilege is disabled in the administrator authentication management.	When specifying Basic, Windows, or LDAP authentication, configure the User Management privilege in [Settings] [System Settings] [Settings for Administrator] [Authentication/Charge] [Administrator Authentication/User Authentication/App Auth.] [Administrator Authentication Management]. See "Registering Standard-Privileges
		Administrators", User Guide (HTML). Or, configure a custom-privileges
		administrator who has privileges that are equivalent to User Management.
		See "Registering Custom-Privileges Administrators", User Guide (HTML).
"The destination list/machine settings have been updated. If the destinations or function settings were selected, they may have been cleared, please reselect them."	A destination is being registered and devices are being configured using Web Image Monitor.	Wait until the message disappears and do not turn off the power of the machine. You may not be able to perform operations for a while depending on the number of destinations being registered.
"Error: Connection to Server"	The machine or the computer is not connected to the network correctly.	Check that the machine or the computer is connected to the network correctly. For details about your network environment, consult the administrator.
"Error: Proxy Authentication"	A proxy authentication error occurred.	Check whether the Network/Interface ([DNS Configuration], [Control Panel: Proxy Settings]) are correctly configured.
"Failed to read the PDF file."	The user attempted to display a PDF file that is not supported by the Web browser of the machine.	The Web browser of the machine supports the PDF versions and encryption levels shown below. Other PDF files cannot be displayed. • PDF version: 1.3-1.7

Message	Cause	Solution and reference
		• PDF encryption level: 128-bit AES, 256-bit AES
"Firmware update will start. Press [OK]. It will start automatically after 30 seconds"	A firmware update is available, and the machine is about to perform an update.	It is recommended to apply the update, but you can stop the updating process by pressing [Stop] within 30 seconds after the message is displayed. Do not turn off the power of the machine while the updating process is in progress.
"Internal cooling fan is active."	The fan installed in the vent for cooling the interior of the machine became active after a large number of pages has been printed.	You may hear a rotating noise while the fan is active, but you can continue using the machine as usual.
"Notice: Call Service Failed"	Service call has failed.	Try again later.
"Notice: Supply Order Failed"	Ordering supplies has failed.	Try again later.
"Output Tray is full. Remove paper."	The output tray is full.	Remove the paper from the output tray. When the finisher shift tray or internal multi-fold unit is specified as the output destination, press [Stop] to pause printing and then remove the output paper to prevent paper from falling off the tray.
"Printing Stop Due to Low Voltage" "Printing has stopped due to low voltage at the power supply from	Power supply voltage is low.	Turn off the power of the machine, wait for 10 seconds or more after confirming that the main power indicator is turned off, and then turn on the power. page19"Turning On and Off the Power" Avoid taking the following actions.
the wall outlet. Turn the main power switch off then on. Refer to the manual for details."		 Using any power supply voltage or frequencies other than those that match the specifications shown Using multi-socket adaptors or extension cords
		See "Installation Requirements After Moving the Machine", User Guide (HTML).

Message	Cause	Solution and reference
"Problems with the wireless board." "Please call service."	The wireless LAN board can be accessed, but an error has been detected.	Turn off the power of the machine, check that the wireless LAN board is correctly installed in the machine, and then turn on the power. page19"Turning On and Off the Power" If the message persists even after you have turned the power off and then on, consider repairing the machine.
"Stopped Due to High Voltage" "Operation has stopped due to high voltage at the power supply from the wall outlet. Turn the main power switch off then on. If this screen appears again, turn the main power off, disconnect the power cord, and then call for service."	Power supply voltage is high.	Turn off the power of the machine, wait for 10 seconds or more after confirming that the main power indicator is turned off, and then turn on the power. page19"Turning On and Off the Power" If the message persists even after you have turned the power off and then on, turn off the power of the machine, and then disconnect the power cord plug from the wall outlet before you contact your service representative. See "Installation Requirements After Moving the Machine", User Guide (HTML).
"Updating the destination list Please wait. Specified destination(s) or sender's name has been cleared."	A destination is being registered using Web Image Monitor.	Wait until the message disappears and do not turn off the power of the machine. You may not be able to perform operations for a while depending on the number of destinations being registered.
"Updating the destination list has	A network error occurred.	Check the connection between the machine and the computer.
failed. Try again?"	Anti-virus software or a firewall function is running on the computer.	Add the destination list program to the exception list in the anti-virus software on the computer, or register the machine IP address to the exception list in the firewall function. You can check the IP address in [Check Status] "Network".

Message

Cause

Solution and reference

Messages that Appear When Machine Login Fails

Check the error code displayed with the "Authentication has failed." message, and taken the necessary action.



- The letter at the beginning of the error code indicates the type of authentication specified on the machine.
 - · B: Basic authentication
 - · W: Windows authentication
 - · L: LDAP authentication

Message	Cause	Solution and reference
"Authentication has failed." B/W/L0103-000	An operation in the TWAIN supporting application was performed from the computer while a user was logged in to the machine or performing the login procedure.	Check whether another user is logged in to the machine, and then perform the operation.
"Authentication has failed."	An incorrect password was entered.	Enter the correct password.

8

Message	Cause	Solution and reference
B/W/L0104-000	The Driver Encryption Key is not registered correctly in the TWAIN driver.	Consult the network administrator (or custom-privileges administrator who has equivalent privilege) whether the Driver Encryption Key is required, and configure the driver accordingly. See "Specifying Login Information in the Printer Driver", User Guide (HTML). See "Specifying Login Information in the LAN-Fax Driver", User Guide (HTML). The network administrator can check the setting of "Driver Encryption Key: Encryption Strength" in [Settings] [System Settings] [Settings for Administrator] [Security]
		[Extended Security Settings].
"Authentication has failed." B/W/L0206-002	An incorrect login user name or password was entered.	Enter the correct login user name and password.
	A user has attempted to log in to the functions that can be accessed only by the administrator such as [Settings] when [Application Authentication Management] is specified.	The user needs to log in from the application login screen.
"Authentication has failed." B/W/L0206-003	":" or another character that cannot be used in a login user name was entered.	 Enter the correct login user name. Change the user name if it contains a space, ":" or other unusable characters.
"Authentication has failed." B/W/L0207-001	Web Image Monitor or another method was used to edit or create a backup of the address book.	Wait a while.

Message	Cause	Solution and reference
"Authentication has failed." B/W/L0208-000 B/W/L0208-002	The account is locked because the number of failed login attempts has exceeded the limit.	Request the user administrator (or custom-privileges administrator who has equivalent privilege) to unlock the account.
"Authentication has failed." L0307-001	Web Image Monitor or another method was used to edit or create a backup of the address book.	Try again later.
"Authentication has failed." W0400-102	Kerberos authentication has failed because the server was not responsive.	Check whether the server is operating normally.
"Authentication has failed." W0400-200	Available resources are insufficient due to too many authentication requests.	Try again later.
"Authentication has failed." W0400-202	sAMAccountName was used as the login user name when a user in the child domain logged in under a parent- child domain environment, and ldap_bind failed.	Use UserPrincipalName as the login user name.
	The SSL settings specified on the authentication server and the device do not match.	Check whether the SSL settings specified on the authentication server and the device match.

Message	Cause	Solution and reference
"Authentication has failed." L0400-210	The login name attribute is not specified, or an attribute on which the information cannot be obtained is specified.	Check whether [Login Name Attribute] is specified correctly. See "Verifying Users to Operate the Machine (User Authentication)", User Guide (HTML).
"Authentication has failed." W/L0406-003	":" or other characters that cannot be used in a login user name was entered.	 Enter the correct login user name. Change the user name if it contains a space, ":" or other unusable characters.
"Authentication has failed." W0406-101	Too many requests for authentication occurred at one time.	Try again later. If the problem persists, check whether the machine is under an authentication attack. The attack status can be checked by the screen message, in the system log, or in the e-mail notification sent to the administrator.
"Authentication has failed." W0406-107	A user group cannot be obtained.	Check whether the group name registered on the machine is correct and whether the DC settings are configured correctly.*1
	Kerberos Authentication has failed.	Check whether the realm name registered on the clock at the KDC (key distribution center) and the clock of the device are synchronized.*3
	No connection is established to the authentication server.	Enter the server IP address or host name in [Settings] [System Settings] [Network/Interface] [Ping Command] to check whether a connection can be established to the server.
	The domain name is incorrect or cannot be resolved.	Check whether the domain name registered on the machine is correct and whether the name can be resolved.*2
	The login user name or password is incorrect.	Check the login user name and/or password of the user registered on the server.

Message	Cause	Solution and reference
"Authentication has failed." L0406-200	Too many requests for authentication occurred at one time.	Try again later. If the problem persists, check whether the machine is under an authentication attack. The attack status can be checked by the screen message, in the system log, or in the e-mail notification sent to the administrator.
"Authentication has failed." L0406-201	[Off] is specified in the authentication settings of the LDAP server.	Select the server in [Settings] [System Settings] [Settings for Administrator] [Authentication/Charge] [Administrator Authentication/User Authentication/App Auth.] [Register/Change/Delete LDAP Server], and then press [Register/Change] and set [Authentication] to a setting other than [Off].
"Authentication has failed." L0406-202 L0406-203	The LDAP authentication settings or LDAP server settings are incorrect.	Check whether the LDAP authentication settings or LDAP server settings are correctly configured.*4 Check whether the SSL settings are supported on the LDAP server.
	The login user name or password is incorrect.	Enter the correct login user name and password. Change the login user name if it exceeds 128 bytes in length or contains a space, ":" or other unusable character.
	The simplified authentication mode is incorrectly used.	Check whether the server name, login user name, password, and information entered into the search filter are correct. Note that authentication cannot be performed if obtaining DN of the login user name under the representative account fails in the simple authentication mode.
"Authentication has failed." L0406-204	Kerberos Authentication has failed.	Check whether the realm name registered on the clock at the KDC (key distribution center) and the clock of the device are synchronized.*3

Message	Cause	Solution and reference
"Authentication has failed." W/L0409-000	There was no response returned from the authentication server, and an authentication timeout error occurred.	Check the status of the network and the server to use for authentication.
"Authentication has failed." W/L0511-000 W0517-000	The user registered on the machine has the same name as another user distinguished by the unique attribute of the authentication server.	 Delete the older user that is redundant, or change the login name. If the message is displayed after switching the authentication server, delete the user on the old server.
"Authentication has failed." W/L0606-004	A user name that cannot be specified in the login user name was specified.	Do not use "other", "admin", "supervisor", or "HIDE*" in user account names.
"Authentication has failed." W/L0607-001	Web Image Monitor or another method was used to edit or create a backup of the address book.	Wait a while.
"Authentication has failed." W/L0612-005	The number of users registered in the address book has reached the upper limit, and auto-registration failed.	Ask the user administrator (or custom- privileges administrator who has equivalent privilege) to delete users that are no longer needed from the address book.
"Authentication has failed." W/L0707-001	Web Image Monitor or another method was used to edit or create a backup of the address book.	Wait a while.

Message	Cause	Solution and reference
"Authentication has failed." B/W/L0913-023	Auto-registration of a user on the server machine has failed when authentication was performed on the client machine using Central Management.	 Check the network communication between the client and server machines. Registration cannot be performed while the address book of the server machine is being edited.

- *1 When obtaining user groups, check the following:
 - The user account that can obtain user groups is sAMAccountName (user). Do not use UserPrincipalName (user@domain.XXX.co.jp) as the user name.
 - Check whether the name in "Group" is correctly specified including the case-sensitivity in [Settings]
 [System Settings]
 [Settings for Administrator]
 [Authentication/Charge]
 [Administrator Authentication/User Authentication/App Auth.]
 [User Authentication Management]
 [Windows Authentication].
 - Select the user in the address book, press [Edit], and then check that [Unavailable] is specified for each function under the [User Management / Other] tab
 [User Management]
 [Available Functions / Applications].
 - Check whether "Global Scope" is specified as the scope of the group in a property for the user group created in DC, and the group type specified in "Security". Also check whether an account is registered to the user group that has been created. If more than one DC exists, check whether a trust relationship between DCs is established.
- *2 To resolve the domain name, see the following:
 - Check whether [Domain Name Configuration] and [DNS Configuration] or [WINS Configuration] is specified correctly in [Settings]
 [Network/Interface].
 - Enter the IP address in [Domain Name Configuration] to check the connection. If authentication can be performed using the IP address, check [DNS Configuration] or [WINS Configuration] again.
 - If authentication by IP address is not possible, check whether LM/NTLM is set to be denied in the domain controller security policy or domain security policy. Also check that the port is not closed in the firewall between the device and the domain controller or in the firewall settings of the domain controller. When the Windows firewall is enabled, create a new rule that allows communication on port 137 and port 139 in "Advanced" of the Windows firewall. Open the TCP/IP properties from the network connection properties, select the "Enable NetBIOS Over TCP/IP" check box on [Advanced] (WINS) tab, and open port 137.

8

*3 For Kerberos authentication, check the following:

- Check that "Realm Name", "KDC Server Name", "Domain Name" are specified correctly in [Settings]
 [System Settings]
 [Settings for Administrator]
 [Authentication/Charge]
 [Administrator Authentication/User Authentication/App Auth.]
 [Register/Change/Delete Realm]. Enter "Realm Name" in upper case.
- Configure the setting so that the difference in time between the clocks on KDC and device is less than five minutes. The clock on the machine can be adjusted in [Settings] ▶ [System Settings] ▶ [Date/Time/Timer] ▶ [Date/Time] ▶ [Set Time].
- Kerberos authentication fails if auto-obtaining of KDC in Windows authentication fails. When auto-obtaining cannot be activated, switch to manual.

*4 For LDAP settings, check the following:

- Check whether the LDAP server is correctly specified in [Settings] [System Settings] [Settings for Administrator] [Authentication/Charge] [Administrator Authentication/User Authentication/App Auth.] [User Authentication Management] [LDAP Authentication] or [Custom Authentication].
- Check that the representative account is registered in the following setting items, and then execute [Connection Test]. Select the server in [Settings] [System Settings] [Settings for Administrator] [Authentication/Charge] [Administrator Authentication/User Authentication/App Auth.] [Register/Change/Delete LDAP Server], press [Register/Change] and set [Authentication] to [Kerberos Authentication]
 - See "Registering the LDAP Server", User Guide (HTML).
- If the connection test fails, check whether [Domain Name Configuration] and [DNS Configuration] or [WINS Configuration] is specified correctly on [Settings]
 [System Settings]
 [Network/Interface].

Messages that Appear When Logging in to the Machine Using an IC Card Fails

Message	Cause	Solution and reference
"Authentication has failed." *0150-401	The card is locked because the number of times an incorrect PIN code was entered exceeds the limit.	Unlock the card.
"Authentication has failed." *0151-401	An incorrect PIN code was entered.	Enter the correct PIN.

Message	Cause	Solution and reference
"Authentication has failed." *0153-402	The card authentication device has been removed or is not connected properly.	Connect the card authentication device again. Connect the card authentication device to the USB Interface Type A on the back left side of the machine.
"Authentication has failed." *0154-402	Reading of an IC card has failed.	Set the IC card on the authentication device correctly and for a longer duration.
"Authentication has failed." *0156-401	An incorrect user name or password was entered.	Enter the correct user name and password.
"The card authentication device is not connected."	The card authentication device has been removed or is not connected properly.	Connect the card authentication device again. Connect the card authentication device to the USB Interface Type A on the back left side of the machine.
	A malfunction is temporarily occurring on the machine.	Turn off the power of the machine, wait for 10 seconds or more after confirming that the main power indicator is turned off, and then turn on the power. page19"Turning On and Off the Power"

Messages that Appear When the LDAP Server Is Unavailable

Message	Cause	Solution and reference
"Connection with LDAP server has	The network is busy.	Try again.
failed. Check the server status."	The setting information is incorrect.	Check the setting information of [Settings] [System Settings] [Settings for Administrator] [Authentication/Charge] [Administrator Authentication/User Authentication/App Auth.] [Register/Change/Delete LDAP Server]. See "Registering the LDAP Server", User Guide (HTML).

Message	Cause	Solution and reference
"Exceeded time limit for LDAP	The network is busy.	Try again.
server search. Check the server status."	The setting information is incorrect.	Check the setting information of [Settings] [System Settings] [Settings for Administrator] [Authentication/Charge] [Administrator Authentication/User Authentication/App Auth.] [Register/Change/Delete LDAP Server]. See "Registering the LDAP Server", User Guide (HTML).
"LDAP server authentication has failed. Check the settings."	The user name or password is incorrect.	Select the user in the address book, press [Edit], and specify the correct user name and password in [User Management / Other] tab [User Management] [LDAP Authentication Info]. See "Registering a User in the Address Book and Specifying the Login Information", User Guide (HTML).

Messages that Appear When There Is a Problem with the Certificate

Message	Cause	Solution and reference
"The destination cannot be selected because the device certificate used for the S/MIME signature is not currently valid. Please check the certificate."*1	The device certificate used for the S/MIME signature is not currently valid.	Install a new device certificate used for the S/MIME signature. See "Encrypting Network Communication", User Guide (HTML).

Message	Cause	Solution and reference
"Signature cannot be set because there is a problem with the device certificate used for the S/MIME signature. Check the device certificate."*1		
"Signature cannot be set because the Digital Signature's device certificate is not currently valid. Please check the certificate."*1	The device certificate used for the digital signature in PDF or PDF/A is not currently valid.	Use a valid device certificate for the digital signature in PDF or PDF/A. See "Scanning an Original as a PDF with Security Settings Specified", User Guide (HTML).
"The destination cannot be selected because there is a problem with the device certificate used for the S/MIME signature. Please check the certificate."*1	The device certificate used for the digital signature in PDF or PDF/A is missing or invalid.	
"The destination cannot be selected because its encryption certificate is not currently valid. Please check the certificate."	The user certificate (destination certificate) has expired.	Install a new user certificate. See "Encrypting Network Communication", User Guide (HTML).

Message	Cause	Solution and reference
"The group destination cannot be selected because it contains a destination with an encryption certificate that is not currently valid. Please check the certificate."		
"Transmission cannot be performed because the encryption certificate is not currently valid. Please check the certificate."		

^{*1} Other operations may be included in "The destination cannot be selected" or "Signature cannot be set".

Messages that Appear When an Application Site Cannot Be Used

Message	Cause	Solution and reference
"A server error has occurred."	An unexpected error has occurred on the server.	 See the server maintenance information in [Information]. Check whether the
"Cannot connect to server which installs applications. Check maintenance information on Information screen or network settings. After checking, please try again."	Cannot connect to the installation server.	Network/Interface ([DNS Configuration], [Control Panel: Proxy Settings]) are correctly configured. See "Network/Interface", User Guide (HTML).
"Could not update the firmware."		


8

9. Specifications

Specifications for Paper

Recommended Paper Sizes and Types

The recommended paper sizes and types for each tray are as described below.

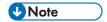

- When performing multiple sheet feeding, fan sheets thoroughly or load sheets one by one from the bypass tray.
- The printing speed may be lower depending on the paper size or paper type.

Tray 1

Paper type and weight	Paper size	Paper capacity
60–300 g/m ² (Approx. 16 lb. Bond–110 lb. Cover)	Region A (mainly Europe and Asia) (Mainly Europe and Asia) A4D	550 sheets
Plain Paper 1–Thick Paper 4	Region B (mainly North America) $8^{1}/2 \times 11$	
60–300 g/m² (Approx. 16 lb. Bond–110 lb. Cover)	*1 ——Region A (mainly Europe and Asia)/——Region B (Taiwan)	550 sheets
Plain Paper 1–Thick Paper 4	A5D, B5 JISD, $8^{1}/2 \times 11D$ Region B (mainly North America) A4D, A5D, B5 JISD	

^{*1} To load paper any of the sizes specified above, contact your service representative.

Paper type and weight	Paper size	Paper capacity
60–300 g/m² (Approx. 16 lb. Bond–110 lb. Cover) Plain Paper 1–Thick Paper 4	Paper sizes that can be detected automatically *1: Region A (mainly Europe and Asia) / Region B (Taiwan) A3 , A4, A5 , B4 JIS , B5 JIS, $8^{1}/2 \times 11^{17}$, SRA3 (mainly North America) A4 , A5 , B5 JIS , 11×17^{17} , $8^{1}/2 \times 14^{17}$, $8^{1}/2 \times 11$, $7^{1}/4 \times 10^{1}/2$, 12×18^{17} , $8^{17}/2 \times 13^{17}$	550 sheets
60–300 g/m² (Approx. 16 lb. Bond–110 lb. Cover) Plain Paper 1–Thick Paper 4	Select the paper size using the Tray Paper Settings menu*1: **Pregion** A (mainly Europe and Asia)/** **Region** B (Taiwan) A5 **P, A6 **P, B6 JIS **P, 11 × 17 **P, R1/2 × 14 **P, R1/2 × 13 **P, R1/2 × 11 **P, R1/2 × 14 **P, R1/4 × 13 **P, R1/2 × 11 **P, R1/2 **	550 sheets
60–300 g/m ² (Approx. 16 lb. Bond–110 lb. Cover) Plain Paper 1–Thick Paper 4	Custom size*2*3: Region A (mainly Europe and Asia)/Region B (Taiwan) Vertical: 90.0–320.0 mm Horizontal: 148.0–457.2 mm	550 sheets

Paper type and weight	Paper size	Paper capacity
	Wertical: 3.55–12.59 inches Horizontal: 5.83–18.00 inches	
Envelopes	Select the paper size using the Tray Paper Settings menu: $4^{1}/_{8} \times 9^{1}/_{2}$, $3^{7}/_{8} \times 7^{1}/_{2}$, C5 Env, C6 Env, DL Env	• D: 50 sheets • D: Double flap: 15 sheets Single flap: 25 sheets

^{*1} Adjust the auxiliary side fence before loading B4 JIS \square , A3 \square , SRA3 \square , 11 × 17 \square , or 12 × 18 \square paper.

Lower Paper Trays (Trays 3, 4)

Paper type and weight	Paper size	Paper capacity
60–300 g/m² (Approx. 16 lb. Bond–110 lb. Cover) Plain Paper 1–Thick Paper 4	Paper sizes that can be detected automatically*1: Paper A (mainly Europe and Asia)/Paper B (Taiwan) A3 , A4, A5 , B4 JIS , B5 JIS, 8 1 /2 × 11 , SRA3 1 /2 × 11 , SRA3 1 /2 × 11 , SRA3 1 /2 × 14 , A5 , B5 JIS , 11 × 17 , 8 1 /2 × 14 , 8 1 /2 × 11, 7 1 /4 × 10 1 /2 , 12 × 18 1 /2 × 13 1 /5 .	550 sheets
60–300 g/m² (Approx. 16 lb. Bond–110 lb. Cover)	Select the paper size using the Tray Paper Settings menu ^{*1} :	550 sheets

^{*2} Set the auxiliary side fence in the outermost position before loading paper with a vertical length of 297 mm (11.7 inches) or longer and a horizontal length of over 335 mm (13.2 inches).

^{*3} When loading paper with a vertical length of more than 304.8 mm (12.0 inches) in Trays 2–4, use paper that has a horizontal width of 450 mm (17.8 inches) or less. When loading paper with a horizontal width of more than 450 mm (17.8 inches) in Trays 2–4, use paper that has a vertical length of 304.8 mm (12.0 inches) or less.

Paper type and weight	Paper size	Paper capacity
Plain Paper 1–Thick Paper 4	Region A (mainly Europe and Asia) / Region B (Taiwan) A5 \Box , A6 \Box , B6 JIS \Box , 11 × 17 \Box , 81/2 × 14 \Box , 81/2 × 13 \Box , 81/2 × 11 \Box , 81/4 × 14 \Box , 81/4 × 13 \Box , 8 × 13 \Box , 8 × 10 \Box , 71/4 × 101/2, 51/2 × 81/2 \Box , 8K \Box , 16K, 12 × 18 \Box *2, 11 × 15 \Box , 10 × 14 \Box , 81/2 × 132/5 \Box Region B (mainly North America) A3 \Box , A4 \Box , A5 \Box , A6 \Box , B4 JIS \Box , B5 JIS \Box , B6 JIS \Box , 81/2 × 13 \Box , 81/4 × 14 \Box , 81/4 × 13 \Box , 8 × 13 \Box , 8 × 10 \Box , 71/4 × 101/2 \Box , 51/2 × 81/2 \Box , 8K \Box , 16K, 11 × 15 \Box , 10 × 14 \Box , SRA3 \Box *2	
60–300 g/m² (Approx. 16 lb. Bond–110 lb. Cover) Plain Paper 1–Thick Paper 4	Custom size*3*4: Region A (mainly Europe and Asia)/Region B (Taiwan) Vertical: 90.0–320.0 mm Horizontal: 148.0–457.2 mm Region B (mainly North America) Vertical: 3.55–12.59 inches Horizontal: 5.83–18.00 inches	550 sheets
Envelopes	Select the paper size using the Tray Paper Settings menu: $4^{1}/_{8} \times 9^{1}/_{2}$, $3^{7}/_{8} \times 7^{1}/_{2}$, C5 Env, C6 Env, DL Env	• D: 50 sheets • D: 50 sheets • D: Double flap: 15 sheets Single flap: 25 sheets

^{*1} Adjust the auxiliary side fence before loading B4 JIS $^{\square}$, A3 $^{\square}$, SRA3 $^{\square}$, 11 × 17 $^{\square}$, or 12 × 18 $^{\square}$ paper.

^{*2} There are lines to indicate these paper sizes on the labels attached to the lower paper trays, however there is no size description for these paper sizes.

*3 When loading paper with a vertical length of more than 304.8 mm (12.0 inches) in Trays 2–4, use paper that has a horizontal width of 450 mm (17.8 inches) or less. When loading paper with a horizontal width of more than 450 mm (17.8 inches) in Trays 2–4, use paper that has a vertical length of 304.8 mm (12.0 inches) or less.

*4 Set the auxiliary side fence in the outermost position before loading paper with a vertical length of 297 mm (11.7 inches) or longer and a horizontal length of over 335 mm (13.2 inches).

Bypass Tray

Paper type and weight	Paper size	Paper capacity
52–300 g/m² (Approx. 14 lb. Bond–110 lb. Cover) Thin Paper–Thick Paper 4	Paper sizes that can be detected automatically: Region A (mainly Europe and Asia) Region B (Taiwan) A3 , A4, A5, A6 , B4 JIS , B5 JIS, B6 JIS , SRA3 Region B (mainly North America) A5 , B5 JIS , $11 \times 17^{\circ}$, $8^{1}/2 \times 11$, $5^{1}/2 \times 8^{1}/2^{\circ}$, $12 \times 18^{\circ}$, SRA3	 100 sheets (80 g/m², Approx. 20 lb. Bond) Thick Paper 1: 40 sheets Thick Paper 2- Thick Paper 3: 20 sheets Thick Paper 4: 16 sheets
52–300 g/m² (Approx. 14 lb. Bond–110 lb. Cover) Thin Paper–Thick Paper 4	Specify the paper size*1: Region A (mainly Europe and Asia)/Region B (Taiwan) $11 \times 17^{\Box}$, $8^{1}/_{2} \times 14^{\Box}$, $8^{1}/_{2} \times 13^{\Box}$, $8^{1}/_{2} \times 11$, $8^{1}/_{4} \times 14^{\Box}$, $8^{1}/_{4} \times 13^{\Box}$, $8 \times 13^{\Box}$, $8 \times 10^{\Box}$, $7^{1}/_{4} \times 10^{1}/_{2}$, $5^{1}/_{2} \times 8^{1}/_{2}^{\Box}$, $8K^{\Box}$, $16K$, $12 \times 18^{\Box}$, $11 \times 15^{\Box}$, $10 \times 14^{\Box}$, SRA4, $8^{1}/_{2} \times 13^{2}/_{5^{\Box}}$ Region B (mainly North America) A3 \Box , A4, A5 \Box , A6 \Box , B4 JIS \Box , B5 JIS \Box , B6 JIS \Box , 8 \Box , 10 \Box , 7 \Box // ₄ \Box /, 8 \Box // ₂ , 8 \Box /, 16 \Box /, 10 \Box // ₂ , 8 \Box /, 16 \Box /, 10 \Box /	 100 sheets (80 g/m², Approx. 20 lb. Bond) Thick Paper 1: 40 sheets Thick Paper 2- Thick Paper 3: 20 sheets Thick Paper 4: 16 sheets

52–300 g/m² (Approx. 14 lb. Bond–110 lb. Cover) Thin Paper–Thick Paper	Custom size: Region A (mainly Europe and Asia) / Region B (Taiwan)	• 100 sheets (80 g/m², Approx. 20
4	 Vertical: 90.0–320.0 mm*² Horizontal: 148.0-457.2mm (When using copy, document server)*³ Horizontal: 148.0-600.0mm (When using printer, facsimile)*3*4 Region B (mainly North America) Vertical: 3.55–12.59 inches*² Horizontal: 5.83–18.00 inches (When using copy, document server)*³ Horizontal: 5.83–23.62 inches (When using printer, facsimile)*3*4 Custom size (Banner Paper Guide Tray): Region A (mainly Europe and Asia)/Region B (Taiwan) Vertical: 90.0–320.0 mm*² Horizontal: 148.0-1260.0mm (When using printer, facsimile)*5 Region B (mainly North America) Vertical: 3.55–12.59 inches*² Horizontal: 5.83–49.60 	lb. Bond) • Thick Paper 1: 40 sheets • Thick Paper 2- Thick Paper 3: 20 sheets • Thick Paper 4: 16 sheets
Label paper (adhesive labels)	inches (When using printer, facsimile)*5 A4, B4 JIS	30 sheets

Paper type and weight	Paper size	Paper capacity
Envelopes	Specify the paper size*1: $4^{1}/_{8} \times 9^{1}/_{2}$, $3^{7}/_{8} \times 7^{1}/_{2}$, C5 Env, C6 Env, DL Env	10 sheets

^{*1} Specify the paper size.

- Using the Copy function.
 page107"Basic Procedure for Copying Documents"
- Using the Printer function.
 page153"Basic Procedure for Printing Documents"
- *2 When only the internal multi-fold unit is mounted, you cannot use paper that is wider than 297 mm (11.7 inches).
- *3 When paper larger than 432 mm (17.1 inches) in size is used, the paper may become wrinkled, may not be fed into the machine, or may cause paper jams.
- *4 In printer or facsimile mode, the maximum horizontal length of the custom size is 1,260 mm (49.60 inches). If you want to print on paper with a horizontal length of 600–1,260 mm (23.62–49.60 inches), contact your service representative. If you want to load paper with a horizontal length of 600 mm (23.62 inches) or longer in the bypass tray, it must have a vertical width of 305 mm (12.1 inches) or less.
- *5 If you want to print on paper that has a horizontal length of 600–1,260 mm (23.62–49.60 inches), we recommend using the banner paper guide tray.

Tray 3 (LCT)

Paper type and weight	Paper size	Paper capacity
60–300 g/m ² (Approx. 16 lb. Bond–110 lb. Cover) Plain Paper 1–Thick Paper 4	Region A (mainly Europe and Asia) (mainly B (Taiwan) A4D Region B (mainly North America) 8 ¹ / ₂ × 11D	1000 sheets × 2
60–300 g/m ² (Approx. 16 lb. Bond–110 lb. Cover) Plain Paper 1–Thick Paper 4	Region A (mainly Europe and Asia) / Region B (Taiwan) $8^{1}/_{2} \times 11D^{*1}$ Region B (mainly North America) $A4D^{*1}$	1000 sheets × 2

^{*1} To load paper any of the sizes specified above, contact your service representative.

Paper type and weight	Paper size	Paper capacity
60–300 g/m ² (Approx. 16 lb. Bond–110 lb. Cover) Plain Paper 1–Thick	Region A(mainly Europe and Asia)/Region B(Taiwan) A4D	1650 sheets
Paper 4	Region \mathbb{B} $8^1/2 \times 11\mathbb{D}$	
60–300 g/m² (Approx. 16 lb. Bond–110 lb. Cover)	Region A (mainly Europe and Asia) $\mathbb{B}(Taiwan)$ B5 JIS \mathbb{D}^{*1} , $\mathbb{B}^{1}/2 \times 11 \mathbb{D}^{*1}$	1650 sheets
Plain Paper 1–Thick Paper 4		

^{*1} To load paper any of the sizes specified above, contact your service representative.

Notes on Special Paper

Paper Type	Note
Setting thick paper	page295"Thick Paper Orientation and Recommended Status"
Setting envelopes	page296"Envelope Orientation and Recommended Status"
Setting letterhead paper	page298"Loading Orientation-fixed Paper or Two-sided Paper"
Setting label paper (adhesive labels)	We recommend that you use specified label paper. If paper other than the specified one is used, normal operation and quality cannot be guaranteed.
Setting coated paper	Specify "Paper Type" to [Coated Paper: Matte] and an appropriate item for "Paper Thickness" in paper type setting for each tray under [Tray/Paper Settings].
	 To print on high-gloss coated paper, specify "Paper Type" to [Coated Paper: Glossy] in paper type setting for each tray under [Tray/Paper Settings].

Paper Type	Note
	If a paper jam occurs or if the machine makes a strange noise, feed the coated paper from the bypass tray one sheet at a time.

Paper Thickness for Each Paper Weight

Paper Thickness	Paper weight
Thin Paper	52–59 g/m² (Approx. 14–15 lb. Bond)
Plain Paper 1	60–74 g/m² (Approx. 16–20 lb. Bond)
Plain Paper 2	75–81 g/m² (Approx. 20 lb. Bond)
Middle Thick	82–105 g/m² (Approx. 20–28 lb. Bond)
Thick Paper 1	106–169 g/m² (Approx. 28 lb. Bond–90 lb. Index)
Thick Paper 2	170–220 g/m² (Approx. 65–80 lb. Cover)
Thick Paper 3	221–256 g/m² (Approx. 80 lb. Cover–140 lb. Index)
Thick Paper 4	257–300 g/m² (Approx. 140 lb. Index–110 lb. Cover)

Unusable Paper



• Do not use stapled sheets of paper, aluminum foil, carbon paper, or any kind of conductive paper. Doing so can result in fire.

Paper causing faults

Do not use any of the following kinds of treated paper. Doing so may cause faults.

- Paper for inkjet printers
- Thermal paper
- Art paper
- Aluminum foil
- Carbon paper
- · Conductive paper
- Paper with perforated lines

- Window envelopes
- Tab stock
- · OHP transparencies
- Translucent paper

Do not copy or print onto sides that are already printed.


Paper causing paper jam

Do not use the following kinds of paper. It may cause a paper jam.

- Bent, folded, or creased paper
- Perforated paper
- · Slippery paper
- · Torn paper
- Rough paper
- · Thin paper with little stiffness
- Paper with a dusty surface

If you use paper curled by humidity or drying, the paper or staple may jam.

Do not load sheets that have already been printed onto by another machine. Doing so may interfere with loading of paper because the powder for preventing offset may attach to the paper roller.

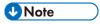

• A paper jam may occur depending on the condition of the paper even when using the recommended paper.

Paper Storage

When storing paper, the following precautions should always be followed:

- Do not store paper where it will be exposed to direct sunlight.
- Store paper in a dry environment (humidity: 70% or less).
- · Store on a flat surface.
- Do not store paper vertically.
- Once opened, store paper in a plastic bag.

Saving Printouts

 Prints will fade if exposed to strong light or dampness and humidity for extended periods of time. Preserve the quality of your copies by storing them in a binder in a dark, dry place.

- When folding prints, toner in the folds will come off.
- If the prints are stored in the conditions described below, toner may melt:
 - · When a print and a half-dried print are put on top of each other
 - When solvent-type adhesive agents are used for pasting prints
 - When prints are placed on mats made of chlorinated plastic in locations of high temperature for long periods of time
 - When prints are placed in locations of extremely high temperatures, such as near a heater

Thick Paper Orientation and Recommended Status

When loading thick paper of 106-300 g/m² (Approx. 28 lb. Bond–110 lb. Cover) in the paper trays, or in the bypass tray, follow the recommendations below to prevent misfeeds and loss of image quality.

Paper Orientation

Thick paper has a paper direction according to its grain. Set the paper direction according to the grain, as shown in the following diagram:

Direction of paper grain	Tray 1 or Tray 3 (LCT)	Tray 2–4	Large Capacity Tray	Bypass Tray
Longitudinal direction				
Lateral direction	Not recommended		Not recommended	

Paper Storage

• Temperature: 20–25°C (68–77°F)

• Humidity: 30-65%.

Do not use together paper that has been stored in different environments.

Minimum Number of Sheets

• 20 sheets or more (paper trays of the machine/optional lower paper trays unit used)

After loading paper, position the side fences flush against the paper stack.



- When printing on thick, smooth paper, be sure to fan the paper thoroughly before loading. If you do not fan thick paper, jams and misfeeds can occur. If paper continues to become jammed or feed in together even after they are fanned, load them one by one from the bypass tray.
- Proper performance and quality may not be achieved under the recommended conditions depending on the paper.
- The printed sheet may curl. If the printed sheet curls, correct it.

Envelope Orientation and Recommended Status

The way to place an original on the exposure glass and load envelopes varies depending on the shape and orientation of the envelopes.



- Do not print on the following envelopes:
 - Window envelopes
 - Envelopes with moisture

Before setting envelopes

- To load envelopes with the flaps opened, use only envelopes that are at least 148 mm (5.9 inches) long including the open flap. Set the envelopes with the flaps fully open. A paper jam may occur depending on the length or shape of the envelope flap.
- Before loading envelopes, press down on them to remove any air from inside and flatten out all four edges. If they are bent or curled, flatten their leading edges (the edge going into the machine) by running a pencil or ruler across them.



- For information about recommended envelopes, contact your local dealer.
- The Duplex function cannot be used with envelopes.
- Copied or printed sheets are delivered to the internal tray 1 even if you specified a different tray.
- Set the margins on the top, bottom, left and right to be 15 mm or more so as to print with adequate quality.

- An image may not be printed clearly on a sheet whose thickness is uneven. Print a few sheets and check the result.
- The printing result may not be adequate or the envelope may become wrinkled when the temperature or humidity is high.
- The printing result may not be adequate or output envelopes may become wrinkled depending on the printing environment even when using the recommended envelopes.
- When printing onto paper other than an envelope after printing onto several envelopes, you may have to wait about one minute until printing starts to allow the machine to make adjustments.

Using the Copy Function

Orientation of Envelopes	Exposure Glass	Tray 2-4	Bypass Tray
Side-opening envelopes D	Flaps: open Side to be scanned: face down Bottom side of envelopes: toward the left of the machine	Flaps: open Side to be printed: face up Bottom side of envelopes: toward the right of the machine	Flaps: open Side to be printed: face down Bottom side of envelopes: toward the left of the machine
Side-opening envelopes —	Flaps: closed Side to be scanned: face down Bottom side of envelopes: toward the back of the machine	Flaps: closed Side to be printed: face up Bottom side of envelopes: toward the back of the machine	Flaps: closed Side to be printed: face down Bottom side of envelopes: toward the back of the machine

When loading envelopes, specify the envelope size and thickness.

Using the Printer Function

Orientation of Envelopes	Tray 2-4	Bypass Tray
Side-opening envelopes	Flaps: open Side to be printed: face up Bottom side of envelopes: toward the right of the machine	Flaps: open Side to be printed: face down Bottom side of envelopes: toward the left of the
Side-opening envelopes **1*** **** **** *** *** *** *	Flaps: closed Side to be printed: face up Bottom side of envelopes: toward the back of the machine	Flaps: closed Side to be printed: face down Bottom side of envelopes: toward the back of the machine

^{*1} Select the check box of [Rotate by 180 Degrees] on [Input/Output] tab, and then print.

Loading Orientation-fixed Paper or Two-sided Paper


To print onto letterhead paper or business letter paper on which logos or patterns are printed, confirm how to set the paper or the settings of this machine so that the original is printed onto the orientation-fixed (top to bottom) or two-sided paper correctly.

Copying onto Letterhead Paper

Specify the settings of this machine as described below, and then place an original and load the paper.

• [Settings] ► [Copier / Document Server Settings] ► [Paper/Paper Input] ► [Letterhead Setting] ► [Yes]

Original Orientation

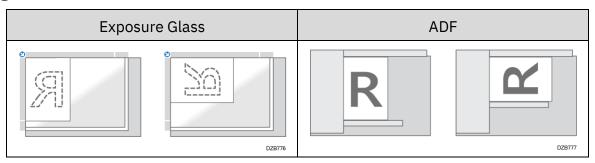

Paper Orientation

Copy Side	Tray 1 Tray 3 (LCT)	Tray 2–4	Large Capacity Tray	Bypass Tray
One-sided originals	DZB778	DZB778		
		DZB779	DZB782	DZB784
Two-sided originals *1	DZB780	DZB780	DZB783	QZB786
		DZB781	U2B163	DZB786

^{*1} When printing the first page onto the letterhead side

Printing onto Letterhead Paper Using the Printer Driver

Specify the settings of this machine as described below.

• [Settings] ▶ [Printer Settings] ▶ [System] ▶ [Paper In/Out] ▶ [Letterhead Setting] ▶ [Auto Detect]

Paper Orientation

Copy Side	Tray 1 Tray 3 (LCT)	Tray 2-4	Large Capacity Tray	Bypass Tray
One-sided originals	DZB778	DZ6778		
		DZB788	DZB782	DZB790
Two-sided originals	DZB780	DZB780		R.
		DZB789	DZB783	DZB786



- When you set [Letterhead Setting] to [On (Always)], you can print onto letterhead paper when the paper type in the printer driver's settings is set to [Letterhead].
- If a print job is changed partway through printing from one-sided to two-sided printing, one-sided output after the first copy may be printed facing a different direction. To ensure all paper is output facing the same direction, specify different input trays for one-sided and two-sided printing. Note also that two-sided printing must be disabled for the tray specified for one-sided printing.

Specifications for Originals

Recommended Original Size and Weight

⊕ Region A (mainly Europe and Asia) / ⊕ Region B (Taiwan)

Original	location	Original size	Original weight
Exposure glass		Up to A3□	-
ARDF	One-sided originals	A3 \square -B6 JIS (Japanese Industrial Standard) 11 × 17 \square -5 1 / ₂ × 8^{1} / ₂ *1	40–128 g/m ² (Approx. 11–34 lb. Bond)
	Two-sided originals	A3 \square -A5 11 × 17 \square -5 ¹ / ₂ × 8 ¹ / ₂ *1	52–128 g/m ² (Approx. 14–34 lb. Bond)
	Mixed Sizes mode	A3 \square , B4 JIS \square , A4, B5 JIS, 11 × 17 \square , 8 1 / ₂ × 13 \square , 8 1 / ₂ × 11	52–81 g/m ² (Approx. 14–20 lb. Bond)
One-pass Duplex Scanning ADF ^{*2}	One-sided originals	A3 \Box – A7 \Box , 11 × 17 \Box – 5 ¹ / ₂ × 8 ¹ / ₂ *1, Business Card \Box	Larger than A6: 38-220 g/m ² (Approx. 10 lb. Bond-80 lb. Cover) A6 or smaller: 64- 220 g/m ² (Approx. 16 lb. Bond-80 lb. Cover)
	Two-sided originals	A3 \Box -A7 \Box , 11 × 17 \Box -5 1 / ₂ × 8 1 / ₂ *1, Business Card \Box	Larger than A6: 52-220 g/m ² (Approx. 14 lb. Bond-80 lb. Cover) A6 or smaller: 64- 220 g/m ² (Approx. 16 lb. Bond-80 lb. Cover)

Region B(mainly North America)

Original location		Original size	Original weight	
Exposure glass		Up to 11 × 17 □	-	
ARDF	One-sided originals	$11 \times 17^{\Box} - 5^{1}/_{2} \times 8^{1}/_{2}$ A3 \Box - A5 *1	40–128 g/m ² (Approx. 11–34 lb. Bond)	
Two-sided originals		$11 \times 17^{\Box} - 5^{1}/_{2} \times 8^{1}/_{2}$ A3 \Box - A5 *1	52–128 g/m ² (Approx. 14–34 lb. Bond)	
	Mixed Sizes mode	$11 \times 17^{\square}, 8^{1}/_{2} \times 14^{\square}, 8^{1}/_{2} \times 11,$ $10 \times 14^{\square}, 7^{1}/_{4} \times 10^{1}/_{2}^{\square}, A3^{\square}, A4$	52–81 g/m ² (Approx. 14–20 lb. Bond)	
One-pass Duplex Scanning ADF ^{*2}	One-sided originals	$11 \times 17^{\Box} - 5^{1}/2 \times 8^{1}/2$, A3 \Box - A5 \Box *1, Business Card	Larger than A6: 38-220 g/m ² (Approx. 10 lb. Bond-80 lb. Cover) A6 or smaller: 64- 220 g/m ² (Approx. 16 lb. Bond-80 lb. Cover)	

^{*1} $5^{1}/_{2} \times 8^{1}/_{2}$ can be used only in the scanner function.

^{*2} For originals with a vertical length smaller than 128 mm (5.0 inches), set the original horizontal to the feeding direction.

^{*3} A3/B5 JIS □ cannot be mixed. Set it in the direction of A3/B5 JIS □.

Original location		Original size	Original weight
	Two-sided originals	11 × 17 \Box -5 1 / ₂ × 8 1 / ₂ , A3 \Box -A5 \Box *1, Business Card	Larger than A6: 52-220 g/m ² (Approx. 14 lb. Bond-80 lb. Cover) A6 or smaller: 64- 220 g/m ² (Approx. 16 lb. Bond-80 lb. Cover)
	Mixed Sizes mode	$11 \times 17^{\square}, 8^{1}/_{2} \times$ $11, 10 \times 14, 8^{1}/_{2} \times$ $14^{\square}, 8 \times 13^{\square},$ $5^{1}/_{2} \times 8^{1}/_{2}^{\square}, A3$ $\square, A4^{\square}$	52–81 g/m ² (Approx. 14–20 lb. Bond)

^{*1} A5 can be used only in the scanner function.

^{*2} For originals with a vertical length smaller than 128 mm (5.0 inches), set the original horizontal to the feeding direction.



- An original whose size is within the range of the maximum original scan area can be placed.
 - page308"Specifications for the Main Unit"
- On all sides of the original, there is a missing image area. Even if you place originals
 on the exposure glass or in the ADF correctly, the missing image area on all four
 sides of the original might not be copied.
 - page308"Specifications for the Main Unit"
- You can place originals of two different sizes only in Mixed Sizes mode.

Sizes Detectable with Auto Paper Select

⊕ Region A (mainly Europe and Asia) / ⊕ Region B (Taiwan)

Original location	A3 🗗	B4 JIS□	A4	B5 JIS	A5D	A5□	B6 JIS
Exposure glass	√ *1	√ *1	√ *1*2	√ *1	√ *1	_*1*3	-
ARDF	✓	✓	>	✓	✓	✓	√ *4

Original location	A3 🗗	B4 JIS	A4	B5 JIS	A5D	A5□	B6 JIS
One-pass Duplex Scanning ADF	>	>	>	>	>	~	√ *5

Original location	А6Д	B7 JIS	A7D	11 × 17 □	8 ¹ / ₂ × 11	8 ¹ / ₂ × 13□	Busin ess Card
Exposure glass	-	-	-	-	_*2	✓*8	-
ARDF	-	-	-	√ *6	√ *7	✓*8	-
One-pass Duplex Scanning ADF	✓	✓	✓	✓*6	✓*7	√ *8	√ *9

- ✓: Detectable size, -: Undetectable size
- *1 If you want to switch the detectable size from A3 , A4, A5, B4 JIS, or B5 JIS to 8K, to 16K, contact your service representative.
- *2 Default is A4. If you want to switch the detectable size from A4 to $8^{1}/_{2} \times 11$, contact your service representative.
- *3 If you want to detect sizes smaller than A5 to A5 \Box , contact your service representative.
- *4 You cannot use the two-sided scanning mode.
- *5 Default is B6 JIS \square . If you want to switch the detectable size from B6 JIS \square to A6 \square , contact your service representative.
- *6 Default is $11 \times 17^{\square}$. If you want to switch the detectable size from $11 \times 17^{\square}$ to 8K \square , contact your service representative.
- *7 Default is $8^1/2 \times 11$. If you want to switch the detectable size from $8^1/2 \times 11$ to 16K \Box , contact your service representative.
- *8 Default is $8^1/_2 \times 13^{\square}$. If you want to switch the detectable size from $8^1/_2 \times 13^{\square}$ to $8 \times 13^{\square}$ or $8^1/_4 \times 13^{\square}$, contact your service representative.
- *9 Default is Business Card . If you want to switch the detectable size from Business Card to B8 JIS, contact your service representative.

9

Region B (mainly North America)

Original location	11 × 17□	8 ¹ / ₂ × 14 •	8 ¹ / ₂ × 11D	8 ¹ / ₂ × 11	$5^{1}/_{2} \times 8^{1}/_{2} \square$	$5^{1}/_{2} \times 8^{1}/_{2}$
Exposure glass	✓	√ *1	√ *2	√ *2	✓	_*3
ARDF	√ *4	√ *1*5	√ *6	✓*6	✓	✓
One-pass Duplex Scanning ADF	√ *4	√ *1*5	√ *6	✓*6	✓	✓

Original location	10 × 14 □	7 ¹ / ₄ × 10 ¹ / ₂	A3D	A4	Busin ess Card
Exposure glass	-	-	-	_*2	-
ARDF	✓	✓	✓	✓	-
One-pass Duplex Scanning ADF	✓	✓	✓	✓	✓

- ✓: Detectable size, -: Undetectable size
- *1 You can switch the detectable size from $8^1/2 \times 14^{\square}$ to $8^1/2 \times 13^2/5^{\square}$ by using [Auto Detect: Switch Paper Size Detected Legal/Oficio] in the [Tray/Paper Settings] menu.
- *2 Default is $8^1/2 \times 11$. If you want to switch the detectable size from $8^1/2 \times 11$ to A4, contact your service representative.
- *3 If you want to detect sizes smaller than $5^1/_2 \times 8^1/_2$ to $5^1/_2 \times 8^1/_2$, contact your service representative.
- *4 Default is $11 \times 17^{\square}$. If you want to switch the detectable size from $11 \times 17^{\square}$ to $11 \times 15^{\square}$, contact your service representative.
- *5 Default is $8^1/_2 \times 14^{\square}$. If you want to switch the detectable size from $8^1/_2 \times 14^{\square}$ to $8^1/_2 \times 13^2/_5^{\square}$ or $8^1/_2 \times 13^{\square}$, contact your service representative.
- *6 Default is $8^1/_2 \times 11$. If you want to switch the detectable size from $8^1/_2 \times 11$ to 8×10^{-7} or $7^1/_4 \times 10^1/_2$, contact your service representative.

UNote

- If the original type is one of the following, the machine may not be able to detect the paper size automatically. Select the paper size manually.
 - Dark originals with a lot of text and drawings
 - Originals that partially contain a solid image

- Originals that have solid images at their edges
- Originals with indexes, tags, or other projecting parts
- Transparent originals such as OHP transparencies or translucent paper
- Originals with glossy surfaces
- Bound originals with a thickness of more than 10 mm (0.4 inches), such as books
- When the ADF scans an original of a size that cannot be detected automatically, the size of the scanned image will be different from the original.
- When loading an original of a size that is not automatically detected, specify the original size or select the paper tray that is the same size as the original. The output image may not be full size or it may be different from the intended one if the print settings are not specified properly.


a

Model-Specific Information

This section explains how you can identify the region your machine belongs to.

Machine and Options Specifications

There is a label on the rear of the machine, located in the position shown below. The label contains details that identify the region your machine belongs to. Read the label.

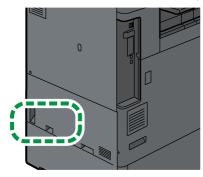

The following information is region-specific. Read the information under the symbol that corresponds to the region of your machine.

Region A(mainly Europe and Asia)

If the label contains the following, your machine is a region A model:

- CODE XXXX -27, -65, -23, -63, -29, -28, -25, -21, -22, -26
- 220-240 V

Region B(mainly North America and Taiwan)

If the label contains the following, your machine is a region B model:

- CODE XXXX -17, -15, -19
- 120-127 V (mainly North America)
- 110 V (Taiwan)

₩ Note

- If your machine is a region A model and "CODE XXXX -27, -65, -23, -63" is printed on the label, see "

 Region A (mainly Europe)" also.
- If your machine is a region A model and "CODE XXXX -29, -28, -25, -21, -22, -26" is printed on the label, see "

 Region A (mainly Asia)" also.
- If your machine is a region A model and "CODE XXXX -21, -22" is printed on the label, see "

 Region A (China)" also.
- If your machine is a region B model and "CODE XXXX -17, -15" is printed on the label, see "

 Region B (mainly North America)" also.
- If your machine is a region B model and "CODE XXXX -19" is printed on the label, see "

 Region B (Taiwan)" also.

C

List of Specifications

Specifications for the Main Unit

Item	Specifications
Configuration	Desktop
Memory	 IM C3010/C3010A/C3510/C3510A/C3519J/C4510/C4510A/C551 0/C5510A/C6010/GS4030c/GS4045c/GS4160c 8 GB (4 GB on the main unit and 4 GB on the control panel) IM C2010/C2010A/C2510/C2510A/C2519J/GS4020c/GS4025c 6 GB (2 GB on the main unit and 4 GB on the control panel)
Internal storage size	256 GB(SSD)
Color	Full Color
Photosensitivit y type	OPC drum
Copy process	Laser beam scanning and electro-photographic printing
Exposure glass	Stationary original exposure type
Scan method	Flatbed scanning
Warm-up time	Region A(mainly Europe)
	• IM C2010/C2010A/C2510/C2510A/C3010/C3010A/C3510/C3510 A
	Normal mode: 55 seconds
	Quick mode: 24 seconds
	• IM C4510/C4510A/C5510/C5510A/C6010 Normal mode: 55 seconds
	Quick mode: 23 seconds
	Region A(mainly Asia*1)
	• IM C2010/C2510/C2519J/C3010/C3510/C3519J

Item	Specifications
	Normal mode: 55 seconds
	Quick mode: 24 seconds
	• IM C4510/C6010
	Normal mode: 55 seconds
	Quick mode: 23 seconds
	*1 Except for China.
	® (mainly North America)
	• IM C2010/C2510/C4510/C6010
	Normal mode: 55 seconds
	Quick mode: 24 seconds
	• IM C3010/C3510
	Normal mode: 55 seconds
	Quick mode: 25 seconds
	Region A(China)
	• IM C2010/C2510/C3010/C3510/GS4020c/GS4025c/GS4030c
	Normal mode: 55 seconds
	Quick mode: 24 seconds
	• IM C4510/C6010/GS4045c/GS4160c
	Normal mode: 55 seconds
	Quick mode: 23 seconds
	Region B(Taiwan)
	• IM C2010/C2510/C4510/C6010
	Normal mode: 55 seconds
	Quick mode: 24 seconds
	• IM C3010/C3510
	Normal mode: 55 seconds
	Quick mode: 25 seconds
	(23 °C (73.4 °F), rated voltage)
First copy time	Region A (mainly Europe)
	• IM C2010/C2010A/C2510/C2510A
	Full color: 7.4 seconds / B&W: 5.1 seconds
	• IM C3010/C3010A/C3510/C3510A
	Full color: 6.9 seconds / B&W: 4.5 seconds

Item	Specifications
	• IM C4510/C4510A
	Full color: 5.4 seconds / B&W: 3.6 seconds
	• IM C5510/C5510A/C6010
	Full color: 4.2 seconds / B&W: 2.9 seconds
	Region A (mainly Asia*1)
	• IM C2010/C2510/C2519J
	Full color: 7.4 seconds / B&W: 5.1 seconds
	• IM C3010/C3510/C3519J
	Full color: 6.9 seconds / B&W: 4.5 seconds
	• IM C4510
	Full color: 5.4 seconds / B&W: 3.6 seconds
	• IM C6010
	Full color: 4.2 seconds / B&W: 2.9 seconds
	*1 Except for China.
	• IM C2010/C2510
	Full color: 7.4 seconds / B&W: 5.1 seconds
	• IM C3010/C3510
	Full color: 6.9 seconds / B&W: 4.5 seconds
	• IM C4510
	Full color: 5.4 seconds / B&W: 3.6 seconds
	• IM C6010
	Full color: 4.2 seconds / B&W: 2.9 seconds
	Region A(China)
	• IM C2010/C2510/GS4020c/GS4025c
	Full color: 7.4 seconds / B&W: 5.1 seconds
	• IM C3010/C3510/GS4030c
	Full color: 6.9 seconds / B&W: 4.5 seconds
	• IM C4510/GS4045c
	Full color: 5.4 seconds / B&W: 3.6 seconds
	• IM C6010/GS4160c
	Full color: 4.2 seconds / B&W: 2.9 seconds
	Region B(Taiwan)

Item	Specifications
	• IM C2010/C2510
	Full color: 7.4 seconds / B&W: 5.1 seconds
	• IM C3010/C3510
	Full color: 6.9 seconds / B&W: 4.5 seconds
	• IM C4510
	Full color: 5.4 seconds / B&W: 3.6 seconds
	• IM C6010
	Full color: 4.2 seconds / B&W: 2.9 seconds
Copy/print	Region A(mainly Europe)
speed (per	• IM C2010/C2010A: 20 sheets/minute
minute)	 IM C2510/C2510A: 25 sheets/minute
	 IM C3010/C3010A: 30 sheets/minute
	• IM C3510/C3510A: 35 sheets/minute
	• IM C4510/C4510A: 45 sheets/minute
	• IM C5510/C5510A: 55 sheets/minute
	IM C6010: 60 sheets/minute
	Region A(mainly Asia*1)/ Region B(mainly North America and
	Taiwan)
	• IM C2010: 20 sheets/minute
	 IM C2510/C2519J: 25 sheets/minute IM C3010: 30 sheets/minute
	IM C3510/C3519J: 35 sheets/minute
	• IM C4510: 45 sheets/minute
	• IM C6010: 60 sheets/minute
	*1 Except for China.
	Region A(China)
	• IM C2010/GS4020c: 20 sheets/minute
	• IM C2510/GS4025c: 25 sheets/minute
	• IM C3010/GS4030c: 30 sheets/minute
	IM C3510: 35 sheets/minute
	• IM C4510/GS4045c: 45 sheets/minute
	• IM C6010/GS4160c: 60 sheets/minute
	$(A4D, 8^{1}/2 \times 11D)$
	((15, 0 /2 ·· ±±6)

Item	Specifications
Originals	Sheet, book, three-dimensional object
Copy size	 Trays 1–2 and the bypass tray: page285"Recommended Paper Sizes and Types" Duplex: A3□, A4, A5, A6□, B4 JIS□, B5 JIS, B6 JIS□, 11 × 17□, 8¹/2
	$\times 14^{\square}$, $8^{1}/_{2} \times 13^{\square}$, $8^{1}/_{2} \times 11$, $8^{1}/_{4} \times 14^{\square}$, $8^{1}/_{4} \times 13^{\square}$, $8 \times 13^{\square}$, $8 \times 10^{\square}$, $7^{1}/_{4} \times 10^{1}/_{2}$, $5^{1}/_{2} \times 8^{1}/_{2}^{\square}$, $8K^{\square}$, $16K$, $12 \times 18^{\square}$, $11 \times 15^{\square}$, $10 \times 14^{\square}$, SRA3 $^{\square}$, SRA4, $8^{1}/_{2} \times 13^{2}/_{5}^{\square}$
	 Duplex (Custom Size): Vertical: 90.0–320.0 mm (3.6-12.6 inches)
	Horizontal: 148.0–457.2 mm (5.9-18.0 inches)
Paper weight	Trays 1–2 and the bypass tray: page285"Recommended Paper Sizes and Types"
	• Duplex:
	Region A(mainly Europe)
	• IM C2010/C2010A/C2510/C2510A
	52–169 g/m² (Approx. 14 lb. Bond–90 lb. Index) *1
	• IM C3010/C3010A/C3510/C3510A/C4510/C4510A/C5510/C5510 A/C6010
	52–256 g/m² (Approx. 14 lb. Bond–140 lb. Index) ^{*1}
	• IM C2010/C2510/C2519J
	52–169 g/m ² (Approx. 14 lb. Bond–90 lb. Index) *1 • IM C3010/C3510/C3519J/C4510/C6010
	52–256 g/m² (Approx. 14 lb. Bond–140 lb. Index) ^{*1}
	*2 Except for China.
	⊕ Region B (mainly North America and Taiwan)
	• IM C2010/C2510
	52–169 g/m² (Approx. 14 lb. Bond–90 lb. Index) *1
	• IM C3010/C3510/C4510/C6010
	52–256 g/m² (Approx. 14 lb. Bond–140 lb. Index) ^{*1}

Item	Specifications	
	Region A(China)	
	• IM C2010/C2510/GS4020c/GS4025c	
	52–169 g/m2 (Approx. 14 lb. Bond–90 lb. Index) ^{*1}	
	• IM C3010/C3510/C4510/C6010/GS4030c/GS4045c/GS4160c	
	52–256 g/m2 (Approx. 14 lb. Bond–140 lb. Index) ^{*1}	
	For details about and recommendations concerning thick paper, see page295"Thick Paper Orientation and Recommended Status".	
	*1 Paper types that cannot be used for two-sided/book print: envelopes, label paper, matte coated paper, and glossy coated paper	
Missing image area (Copy)	Print area 2 4 3 2 1. Leading edge: 4.2 ±1.5 mm (0.17 ±0.06 inches) 2. Trailing edge: 0.5–6.0 mm (0.02–0.24 inches) Trailing edge (Banner sheet): 0.5–10.0 mm (0.02–0.4 inches) 3. Right edge: 0.5–4.0 mm (0.02–0.16 inches)	
Denor output	4. Left edge: 0.5–4.0 mm (0.02–0.16 inches)	
Paper output capacity of the internal tray	A4 or smaller: 500 sheets (80 g/m ²) B4 JIS or larger: 250 sheets (80 g/m ²)	
Preset	⊕Region A (mainly Europe and Asia) / ●Region B (Taiwan)	
reproduction ratio	Preset reproduction ratios (%):	
latio	• Enlargement: 400, 200, 141, 122, 115	
	• Full size: 100	
	• Reduction: 93, 82, 75, 71, 65, 50, 25	
	Region B(mainly North America)	

Item	Specifications
	Preset reproduction ratios (%): • Enlargement: 400, 200, 155, 129, 121 • Full size: 100 • Reduction: 93, 85, 78, 73, 65, 50, 25
Reproduction ratio (zoom)	From 25–400% in increments of 1%
Resolution (scanning originals)	600 × 600dpi
Resolution (copying)	600 × 600dpi
Tone	256 tones
Paper capacity (80 g/m², Approx. 20 lb. Bond)	page285"Recommended Paper Sizes and Types"
Continuous copy run	1–999 sheets
Duplex	Standard
Power requirements	Region A (mainly Europe and Asia) 220-240 V, 10 A, 50/60 Hz Region B (mainly North America) 120-127 V, 12 A, 60 Hz Region B (Taiwan) 110V, 20 A, 60Hz
Power consumption (Main unit only)	 Region A (mainly Europe) IM C2010/C2010A/C2510/C2510A Ready: 37.7 W During printing: 412 W (IM C2010/C2010A) During printing: 449 W (IM C2510/C2510A) Maximum: 1700 W or less IM C3010/C3010A/C3510/C3510A Ready: 38.5 W

Item	Specifications
	During printing: 464 W (IM C3010/C3010A)
	During printing: 501 W (IM C3510/C3510A)
	Maximum: 1700 W or less
	• IM C4510/C4510A
	Ready: 40.5 W
	During printing: 577 W
	Maximum: 1850 W or less
	• IM C5510/C5510A
	Ready: 40.6 W
	During printing: 726 W
	Maximum: 1850 W or less
	• IM C6010
	Ready: 40.1 W
	During printing: 763 W
	Maximum: 1850 W or less
	The power level when the main switch is turned off and the power cord is plugged into an outlet: 1 W or less
	Region A (mainly Asia*1)
	• IM C2010/C2510/C2519J
	Ready: 37.7 W
	During printing: 412 W (IM C2010)
	During printing: 449 W (IM C2510/C2519J)
	Maximum: 1700 W or less
	• IM C3010/C3510/C3519J
	Ready: 38.5 W
	During printing: 464 W (IM C3010)
	During printing: 501 W (IM C3510/C3519J)
	Maximum: 1700 W or less
	• IM C4510
	Ready: 40.5 W
	During printing: 577 W
	Maximum: 1850 W or less
	• IM C6010

Item	Specifications
	Ready: 40.1 W
	During printing: 763 W
	Maximum: 1850 W or less
	The power level when the main switch is turned off and the power cord is plugged into an outlet: 1 W or less
	*1 Except for China.
	⊕ Region B (mainly North America and Taiwan)
	• IM C2010/C2510
	Ready: 40.9 W
	During printing: 421 W (IM C2010)
	During printing: 462 W (IM C2510)
	Maximum: 1584 W or less
	• IM C3010/C3510
	Ready: 46.2 W
	During printing: 473 W (IM C3010)
	During printing: 488 W (IM C3510)
	Maximum: 1584 W or less
	• IM C4510/C6010
	Ready: 47.2 W
	During printing: 582 W (IM C4510)
	During printing: 748 W (IM C6010)
	Maximum: 1584 W or less
	The power level when the main switch is turned off and the power cord is plugged into an outlet: 1 W or less
	Region A(China)
	• IM C2010/C2510/GS4020c/GS4025c
	Ready: 37.7 W
	During printing: 412 W (IM C2010/GS4020c)
	During printing: 449 W (IM C2510/GS4025c)
	Maximum: 1700 W or less
	• IM C3010/C3510/GS4030c
	Ready: 38.5 W
	During printing: 464 W (IM C3010/GS4030c)
	During printing: 501 W (IM C3510)

Item	Specifications
	Maximum: 1700 W or less
	• IM C4510/GS4045c
	Ready: 40.5 W
	During printing: 577 W
	Maximum: 1850 W or less
	• IM C6010/GS4160c
	Ready: 40.1 W
	During printing: 763 W
	Maximum: 1850 W or less
	The power level when the main switch is turned off and the power cord is plugged into an outlet: 1 W or less
Power	⊕ Region A (mainly Europe)
consumption (Complete	• IM C2010/C2010A/C2510/C2510A/C3010/C3010A/C3510/C3510
system)	A
	Maximum: 1700 W or less
	• IM C4510/C4510A/C5510/C5510A/C6010
	Maximum: 1850 W or less
	The complete system of the IM C2010/C2010A/C2510/C2510A/C3010/C3010A/C3510/C3510 A consists of the main unit, one-pass duplex scanning ADF, lower paper trays, large capacity tray, internal tray 2, internal multi-fold unit, and Booklet Finisher SR3330.
	The complete system of the IM C4510/C4510A/C5510/C5510A/C6010 consists of the main unit, one-pass duplex scanning ADF, lower paper trays, large capacity tray, internal tray 2, internal multi-fold unit, and Booklet Finisher SR3350.
	⊕ Region A (mainly Asia*1)
	• IM C2010/C2510/C2519J/C3010/C3510/C3519J
	Maximum: 1700 W or less
	• IM C4510/C6010
	Maximum: 1850 W or less

Item	Specifications
	 The complete system of the IM C2010/C2510/C2519J/C3010/C3510/C3519J consists of the main unit, one-pass duplex scanning ADF, lower paper trays, large capacity tray, internal tray 2, internal multi-fold unit, and Booklet Finisher SR3330. The complete system of the IM C4510/C6010 consists of the
	main unit, one-pass duplex scanning ADF, lower paper trays, large capacity tray, internal tray 2, internal multi-fold unit, and Booklet Finisher SR3350.
	*1 Except for China.
	∰Region B (mainly North America and Taiwan)
	Maximum: 1584 W or less
	 The complete system of the IM C2010/C2510/C3010/C3510 consists of the main unit, one-pass duplex scanning ADF, lower paper trays, large capacity tray, internal tray 2, internal multi- fold unit, and Booklet Finisher SR3330.
	 The complete system of the IM C4510/C6010 consists of the main unit, one-pass duplex scanning ADF, lower paper trays, large capacity tray, internal tray 2, internal multi-fold unit, and Booklet Finisher SR3350.
	• IM C2010/C2510/C3010/C3510/GS4020c/GS4025c/GS4030c
	Maximum: 1700 W or less
	• IM C4510/C6010/GS4045c/GS4160c
	Maximum: 1850 W or less
	The complete system of the IM C2010/C2510/C3010/C3510/GS4020c/GS4025c/GS4030c consists of the main unit, one-pass duplex scanning ADF, lower paper trays, large capacity tray, internal tray 2, internal multifold unit, and Booklet Finisher SR3330.
	The complete system of the IM C4510/C6010/GS4045c/GS4160c consists of the main unit, one-pass duplex scanning ADF, lower paper trays, large capacity tray, internal tray 2, internal multi-fold unit, and Booklet Finisher SR3350.
Dimensions	Region A(mainly Europe)
	• IM C2010/C2510/C3010/C3510/C4510/C5510 (W × D × H up to ADF):

	Specifications
	587 × 701 × 913 mm (23.2 × 27.6 × 36.0 inches)
	• IM C2010A/C2510A/C3010A/C3510A/C4510A/C5510A/C6010 (W × D × H up to ADF):
	587 × 701 × 963 mm (23.2 × 27.6 × 38.0 inches)
	Region A(mainly Asia*1)
	• IM C2010/C2510/C2519J/C3519J (W × D × H up to ADF):
	587 × 701 × 913 mm (23.2 × 27.6 × 36.0 inches)
	• IM C3010/C3510/C4510/C6010 (W × D × H up to ADF):
	587 × 701 × 963 mm (23.2 × 27.6 × 38.0 inches)
	*1 Except for China.
	® (mainly North America)
	• IM C2010 (W × D × H up to ADF):
	587 × 701 × 913 mm (23.2 × 27.6 × 36.0 inches)
	• IM C2510/C3010/C3510/C4510/C6010 (W × D × H up to ADF):
	587 × 701 × 963 mm (23.2 × 27.6 × 38.0 inches)
	Region A(China)
	• IM
	C2010/C2510/C3010/C3510/C4510/GS4020c/GS4025c/GS40 30c/GS4045c(W × D × H up to exposure glass):
	587 × 701 × 788 mm (23.2 × 27.6 × 31.1 inches)
	 IM C6010/GS4160c (W × D × H up to ADF):
	587 × 701 × 963 mm (23.2 × 27.6 × 38.0 inches)
	Region B(Taiwan)
	• IM C2010/C2510 (W × D × H up to ADF):
	$587 \times 701 \times 913 \text{ mm} (23.2 \times 27.6 \times 36.0 \text{ inches})$
	• IM C3010/C3510/C4510/C6010 (W × D × H up to ADF):
	587 × 701 × 963 mm (23.2 × 27.6 × 38.0 inches)
Space for main unit	$1,104 \times 701$ mm (43.5×27.6 inches) or less (When the bypass tray, external bypass tray, and output trays are open.)
(W × D)	
Noise emission (Sound power	Region A (mainly Europe)
	• IM C2010/C2010A
level: Main unit only)	Stand-by: 17.6 dB
Officy)	Copying: 58.4 dB

Item	Specifications
	• IM C2510/C2510A
	Stand-by: 17.6 dB
	Copying: 58.7 dB
	• IM C3010/C3010A
	Stand-by: 17.6 dB
	Copying: 59.4 dB
	• IM C3510/C3510A
	Stand-by: 17.5 dB
	Copying: 59.9 dB
	• IM C4510/C4510A
	Stand-by: 17.5 dB
	Copying: 62.0 dB
	• IM C5510/C5510A/C6010
	Stand-by: 17.5 dB
	Copying: 64.4 dB
	• IM C2010
	Stand-by: 17.6 dB
	Copying: 58.4 dB
	• IM C2510/C2519J
	Stand-by: 17.6 dB
	Copying: 58.7 dB
	• IM C3010
	Stand-by: 17.6 dB
	Copying: 59.4 dB
	• IM C3510/C3519J
	Stand-by: 17.5 dB
	Copying: 59.9 dB
	• IM C4510
	Stand-by: 17.5 dB
	Copying: 62.0 dB
	• IM C6010
	Stand-by: 17.5 dB

Item	Specifications
	Copying: 64.4 dB
	*1 Except for China.
	⊕ Region B (mainly North America and Taiwan)
	• IM C2010
	Stand-by: 17.6 dB
	Copying: 58.4 dB
	• IM C2510
	Stand-by: 17.6 dB
	Copying: 58.7 dB
	• IM C3010
	Stand-by: 17.6 dB
	Copying: 59.4 dB
	• IM C3510
	Stand-by: 17.5 dB
	Copying: 59.9 dB
	• IM C4510
	Stand-by: 17.5 dB
	Copying: 62.0 dB
	• IM C6010
	Stand-by: 17.5 dB
	Copying: 64.4 dB
	Region A(China)
	• IM C2010/GS4020c
	Stand-by: 17.6 dB
	Copying: 58.4 dB
	• IM C2510/GS4025c
	Stand-by: 17.6 dB
	Copying: 58.7 dB
	• IM C3010/GS4030c
	Stand-by: 17.6 dB
	Copying: 59.4 dB
	• IM C3510
	Stand-by: 17.5 dB

Item		Specifications
	Copying: 59.9 dB	
	• IM C4510/GS4045c	
	Stand-by: 17.5 dB	
	Copying: 62.0 dB	
	• IM C6010/GS4160c	
	Stand-by: 17.5 dB	
	Copying: 64.4 dB	
Noise emission	Region A(mainly Europe)	
(Sound power	• IM C2010/C2010A	
level: Complete system)	Stand-by: 19.0 dB	
, , ,	Copying: 65.9 dB	
	• IM C2510/C2510A	
	Stand-by: 18.0 dB	
	Copying: 66.7 dB	
	• IM C3010/C3010A	
	Stand-by: 19.9 dB	
	Copying: 67.3 dB	
	• IM C3510/C3510A	
	Stand-by: 18.8 dB	
	Copying: 68.2 dB	
	• IM C4510/C4510A	
	Stand-by: 19.1 dB	
	Copying: 69.5 dB	
	• IM C5510/C5510A	
	Stand-by: 19.4 dB	
	Copying: 70.3 dB	
	• IM C6010	
	Stand-by: 19.5 dB	
	Copying: 70.9 dB	
	Region A(mainly Asia*1)	
	• IM C2010	
	Stand-by: 19.0 dB	
	Copying: 65.9 dB	

Τ.	
Item	Specifications TM 00540/005407
	• IM C2510/C2519J
	Stand-by: 18.0 dB
	Copying: 66.7 dB
	• IM C3010
	Stand-by: 19.9 dB
	Copying: 67.3 dB
	• IM C3510/C3519J
	Stand-by: 18.8 dB
	Copying: 68.2 dB
	• IM C4510
	Stand-by: 19.1 dB
	Copying: 69.5 dB
	• IM C6010
	Stand-by: 19.5 dB
	Copying: 70.9 dB
	*1 Except for China.
	⊕Region B (mainly North America and Taiwan)
	• IM C2010
	Stand-by: 19.0 dB
	Copying: 65.9 dB
	• IM C2510
	Stand-by: 18.0 dB
	Copying: 66.7 dB
	• IM C3010
	Stand-by: 19.9 dB
	Copying: 67.3 dB
	• IM C3510
	Stand-by: 18.8 dB
	Copying: 68.2 dB
	• IM C4510
	Stand-by: 19.1 dB
	Copying: 69.5 dB
	• IM C6010

Item	Specifications
	Stand-by: 19.5 dB
	Copying: 70.9 dB
	Region A(China)
	• IM C2010/GS4020c
	Stand-by: 19.0 dB
	Copying: 65.9 dB
	• IM C2510/GS4025c
	Stand-by: 18.0 dB
	Copying: 66.7 dB
	• IM C3010/GS4030c
	Stand-by: 19.9 dB
	Copying: 67.3 dB
	• IM C3510
	Stand-by: 18.8 dB
	Copying: 68.2 dB
	• IM C4510/GS4045c
	Stand-by: 19.1 dB
	Copying: 69.5 dB
	• IM C6010/GS4160c
	Stand-by: 19.5 dB
	Copying:70.9 dB
Noise emission	⊕ Region A (mainly Europe)
(Sound pressure level:	• IM C2010/C2010A
Main unit only)	Stand-by: 3.0 dB
	Copying: 44.5 dB
	• IM C2510/C2510A
	Stand-by: 3.0 dB
	Copying: 45.4 dB
	• IM C3010/C3010A
	Stand-by: 3.2 dB
	Copying: 45.7 dB
	• IM C3510/C3510A
	Stand-by: 3.1 dB

Item	Specifications
	Copying: 46.1 dB
	• IM C4510/C4510A
	Stand-by: 3.2 dB
	Copying: 48.4 dB
	• IM C5510/C5510A
	Stand-by: 2.9 dB
	Copying: 50.4 dB
	• IM C6010
	Stand-by: 2.9 dB
	Copying: 50.3 dB
	• IM C2010
	Stand-by: 3.0 dB
	Copying: 44.5 dB
	• IM C2510/C2519J
	Stand-by: 3.0 dB
	Copying: 45.4 dB
	• IM C3010
	Stand-by: 3.2 dB
	Copying: 45.7 dB
	• IM C3510/C3519J
	Stand-by: 3.1 dB
	Copying: 46.1 dB
	• IM C4510
	Stand-by: 3.2 dB
	Copying: 48.4 dB
	• IM C6010
	Stand-by: 2.9 dB
	Copying: 50.3 dB
	*1 Except for China.
	Region B(mainly North America and Taiwan)
	• IM C2010
	Stand-by: 3.0 dB

Item	Specifications
	Copying: 44.5 dB
	• IM C2510
	Stand-by: 3.0 dB
	Copying: 45.4 dB
	• IM C3010
	Stand-by: 3.2 dB
	Copying: 45.7 dB
	• IM C3510
	Stand-by: 3.1 dB
	Copying: 46.1 dB
	• IM C4510
	Stand-by: 3.2 dB
	Copying: 48.4 dB
	• IM C6010
	Stand-by: 2.9 dB
	Copying: 50.3 dB
	Region A(China)
	• IM C2010/GS4020c
	Stand-by: 3.0 dB
	Copying: 44.5 dB
	• IM C2510/GS4025c
	Stand-by: 3.0 dB
	Copying: 45.4 dB
	• IM C3010/GS4030c
	Stand-by: 3.2 dB
	Copying: 45.7 dB
	• IM C3510
	Stand-by: 3.1 dB
	Copying: 46.1 dB
	• IM C4510/GS4045c
	Stand-by: 3.2 dB
	Copying: 48.4 dB
	• IM C6010/GS4160c

Item	Specifications
	Stand-by: 2.9 dB
	Copying: 50.3 dB
Noise emission (Sound pressure level: Complete system)	Copying: 50.3 dB Region A (mainly Europe) IM C2010/C2010A Stand-by: 3.0 dB Copying: 51.8 dB IM C2510/C2510A Stand-by: 3.4 dB Copying: 52.7 dB IM C3010/C3010A Stand-by: 3.1 dB Copying: 52.7 dB IM C3510/C3510A Stand-by: 3.1 dB Copying: 53.4 dB Copying: 53.4 dB IM C4510/C4510A
	Stand-by: 3.0 dB Copying: 54.2 dB IM C5510/C5510A Stand-by: 3.6 dB Copying: 55.2 dB IM C6010 Stand-by: 3.0 dB Copying: 55.8 dB Region A(mainly Asia*1) IM C2010 Stand-by: 3.0 dB Copying: 51.8 dB IM C2510/C2519J Stand-by: 3.4 dB Copying: 52.7 dB IM C3010 Stand-by: 3.1 dB

Item	Specifications
	Copying: 52.7 dB
	• IM C3510/C3519J
	Stand-by: 3.1 dB
	Copying: 53.4 dB
	• IM C4510
	Stand-by: 3.0 dB
	Copying: 54.2 dB
	• IM C6010
	Stand-by: 3.0 dB
	Copying: 55.8 dB
	*1 Except for China.
	⊕Region B (mainly North America and Taiwan)
	• IM C2010
	Stand-by: 3.0 dB
	Copying: 51.8 dB
	• IM C2510
	Stand-by: 3.4 dB
	Copying: 52.7 dB
	• IM C3010
	Stand-by: 3.1 dB
	Copying: 52.7 dB
	• IM C3510
	Stand-by: 3.1 dB
	Copying: 53.4 dB
	• IM C4510
	Stand-by: 3.0 dB
	Copying: 54.2 dB
	• IM C6010
	Stand-by: 3.0 dB
	Copying: 55.8 dB
	Region A(China)
	• IM C2010/GS4020c
	Stand-by: 3.0 dB

 measured in accordance with ISO 7779. Sound pressure levels are measured from the position of the bystander. The complete system of the IM C2010/C2010A/C2510/C2510A consists of the main unit, one-pass duplex scanning ADF, internal tray 2, lower paper trays, and Internal Finisher SR3310. The complete system of the IM C3010/C3010A/C3510/C3510A consists of the main unit, one-pass duplex scanning ADF, internal tray 2, bridge unit, lower paper trays, large capacity tray and Booklet Finisher SR3330. The complete system of the IM C4510/C4510A/C5510A/C5510A/C6010 consists of the main 	Item	Specifications
Copying: 55.8 dB Noise emission (Sound pressure level) Sound power levels and sound pressure levels are actual values measured in accordance with ISO 7779. Sound pressure levels are measured from the position of the bystander. The complete system of the IM C2010/C2010A/C2510/C2510A consists of the main unit, one-pass duplex scanning ADF, internal tray 2, lower paper trays, and Internal Finisher SR3310. The complete system of the IM C3010/C3010A/C3510/C3510A consists of the main unit, one-pass duplex scanning ADF, internal tray 2, bridge unit, lower paper trays, large capacity tray and Booklet Finisher SR3330. The complete system of the IM C4510/C4510A/C5510/C5510A/C6010 consists of the main unit, one-pass duplex scanning ADF, internal tray 2, bridge unit, lower paper trays, large capacity tray, and Booklet Finisher	Ttem	Copying: 51.8 dB IM C2510/GS4025c Stand-by: 3.4 dB Copying: 52.7 dB IM C3010/GS4030c Stand-by: 3.1 dB Copying: 52.7 dB IM C3510 Stand-by: 3.1 dB Copying: 53.4 dB IM C4510/GS4045c Stand-by: 3.0 dB Copying: 54.2 dB IM C6010/GS4160c
 (Sound pressure level) Sound power levels and sound pressure levels are actual values measured in accordance with ISO 7779. Sound pressure levels are measured from the position of the bystander. The complete system of the IM C2010/C2010A/C2510/C2510A consists of the main unit, one-pass duplex scanning ADF, internal tray 2, lower paper trays, and Internal Finisher SR3310. The complete system of the IM C3010/C3010A/C3510/C3510A consists of the main unit, one-pass duplex scanning ADF, internal tray 2, bridge unit, lower paper trays, large capacity tray and Booklet Finisher SR3330. The complete system of the IM C4510/C4510A/C5510/C5510A/C6010 consists of the main unit, one-pass duplex scanning ADF, internal tray 2, bridge unit, lower paper trays, large capacity tray, and Booklet Finisher 		
 Sound power levels and sound pressure levels are actual values measured in accordance with ISO 7779. Sound pressure levels are measured from the position of the bystander. The complete system of the IM C2010/C2010A/C2510/C2510A consists of the main unit, one-pass duplex scanning ADF, internal tray 2, lower paper trays, and Internal Finisher SR3310. The complete system of the IM C3010/C3010A/C3510/C3510A consists of the main unit, one-pass duplex scanning ADF, internal tray 2, bridge unit, lower paper trays, large capacity tray and Booklet Finisher SR3330. The complete system of the IM C4510/C4510A/C5510/C5510A/C6010 consists of the main unit, one-pass duplex scanning ADF, internal tray 2, bridge unit, lower paper trays, large capacity tray, and Booklet Finisher 	Noise emission	
 internal tray 2, lower paper trays, and Internal Finisher SR3310. The complete system of the IM C3010/C3010A/C3510/C3510A consists of the main unit, one-pass duplex scanning ADF, internal tray 2, bridge unit, lower paper trays, large capacity tray and Booklet Finisher SR3330. The complete system of the IM C4510/C4510A/C5510/C5510A/C6010 consists of the main unit, one-pass duplex scanning ADF, internal tray 2, bridge unit, lower paper trays, large capacity tray, and Booklet Finisher 	,	 Sound power levels and sound pressure levels are actual values measured in accordance with ISO 7779. Sound pressure levels are measured from the position of the bystander. The complete system of the IM C2010/C2010A/C2510/C2510A
Region A (mainly Asia*1)		 internal tray 2, lower paper trays, and Internal Finisher SR3310. The complete system of the IM C3010/C3010A/C3510/C3510A consists of the main unit, one-pass duplex scanning ADF, internal tray 2, bridge unit, lower paper trays, large capacity tray, and Booklet Finisher SR3330. The complete system of the IM C4510/C4510A/C5510/C5510A/C6010 consists of the main unit, one-pass duplex scanning ADF, internal tray 2, bridge unit, lower paper trays, large capacity tray, and Booklet Finisher SR3350.





- Sound power levels and sound pressure levels are actual values measured in accordance with ISO 7779.
- Sound pressure levels are measured from the position of the bystander.
- The complete system of the IM C2010/C2510/C2519J consists of the main unit, one-pass duplex scanning ADF, internal tray 2, lower paper trays, and Internal Finisher SR3310.
- The complete system of the IM C3010/C3510/C3519J consists of the main unit, one-pass duplex scanning ADF, internal tray 2, bridge unit, lower paper trays, large capacity tray, and Booklet Finisher SR3330.
- The complete system of the IM C4510/C6010 consists of the main unit, one-pass duplex scanning ADF, internal tray 2, bridge unit, lower paper trays, large capacity tray, and Booklet Finisher SR3350.
- *1 Except for China.
- Region B(mainly North America and Taiwan)



- Sound power levels and sound pressure levels are actual values measured in accordance with ISO 7779.
- Sound pressure levels are measured from the position of the bystander.
- The complete system of the IM C2010/C2510 consists of the main unit, one-pass duplex scanning ADF, internal tray 2, lower paper trays, and Internal Finisher SR3310.
- The complete system of the IM C3010/C3510 consists of the main unit, one-pass duplex scanning ADF, internal tray 2, bridge unit, lower paper trays, large capacity tray, and Booklet Finisher SR3330.
- The complete system of the IM C4510/C6010 consists of the main unit, one-pass duplex scanning ADF, internal tray 2, bridge unit, lower paper trays, large capacity tray, and Booklet Finisher SR3350.





- Sound power levels and sound pressure levels are actual values measured in accordance with ISO 7779.
- Sound pressure levels are measured from the position of the bystander.

Item	Specifications
	The complete system of the IM C2010/C2510/GS4020c/GS4025c consists of the main unit, one-pass duplex scanning ADF, internal tray 2, lower paper trays, and Internal Finisher SR3310.
	 The complete system of the IM C3010/C3510/GS4030c consists of the main unit, one-pass duplex scanning ADF, internal tray 2, bridge unit, lower paper trays, large capacity tray, and Booklet Finisher SR3330.
	 The complete system of the IM C4510/C6010/GS4045c/GS4160c consists of the main unit, one-pass duplex scanning ADF, internal tray 2, bridge unit, lower paper trays, large capacity tray, and Booklet Finisher SR3350.
Weight	⊕ Region A(mainly Europe)
	• IM C2010/C2510
	Approx. 90 kg (198.5 lb.)
	• IM C2010A/C2510A
	Approx. 97 kg (213.9 lb.)
	• IM C3010/C3510
	Approx. 93 kg (205.1 lb.)
	• IM C3010A/C3510A
	Approx. 100 kg (220.5 lb.)
	• IM C4510/C5510
	Approx. 95 kg (209.5 lb.)
	• IM C4510A/C5510A/C6010
	Approx. 101 kg (222.7 lb.)
	<u>™ Region</u> A(mainly Asia ^{*1})
	• IM C2010/C2510/C2519J
	Approx. 90 kg (198.5 lb.)
	• IM C3010/C3510/C3519J
	Approx. 100 kg (220.5 lb.)
	• IM C4510/C6010
	Approx. 101 kg (222.7 lb.)
	*1 Except for China.
	® (mainly North America)
	• IM C2010

Item	Specifications
	Approx. 90 kg (198.5 lb.)
	• IM C2510
	Approx. 97 kg (213.9 lb.)
	• IM C3010/C3510
	Approx. 100 kg (220.5 lb.)
	• IM C4510/C6010
	Approx. 101 kg (222.7 lb.)
	Region A(China)
	• IM C2010/C2510/GS4020c/GS4025c
	Approx. 82 kg (180.8 lb.)
	• IM C3010/C3510/GS4030c
	Approx. 85 kg (187.4 lb.)
	• IM C4510/GS4045c
	Approx. 86 kg (189.6 lb.)
	• IM C6010/GS4160c
	Approx. 101 kg (222.7 lb.)
	Region B(Taiwan)
	• IM C2010/C2510
	Approx. 90 kg (198.5 lb.)
	• IM C3010/C3510
	Approx. 100 kg (220.5 lb.)
	• IM C4510/C6010
	Approx. 101 kg (222.7 lb.)

Specifications for the Document Server

Item	Specifications
Internal storage (Document Server)	Approx. 25 GB Maximum: 9,000 pages (Total number of pages that can be stored with all functions combined.) Copy/B&W/A4 original: Approx. 9,000 pages Copy/Full Color/A4 original: Approx. 2,000 pages Printer/Full Color/A4/600 dpi, 2 bits: Approx. 9,000 pages Scanner/Full Color/A4/200 dpi, 8 bits/JPEG: Approx. 9,000 pages

Item	Specifications
	(Under the printer and scanner modes, the number of the pages that can be stored depends on the print image and original.)
Maximum number of stored documents	3,000 documents
Number of pages supported by memory sorting	Maximum: 2,000 pages Copy/B&W/A4 original: Approx. 2,000 pages Printer/B&W/A4/600 dpi, 4 bits: Approx. 2,000 pages (Under the printer mode, the number of pages that can be sorted depends on the print image.)



• After the documents have been stored up to the maximum, no more document can be stored. Delete unneeded documents.

Specifications for Facsimile

This function may not be used depending on the telephone line or area status.



• To connect the machine to the network, use a LAN cable supporting 1000BASE-T, 100BASE-TX, and 10BASE-T. The length of the usable cable is up to 100 m.

Fax Transmissions and Reception

Item	Specifications
Standard	G3
Resolution	 Standard: 8 × 3.85 lines/mm, 200 × 100 dpi (Standard character), 8 × 7.7 lines/mm, 200 × 200 dpi (Detail character) Optional: 8 × 15.4 lines/mm, 16 × 15.4 lines/mm, 400 × 400 dpi (Super Fine character)*1
Transmission time	3 seconds at 28,800 bps, Standard resolution (JBIG transmission: 2 seconds)
Data compression method	MH, MR, MMR, JBIG ^{*2}
Maximum original size	Standard: A3 □ or 11 × 17 □ Custom (w × h): 297 × 1,200 mm (11.7 × 47.3 inches)

Item	Specifications
Maximum scanning size	297 × 1,200 mm (11.7 × 47.3 inches)
Print process	Laser beam scanning and electro-photographic printing
Transmission speed	33,600 / 31,200 / 28,800 / 26,400 / 24,000 / 21,600 / 19,200 / 16,800 / 14,400 / 12,000 / 9,600 / 7,200 / 4,800 / 2,400 bps (auto shift down system)

^{*1} For Super Fine transmission, a fax memory unit is required.

Internet Fax Transmissions and Reception

Item	Specifications
Network	Standard: Ethernet (10BASE-T/100BASE-TX/1000BASE-T) Option: IEEE802.11a/b/g/n/ac wireless LAN interface Wired LAN and wireless LAN cannot be used at the same time.
Transmit function	E-mail
Scan line density	 Standard: 200 × 100 dpi (Standard character), 200 × 200 dpi (Detail character) Optional: 200 × 400 dpi, 400 × 400 dpi (Super Fine character)*1*2
Original size: Scanning width	297 mm (A3 [□]) ^{*1} , 257 mm (B4 JIS [□]) ^{*1} , 210 mm (A4 [□])
Communicatio n Protocols	 Transmission: SMTP, TCP/IP Reception: POP3, SMTP, IMAP4, TCP/IP
E-mail format	Single/Multi-part, MIME Conversion Attached file forms: TIFF-F (MH, MR ^{*1} , MMR ^{*1} compression)
Internet communication	Send and receive e-mail with a computer that has an e-mail address

^{*2} JBIG transmission cannot be performed if the JBIG reception and ECM functions are not available on the destination fax. The ECM function is valid for communication over the G3 line.

Item	Specifications
Encryption method (for forwarding)	S/MIME
Internet Fax send functions:	Automatic conversion of sent documents to e-mail format and e-mail transmission. Memory transmission only.
Internet Fax receive functions	Automatic detection and printing of appended TIFF-F (MH) files and ASCII text. Memory reception only.

^{*1} Full mode

IP-Fax Transmissions and Reception

Item	Specifications
Network	Standard: Ethernet (10BASE-T/100BASE-TX/1000BASE-T) Option: IEEE802.11a/b/g/n/ac wireless LAN interface Wired LAN and wireless LAN cannot be used at the same time.
Scan line density	 Standard: 8 × 3.85 lines/mm, 200 × 100 dpi (Standard character), 8 × 7.7 lines/mm, 200 × 200 dpi (Detail character) Optional: 8 × 15.4 lines/mm, 16 × 15.4 lines/mm, 400 × 400 dpi (Super Fine character)*1
Maximum original size	Standard: A3 or 11 × 17 C Custom (w × h): 297 × 1,200 mm (11.7 × 47.3 inches)
Maximum scanning size	297 × 1,200 mm (11.7 × 47.3 inches)
Transmission protocol	Recommendation: T.38, TCP, UDP/IP communication, SIP (RFC 3261 compliant), H.323 v2
Compatible machines	IP-Fax compatible machines
IP-Fax transmission function	Specify an IP address and send faxes to an IP-Fax compatible fax through a network. Also capable of sending faxes to a G3 fax connected to a telephone
	line via a VoIP gateway.

^{*2} For superfine-character transmission, a fax memory unit is required.

Item	Specifications
IP-Fax reception function	Receive faxes sent from an IP-Fax compatible fax through a network. Also capable of receiving faxes from a G3 fax connected to a telephone line via a VoIP gateway.

^{*1} For detail-character and superfine-character transmission, a fax memory unit is required.

Validated Peripherals

Item	Specifications
Gateway (T.38 compliant)	InnovaPhone VoIP-Gateway IP305
	Software version: v7 hotfix (09-70300.17)
	Cisco VoIP-Gateway (Operation confirmed with H.323)
	Software version: IOS12.3 (5)
	Platform: Cisco2600XM, 3725, 847-4V, 26XX, 36XX, 37XX, 7200, AS5300, ICS 7750
	Siemens VoIP-Gateway RG8300 (Operation confirmed with SIP)
	Software version: Version 5
Gatekeeper	InnovaPhone VoIP-Gateway IP305
·	Software version: v7 hotfix (09-70300.17)
	Cisco Gatekeeper
	Software version: IOS12.1 (2) T
	Platform: Cisco2600XM, 3620, 3640, 3660, 3725, 3745, 7200, 7400
SIP server	Cisco SIP proxy server
	Software version: Version 2.0
	Cisco VoIP-Gateway
	Software version: IOS12.3 (17) a
	Platform: Cisco3725 (256Mbyte RAM), Cisco2621XM (128Mbyte RAM)
	Cisco unified CallManager
	Software version: Ver6.2
	InnovaPhone VoIP-Gateway IP305
	Software version: v7 hotfix (09-70300.17)
	Siemens HiPath8000 (Operation confirmed with SIP)
	Software version: Voice redundant v4

- You can assign multiple addresses of the machine in the IPv6 environment, but only one address can receive IP-fax.
- The SIP connection is specified to connect to either IPv4 or IPv6 depending on the environment of the machine. To change the setting, contact your local dealer.

E-mail Transmission and Folder Transmission (Fax (Classic) only)

Item	Specifications
Network	Standard: Ethernet (10BASE-T/100BASE-TX/1000BASE-T) Option: IEEE802.11a/b/g/n/ac wireless LAN interface Wired LAN and wireless LAN cannot be used at the same time.
Scan line density	 Standard: 200 × 100 dpi (Standard character)^{*1}, 200 × 200 dpi (Detail character) Optional: 200 × 400 dpi, 400 × 400 dpi (Super Fine character)^{*2}
Maximum original size	Standard: A3 or 11 × 17 Custom (w × h): 297 × 1,200 mm (11.7 × 47.3 inches)
Maximum scanning size (w × h)	297 × 1,200 mm (11.7 × 47.3 inches)
E-mail transmission protocols	SMTP, TCP/IP
Protocols for sending files to folders	SMB, FTP, TCP/IP
E-mail format	Single/Multi-part, MIME Conversion
File formats	TIFF (MH, MR, MMR compression), PDF, PDF/A When you select PDF or PDF/A for the file format, you can attach a digital signature.
Authentication methods	SMTP-AUTH, POP before SMTP
Encryption method	S/MIME

Item	Specifications
E-mail sending functions	Automatically converts documents to e-mail format and sends them as e-mail.
Sending to folder functions	Sends scanned files over the network to shared folders or FTP server folders.

^{*1} When you send documents in TIFF format.

E-mail Reception

Item	Specifications
Network	Standard: Ethernet (10BASE-T/100BASE-TX/1000BASE-T) Option: IEEE802.11a/b/g/n/ac wireless LAN interface Wired LAN and wireless LAN cannot be used at the same time.
E-mail reception protocols (Mail to Print)	POP3, SMTP, IMAP4, TCP/IP
E-mail format	Single/Multi-part, MIME Conversion
File formats (Mail to Print)	JPEG (JFIF), PDF
Authentication methods	A-POP
Encryption method	S/MIME
E-mail receiving functions	Automatically detects and outputs JPEG and PDF documents attached to received e-mail.

Specifications for Printer

Item	Specifications
Printing speed	

^{*2} For detail-character and superfine-character transmission, a fax memory unit is required.


Item	Specifications
	• IM C2010/C2010A: 20 sheets/minute
	• IM C2510/C2510A: 25 sheets/minute
	• IM C3010/C3010A: 30 sheets/minute
	• IM C3510/C3510A: 35 sheets/minute
	• IM C4510/C4510A: 45 sheets/minute
	• IM C5510/C5510A: 55 sheets/minute
	• IM C6010: 60 sheets/minute
	⊕ Region A (mainly Asia*1)/ ⊕ Region B (mainly North America and)
	Taiwan)
	• IM C2010: 20 sheets/minute
	• IM C2510/C2519J: 25 sheets/minute
	• IM C3010: 30 sheets/minute
	• IM C3510/C3519J: 35 sheets/minute
	• IM C4510: 45 sheets/minute
	IM C6010: 60 sheets/minute
	*1 Except for China.
	 IM C2010/GS4020c: 20 sheets/minute
	• IM C2510/GS4025c: 25 sheets/minute
	• IM C3010/GS4030c: 30 sheets/minute
	• IM C3510: 35 sheets/minute
	• IM C4510/GS4045c: 45 sheets/minute
	IM C6010/GS4160c: 60 sheets/minute
	(A4 \square , 8 1 / ₂ × 11 \square , plain paper, one-side printing)
Resolution	200 dpi, 300 dpi, 400 dpi, 600 dpi, 1,200 dpi
Printer	Standard:
language	PCL5c/6(XL), PostScript 3 Emulation, PDF Emulation, MediaPrint (JPEG, TIFF)
	• Option:
	Genuine Adobe PostScript 3, PDF Direct from Adobe, PictBridge, IPDS, XPS
Interface	Standard:
	Ethernet (10BASE-T/100BASE-TX/1000BASE-T)

Item Specifications USB2.0 (Type A) port USB2.0 (Type B) port USB2.0 (Type A) port (on the control panel) Option:	
USB2.0 (Type B) port USB2.0 (Type A) port (on the control panel)	
USB2.0 (Type A) port (on the control panel)	
· ·	
IEEE 802.11a/b/g/n/ac wireless LAN interface	
File format converter	
Device Server option	
Network TCP/IP (IPv4, IPv6) protocol	
USB interface • Transmission spec:	
USB 2.0 Standard	
Connectable device:	
Devices corresponding to USB 2.0 Standard	
Operating • Windows 8.1/10/11	
• Windows Server 2012/2012 R2/2016/2019/202	2
• macOS 10.14 or later	
Fonts • PCL 5c/6(XL): 80 fonts, 13 International fonts	
PostScript 3 Emulation: 80 fonts, 13 International	al fonts
PDF Emulation: 80 fonts, 13 International fonts	
Genuine Adobe PDF: 136 fonts	
Genuine Adobe PostScript 3: 136 fonts	
IPDS: 108 fonts	
Store function Total number of documents that can be stored: Up to documents	100
Number of pages for each document that can be store pages	ed: Up to 2,000
Total number of pages of all documents that can be significant of pages.	tored: Up to
Sort function Number of pages that can be sorted: Up to 2,000 pag	es
Number of copies that can be sorted: Up to 999 copie	·S

U Note

• To connect the machine to the network, use a LAN cable supporting 1000BASE-T, 100BASE-TX, and 10BASE-T. The maximum length for the cable connecting the machine to an Ethernet network is 100 meters.

Specifications for Scanner

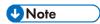

• To connect the machine to the network, use a LAN cable supporting 1000BASE-T, 100BASE-TX, and 10BASE-T. The length of the usable cable is up to 100 m.

Scanning

Item	Specifications
Туре	Full-color scanner
Scan method	Flatbed scanning
Image sensor type	CMOS Image Sensor
Scan type	Sheet, book, three-dimensional object
Original sizes that can be scanned	 Exposure glass Length: 10–297 mm (0.4–11.6 inches), Width: 10–432 mm (0.4–17.0 inches) ARDF Length: 128–297 mm (5.1–11.6 inches), Width: 128–432 mm (5.1–17.0 inches) One-pass duplex scanning ADF Length: 51–297 mm (2.1–11.6 inches), Width: 89–432 mm (3.6–17.0 inches)
Scan sizes automatically detectable	 Exposure glass — Region A (mainly Europe and Asia) / — Region B (Taiwan) A3□, A4, A5□, B4 JIS□, B5 JIS — Region B (mainly North America) 11 × 17□, 8¹/2 × 14□, 8¹/2 × 13²/5□, 8¹/2 × 11, 5¹/2 × 8¹/2□ • ARDF — Region A (mainly Europe and Asia) / — Region B (Taiwan) A3□, A4, A5, B4 JIS□, B5 JIS, B6 JIS, 11 × 17□, 8¹/2 × 11, 8¹/2 × 13□ — Region B (mainly North America)

Item	Specifications
Item	A3 \square , A4, 11 × 17 \square , 8 1 / ₂ × 14 \square , 8 1 / ₂ × 11, 7 1 / ₄ × 10 1 / ₂ \square , 5 1 / ₂
	$\times 8^{1}/_{2}, 10 \times 14^{\square}$
	One-pass duplex scanning ADF
	⊕ Region A (mainly Europe and Asia) / ⊕ Region B (Taiwan)
	A3 \Box , A4, A5, A6 \Box , A7 \Box , B4 JIS \Box , B5 JIS, B6 JIS, B7 JIS, 11 × 17 \Box , 8 1 / ₂ × 11, 8 1 / ₂ × 13 \Box , Business Card \Box
	® Region B (mainly North America)
	A3 \square , A4, 11 × 17 \square , 8 1 / ₂ × 14 \square , 8 1 / ₂ × 11, 7 1 / ₄ × 10 1 / ₂ \square , 5 1 / ₂ × 8 1 / ₂ , 10 × 14 \square , Business Card \square
Scan speed	• ARDF
	 When scanning A4□ (black and white, full color)
	80 pages/minute
	• When scanning $8^1/_2 \times 11 \square$ (black and white, full color)
	79 pages/minute
	When using the E-mail, Scan to Folder, WSD (Push Type), or Scan to Removable device (Original size: A4 \(\bar{\pi}/8^1/_2 \times 11\), Resolution: 200 dpi/300 dpi)
	Black and white
	Original Type: B & W two-value, Compression (MMR): Compressed, ITU-T No1 Chart
	• Full color
	Original type: Text / Photo, Compression (Gray Scale / Full Color): Default, Original Chart
	Scanning speed differs depending on the operating environment of the machine and computer, scan settings, and the content of originals.
	One-pass duplex scanning ADF
	 When scanning one-sided originals (black and white, full color, Resolution: 200 dpi)
	150 pages/minute
	 When scanning two-sided originals (black and white, full color, Resolution: 200 dpi)
	300 pages/minute
	 When scanning one-sided originals (black and white, full color, Resolution: 300 dpi)

Item	Specifications
	120 pages/minute
	 When scanning two-sided originals (black and white, full color, Resolution: 300 dpi)
	220 pages/minute
	When using the E-mail, Scan to Folder, WSD (Push Type), or Scan to Removable device (Original size: $A4D/8^{1}/2 \times 11$)
	Black and white
	Original Type: B & W two-value, Compression (MMR): Compressed, ITU-T No1 Chart
	Full Color
	Original type: Text/Photo, Compression (Gray Scale/Full Color): Default, Original Chart
	Scanning speed differs depending on the operating environment of the machine and computer, scan settings, and the content of originals.
Tone	Black & White: 2 tones
	• Full Color/Gray Scale: 256 tones
Basic scanning resolution:	600 dpi
Image compression type for black and white (two-value)	MH, MR, MMR, JBIG2
Image compression type for gray scale/full color	JPEG
Interface	Standard:
	Ethernet (10BASE-T/100BASE-TX/1000BASE-T)
	USB 2.0 (Type A) port (on the control panel)
	• Option:
	IEEE 802.11a/b/g/n/ac wireless LAN interface
	Wired LAN and wireless LAN cannot be used at the same time.

Item	Specifications
Network protocol	TCP/IP
WSD	Supported
DSM	Supported*1

^{*1} The function can be used only in Scanner (Classic).

E-mail transmission

Item	Specifications
Scanning resolution	100 dpi, 200 dpi, 300 dpi, 400 dpi, 600 dpi
Protocol*1	POP, SMTP ^{*2} , IMAP4
Output format	TIFF, JPEG, PDF, High Compression PDF, PDF/A, Searchable PDF*3*4

^{*1} Supporting Web mail transmission

^{*4} The number of characters that can be scanned optically is about 40,000 characters per page.



- When you select [PDF], [High Comp. PDF], or [PDF/A] for the file format, you can attach a digital signature. You can also specify the security settings for [PDF] or [High Comp. PDF].
 - See "Scanning an Original as a PDF with Security Settings Specified", User Guide (HTML).
- To specify High Compression PDF for the PDF type, the following settings are required:
 - Selecting Gray Scale or Full Color for [Original Type] under [Send Settings]
 - Selecting [100%] for [Scan Ratio] under [Send Settings]
 - Selecting [200 dpi], [300 dpi], [400 dpi], or [600 dpi] for [Resolution] under [Send Settings]
 - Selecting other than [Preview]
 - Specifying [PDF File Type: PDF/A Fixed] under [Settings]
 ▶ [Settings for Administrator]
 ▶ [File Management] to [Off]

Scan to Folder

^{*2} Supporting SMTP over SSL

^{*3} To perform OCR, the OCR unit is required.

Item	Specifications
Scanning resolution	100 dpi, 200 dpi, 300 dpi, 400 dpi, 600 dpi
Protocol	SMB, FTP
Output format	TIFF, JPEG, PDF, High Compression PDF, PDF/A, Searchable PDF ^{*1*2}
Operating system	 Windows 8.1/10/11 Windows Server 2012/2012 R2/2016/2019/2022 macOS 10.14 or later

^{*1} To perform OCR, the OCR unit is required.

^{*2} The number of characters that can be scanned optically is about 40,000 characters per page.



- When you select [PDF], [High Comp. PDF], or [PDF/A] for the file format, you can attach a digital signature. You can also specify the security settings for [PDF] or [High Comp. PDF].
 - See "Scanning an Original as a PDF with Security Settings Specified", User Guide (HTML).
- To specify High Compression PDF for the PDF type, the following settings are required:
 - Selecting Gray Scale or Full Color for [Original Type] under [Send Settings]
 - Selecting [100%] for [Scan Ratio] under [Send Settings]
 - Selecting [200 dpi], [300 dpi], [400 dpi], or [600 dpi] for [Resolution] under [Send Settings]
 - Selecting other than [Preview]
 - Specifying [PDF File Type: PDF/A Fixed] under [Settings]
 ▶ [Settings for Administrator]
 ▶ [File Management] to [Off]

Network TWAIN Scanner

Item	Specifications
Scanning resolution	100–1,200 dpi ^{*1}
Protocol	TCP/IP
Operating system	 Windows 8.1/10/11 Windows Server 2012/2012 R2/2016/2019/2022

Item	Specifications
	(TWAIN scanner runs in 32-bit compatible mode on a 64-bit operating system, so TWAIN scanner is not compatible with 64-bit applications. Use 32-bit applications. IC card Authentication System is not compatible with 64-bit operating system.)

^{*1} The maximum resolution depends on the scan size.

WIA scanner

Item	Specifications
Scanning resolution	100–1,200 dpi ^{*1}
(Main scanning × Sub-scanning)	
Protocol	TCP/IP
Operating system	 Windows 8.1/10/11 Windows Server 2012/2012 R2/2016/2019/2022 (WIA scanner can function under both 32- and 64-bit operating systems.)

^{*1} The maximum resolution depends on the scan size.

Specifications for One-pass Duplex Scanning ADF

Item	Specifications
Mode	Batch mode, SADF mode, Mixed Sizes mode, Custom Size originals mode, Original Orientation mode, Original Thickness mode
Original size	⊕ Region A (mainly Europe and Asia) / ⊕ Region B (Taiwan)
	A3 \square -A7 \square , B4 JIS \square -B8 JIS, 11 × 17 \square -8 1 / ₂ × 11, Business Card \square
	® (mainly North America)
	$11 \times 17^{\square} - 5^{1}/_{2} \times 8^{1}/_{2}$, A3 $^{\square}$ -A4, Business Card $^{\square}$
Original weight	One-sided originals
	Larger than A6: 38-220 g/m² (Approx. 10 lb. Bond-80 lb. Cover)
	A6 or smaller: 64-220 g/m² (Approx. 16 lb. Bond-80 lb. Cover)
	Two-sided originals

Specifications for Auto Reverse Document Feeder (ARDF)

Item	Specifications
Mode	Batch mode, SADF mode, Mixed Sizes mode, Custom Size originals mode, Original Orientation mode
Original Size	⊕ Region A (mainly Europe and Asia) / ⊕ Region B (Taiwan)
	A3 \Box -A5, B4 JIS \Box -B6 JIS, 11 × 17 \Box -8 $^{1}/_{2}$ × 11
	You cannot scan two sides of B6 JIS originals.
	⊕ Region B (mainly North America)
	$11 \times 17 \Box -5^{1}/_{2} \times 8^{1}/_{2}$, A3 $\Box -$ A4
	You cannot scan two sides of B6 JIS originals.
Original weight	1 Sided: 40-128 g/m² (Approx. 11-34 lb. Bond)
	Two Sided: 52-128 g/m² (Approx. 14-34 lb. Bond)
Number of originals to be set	100 sheets (80 g/m2, Approx. 20 lb. Bond)
Power requirements	Power is supplied from the main unit.

Item	Specifications
Maximum power consumption	42 W or less
Dimensions (W × D × H)	565 × 500 × 125 mm (22.3 × 19.7 × 5.0 inches)
Weight	Approx. 9 kg (19.9 lb.)

Specifications for Internal Finisher SR3310

Item	Specifications
Paper size	A3 , A4, A5, A6 , B4 JIS , B5 JIS, B6 JIS , $11 \times 17^{\Box}$, $8^{1}/_{2} \times 14^{\Box}$, $8^{1}/_{2} \times 13^{\Box}$, $8^{1}/_{2} \times 11$, $8^{1}/_{4} \times 14^{\Box}$, $8^{1}/_{4} \times 13^{\Box}$, $8 \times 13^{\Box}$, $8 \times 10^{\Box}$, $7^{1}/_{4} \times 10^{1}/_{2}$, $5^{1}/_{2} \times 8^{1}/_{2}^{\Box}$, $4^{1}/_{8} \times 9^{1}/_{2}$, $3^{7}/_{8} \times 7^{1}/_{2}$, C5 Env, C6 Env, DL Env, 8K , 16 K, $12 \times 18^{\Box}$, $11 \times 15^{\Box}$, $10 \times 14^{\Box}$, SRA3 , SRA4, $8^{1}/_{2} \times 13^{2}/_{5}^{\Box}$, custom size
Paper weight	52–300 g/m² (Approx. 14 lb. Bond–110 lb. Cover)
Paper sizes that can be shifted	A3 \Box , A4, A5, B4 JIS \Box , B5 JIS, 11 × 17 \Box , $8^{1}/_{2}$ × 14 \Box , $8^{1}/_{2}$ × 13 \Box , $8^{1}/_{2}$ × 11, $8^{1}/_{4}$ × 14 \Box , $8^{1}/_{4}$ × 13 \Box , 8 × 13 \Box , 8 × 10 \Box , $7^{1}/_{4}$ × 10 $^{1}/_{2}$, 8K \Box , 16K, 11 × 15 \Box , 10 × 14 \Box , SRA4 \Box , $8^{1}/_{2}$ × 13 $^{2}/_{5}$ \Box , custom size
Paper weight that can be shifted	64-105 g/m ² (Approx. 16-28 lb. Bond)
Stack capacity (80 g/m², Approx. 20 lb. Bond)	 500 sheets: A4, 8¹/₂ × 11 or smaller 250 sheets: B4 JIS, 8¹/₂ × 14 or larger
Staple paper size	A3 \Box , A4, B4 JIS \Box , B5 JIS, 11 × 17 \Box , $8^{1}/_{2}$ × 14 \Box , $8^{1}/_{2}$ × 13 \Box , $8^{1}/_{2}$ × 11, $8^{1}/_{4}$ × 14 \Box , $8^{1}/_{4}$ × 13 \Box , $7^{1}/_{4}$ × 10 $^{1}/_{2}$, 8K \Box , 16K, $8^{1}/_{2}$ × 13 $^{2}/_{5}\Box$
Staple paper weight	64-105 g/m² (Approx. 16-28 lb. Bond)

Item

Staple capacity

Approx. 20 lb.

 (80 g/m^2)

Without Mixed Size:

Specifications

• 30 sheets: A3 , B4 JIS , 11 × 17 , 8¹/₂ × 14 , 8¹/₂ × 13 .

Specifications for Finisher SR3320

Item	Specifications
Paper size for the finisher upper tray	A3 , B4 JIS , A4, B5 JIS, A5, B6 JIS , A6 , 12 × 18 , 11 × 17 \Box , 11 × 15 , 10 × 14 , $8^{1}/_{2}$ × 14 , $8^{1}/_{2}$ × 13 , $8^{1}/_{2}$ × 11, $8^{1}/_{4}$ × 14 , $8^{1}/_{4}$ × 13 , 8 × 13 , 8 × 10 , $7^{1}/_{4}$ × 10 , $5^{1}/_{2}$ × $8^{1}/_{2}$, 8K \Box , 16K, SRA3 , SRA4, $8^{1}/_{2}$ × $13^{2}/_{5}$, custom size
Paper weight for the finisher upper tray	52-169 g/m² (Approx. 14 lb. Bond-90 lb. Index)
Stack capacity for the finisher upper tray (80 g/m², Approx. 20 Bond)	 250 sheets: A4, 8¹/₂ × 11 or smaller 50 sheets: B4 JIS, 8¹/₂ × 14 or larger
Paper size for the finisher shift tray	A3 , B4 JIS , A4, B5 JIS, A5, B6 JIS , A6 , 12 × 18 , 11 × 17 \Box , 11 × 15 , 10 × 14 , $8^{1}/_{2}$ × 14 , $8^{1}/_{2}$ × 13 , $8^{1}/_{2}$ × 11, $8^{1}/_{4}$ × 14 , $8^{1}/_{4}$ × 13 , 8 × 13 , 8 × 10 , $7^{1}/_{4}$ × 10 , $5^{1}/_{2}$ × $8^{1}/_{2}$ × $8^{1}/_{2}$, SRA4, $8^{1}/_{2}$ × $13^{2}/_{5}$, custom size
Paper weight for the finisher shift tray (without staple)	52-300 g/m ² (Approx. 14 lb. Bond-110 lb. Cover)
Paper sizes that can be shifted when delivered to the finisher shift tray	A3 , B4 JIS , A4, B5 JIS, A5, 12×18 , 11×17 , 11×15 , 10×14 , $8^{1}/_{2} \times 14$, $8^{1}/_{2} \times 13$, $8^{1}/_{2} \times 11$, $8^{1}/_{4} \times 14$, $8^{1}/_{4} \times 13$, 8×13 , 8×10 , $7^{1}/_{4} \times 10^{1}/_{2}$, $5^{1}/_{2} \times 8^{1}/_{2}$, 8 , 16 K, SRA4 , $8^{1}/_{2} \times 13^{2}/_{5}$, custom size
Paper weight that can be shifted when delivered to the finisher shift tray	52-300 g/m ² (Approx. 14 lb. Bond-110 lb. Cover)

Item	Specifications
Stack capacity for the finisher shift tray (80 g/m², Approx. 20 Bond)	 1,000 sheets: A4, 8¹/₂ × 11 or smaller: 500 sheets: B4 JIS, 8¹/₂ × 14 or larger:
Staple paper size	A3 , B4 JIS , A4, B5 JIS, 11×17 , 11×15 , 10×14 , $8^{1}/_{2} \times 14$, $8^{1}/_{2} \times 13$, $8^{1}/_{2} \times 11$, $8^{1}/_{4} \times 14$, $8^{1}/_{4} \times 13$, 8×13 , 8×13 , 8×10 , $7^{1}/_{4} \times 10^{1}/_{2}$, 8K , 16 K, 12×18 , SRA4 , $8^{1}/_{2} \times 13^{2}/_{5}$, custom size
Staple paper weight	 Staple: 52-220 g/m² (Approx. 14 lb. Bond-80 lb. Cover) *1 Staple-free staple: 64-80 g/m² (Approx. 17-20 lb. Bond)
Staple capacity (80 g/m², Approx. 20 lb. Bond)	Staple: • Without Mixed Size: • 30 sheets: A3□, B4 JIS□, 11 × 17□, 8¹/₂ × 14□, 8 × 13 □, 8¹/₂ × 13□, 8¹/₄ × 14□, 8¹/₄ × 13□, 11 × 15□, 10 × 14□, 8k□, 12 × 18□, SRA4□, 8¹/₂ × 13²/₅□ • 50 sheets: A4, B5 JIS, 8¹/₂ × 11, 8 × 10□, 7¹/₄ × 10¹/₂, 16k • With Mixed Size: • 22 sheets: A3□/A4□, B4 JIS□/B5 JIS□, 11 × 17□/8¹/₂ × 11□ Staple-free staple: • 5 sheets: A3□, A4, B4 JIS□, B5 JIS, 11 × 17□, 8¹/₂ × 14□, 8¹/₂ × 13□, 8¹/₂ × 11, 8¹/₄ × 14□, 8¹/₄ × 13□, 7¹/₄ × 10¹/₂, 8k □, 16k, 12 × 18□, 8¹/₂ × 13²/₅□ The number of sheets that can be stapled varies depending on the paper weight setting.
Stack capacity after stapling (80 g/m², Approx. 20 lb. Bond)	Staple: • 2-9 sheets: 100 sets (A4□, B5 JIS□, 8¹/2 × 11□) • 10-50 sheets: 100-20 sets (A4□, B5 JIS□, 8¹/2 × 11□) • 10-50 sheets: 50-10 sets (A4□, B5 JIS□, 8¹/2 × 11□) • 2-9 sheets: 50 sets (A3□, A4□, B4 JIS□, B5 JIS□, 11 × 17□, 8¹/2 × 14□, 8¹/2 × 11□)

Item	Specifications
	• 10-30 sheets: 50-10 sets (A3□, B4 JIS□, 11 × 17□, 8¹/ ₂ × 14□)
	• 2–22 sheets: 22 sets (With Mixed Size:A3□/A4□, B4 JIS□/B5 JIS□, 11 × 17□/8¹/2 × 11□)
	Staple-free staple:
	• 2–5 sheets: 100 sets (A4 \square , B5 JIS \square , 8 1 / ₂ × 11 \square)
	• 2–5 sheets: 50 sets (A3 \square , A4 \square , B4 JIS \square , B5 JIS \square , 11 × 17 \square , 8 1 / ₂ × 14 \square , 8 1 / ₂ × 11 \square)
Staple position	Staple: 3 positions (Top, Bottom, 2 Staples)
	Staple-free staple: Slant
Power requirements	Power is supplied from the main unit.
Maximum power consumption	36 W or less
Dimensions (W × D × H)	• 575 × 665 × 960 mm (22.7 × 26.2 × 37.8 inches) (Tray is folded.)
(WADAII)	• 660 × 665 × 960 mm (26.0 × 26.2 × 37.8 inches) (Tray is extended.)
	(the height to reach the top board)
Weight	Approx. 34 kg (75.0 lb.)

^{*1} You can use two sheets of paper weighing up to 216 g/m² (Approx. 80 lb. Cover) per set as cover sheets.



- In the following cases, you cannot output 12 × 18 → or SRA3 → paper to the Finisher SR3320 when the internal multi-fold unit is mounted to IM C2010/C2010A/C2510/C2510A/C2519J/GS4020c/GS4025c.
 - When you select a resolution of 1200dpi
 - When you select paper with a thickness of [Thick Paper 1] [Thick Paper 4]
 - When you use banner sheets
- For IM C2010/C2010A/C2510/C2510A/C2519J/GS4020c/GS4025c, when the resolution is 1200 dpi, paper with a thickness of [Thick Paper 1] or more is delivered to internal tray 1. You cannot output the paper to the Finisher SR3320 or Booklet Finisher SR3330.

Item	Specifications
Paper size for the finisher upper tray	A3 , B4 JIS , A4, B5 JIS, A5, B6 JIS , A6 , 12 × 18 , 11 × 17 \Box , 11 × 15 , 10 × 14 , $8^{1}/_{2}$ × 14 , $8^{1}/_{2}$ × 13 , $8^{1}/_{2}$ × 11, $8^{1}/_{4}$ × 14 , $8^{1}/_{4}$ × 13 , 8 × 13 , 8 × 10 , $7^{1}/_{4}$ × 10 , $5^{1}/_{2}$ × $8^{1}/_{2}$ × $8^{1}/_{2}$, 8K , 16K, SRA3 , SRA4, $8^{1}/_{2}$ × $13^{2}/_{5}$, custom size
Paper weight for the finisher upper tray	52-169 g/m ² (Approx. 14 lb. Bond-90 lb. Index)
Stack capacity for the finisher upper tray (80 g/m², Approx. 20 lb. Bond)	 250 sheets: A4, 8¹/₂ × 11 or smaller 50 sheets: B4 JIS, 8¹/₂ × 14 or larger
Paper size for the finisher shift tray	A3 , B4 JIS , A4, B5 JIS, A5, B6 JIS , A6 , 12 × 18 , 11 × 17 \Box , 11 × 15 , 10 × 14 , $8^{1}/_{2}$ × 14 , $8^{1}/_{2}$ × 13 , $8^{1}/_{2}$ × 11, $8^{1}/_{4}$ × 14 , $8^{1}/_{4}$ × 13 , 8 × 13 , 8 × 10 , $7^{1}/_{4}$ × 10 , $5^{1}/_{2}$ × $8^{1}/_{2}$ × $8^{1}/_{2}$, SRA4, $8^{1}/_{2}$ × 13 , custom size
Paper weight for the finisher shift tray	52-300 g/m ² (Approx. 14 lb. Bond-110 lb. Cover)
Paper sizes that can be shifted when delivered to the finisher shift tray	A3 , B4 JIS , A4, B5 JIS, A5, 12×18 , 11×17 , 11×15 , 10×14 , $8^{1}/_{2} \times 14$, $8^{1}/_{2} \times 13$, $8^{1}/_{2} \times 11$, $8^{1}/_{4} \times 14$, $8^{1}/_{4} \times 13$, 8×13 , 8×10 , $7^{1}/_{4} \times 10^{1}/_{2}$, $5^{1}/_{2} \times 8^{1}/_{2}$, 8 , 16 K, SRA4 , $8^{1}/_{2} \times 13^{2}/_{5}$, custom size
Paper weight that can be shifted when delivered to the finisher shift tray	52-300 g/m ² (Approx. 14 lb. Bond-110 lb. Cover)
Stack capacity for the finisher shift tray (80 g/m², Approx. 20 lb. Bond)	 1,000 sheets: A4, 8¹/₂ × 11 or smaller: 500 sheets: B4 JIS, 8¹/₂ × 14 or larger:

Item	Specifications
Staple paper size	A3 \Box , B4 JIS \Box , A4, B5 JIS, 11 × 17 \Box , 11 × 15 \Box , 10 × 14 \Box , $8^{1}/_{2}$ × 14 \Box , $8^{1}/_{2}$ × 13 \Box , $8^{1}/_{2}$ × 11, $8^{1}/_{4}$ × 14 \Box , $8^{1}/_{4}$ × 13 \Box , 8 × 13 \Box , 8 × 10 \Box , $7^{1}/_{4}$ × 10 \Box , 2, 8K \Box , 16K, 12 × 18 \Box , SRA4 \Box , $8^{1}/_{2}$ × 13 \Box /, custom size
Staple paper weight	52-220 g/m ² (Approx. 14 lb. Bond-80 lb. Cover) You can use two sheets of paper weighing up to 216 g/m ² (Approx. 80 lb. Cover) per set as cover sheets.
Staple capacity (80 g/m², Approx. 20 lb. Bond)	Without Mixed Size: • 30 sheets: A3 \Box , B4 JIS \Box , 11 × 17 \Box , 8 1 / ₂ × 14 \Box , 8 × 13 \Box , 8 1 / ₂ × 13 \Box , 8 1 / ₄ × 14 \Box , 8 1 / ₄ × 13 \Box , 11 × 15 \Box , 10 × 14 \Box , 8K \Box , 12 × 18 \Box , SRA4 \Box , 8 1 / ₂ × 13 2 / ₅ \Box
	 50 sheets: A4, B5 JIS, 8¹/₂ × 11, 8 × 10¹/₂, 7¹/₄ × 10¹/₂, 16K With Mixed Size: 22 sheets: A3¹/₂/A4¹/₂, B4 JIS¹/₂/B5 JIS¹/₂, 11 × 17¹/₂/8¹/₂ × 11¹/₂ The number of sheets that can be stapled varies depending on the paper weight setting.
Stack capacity after stapling (80 g/m², Approx. 20 lb. Bond)	Without Mixed Size: • 2-9 sheets: 100 sets (A4□, B5 JIS□, 8¹/2 × 11□) • 10-50 sheets: 100-20 sets (A4□, B5 JIS□, 8¹/2 × 11□) • 10-50 sheets: 50-10 sets (A4□, B5 JIS□, 8¹/2 × 11□) • 2-9 sheets: 50 sets (A3□, A4□, B4 JIS□, B5 JIS□, 11 × 17□, 8¹/2 × 14□, 8¹/2 × 11□) • 10-30 sheets: 50-10 sets (A3□, B4 JIS□, 11 × 17□, 8¹/2 × 14□) With Mixed Size: • 2-22 sheets: 22 sets (A3□, A4□, B4 JIS□, /B5 JIS□, 11 × 17□, /8¹/2 × 11□)
Staple position	3 positions (Top, Bottom, 2 Staples)
Saddle stitch paper size	A3 ^D , A4 ^D , B4 JIS ^D , B5 JIS ^D , 11 × 17 ^D , 8 ¹ / ₂ × 14 ^D , 8 ¹ / ₂ × 11 D, 12 × 18 ^D
Saddle stitch paper weight	52-105 g/m ² (Approx. 14-28 lb. Bond)

Item	Specifications
	You can use two sheets of paper weighing up to 105 g/m² (Approx. 28 lb. Bond) per set as cover sheets.
Saddle stitch capacity (80 g/m², Approx. 20 lb. Bond)	1 set (15 sheets)
Stack capacity after saddle stitching (80 g/m², Approx. 20 lb. Bond)	 2-5 sheets: approx. 20 sets 6-10 sheets: approx. 10 sets 11-15 sheets: approx. 7 sets (Stack capacity depends on the paper type and use conditions.)
Saddle stitch position	Center 2 positions
Types of folds	Half Fold
Half fold paper size	A3 \square , A4 \square , B4 JIS \square , B5 JIS \square , 11 × 17 \square , 8 $^1/_2$ × 14 \square , 8 $^1/_2$ × 11 \square , 12 × 18 \square , 8 $^1/_2$ × 13 $^2/_5$ \square
Half fold paper weight	52-105 g/m² (Approx. 14-28 lb. Bond)
Half fold paper type	Plain 1, Plain 2, Recycled Paper, Middle Thick, Thin Paper, Color Paper
Power requirements	Power is supplied from the main unit.
Maximum power consumption	36 W or less
Dimensions (W × D × H)	 575 × 620 × 960 mm (22.7 × 24.5 × 37.8 inches) (Tray is folded.) 660 × 620 × 960 mm (26.0 × 24.5 × 37.8 inches) (Tray is extended.) (the height to reach the top board)
Weight	Approx. 44 kg (97.1 lb.)

U Note

• The Half Fold function can fold one sheet at a time.

- In the following cases, you cannot output 12 × 18 → or SRA3 → paper to the Booklet Finisher SR3330 when the internal multi-fold unit is mounted to IM C2010/C2010A/C2510/C2510A/C2519J/GS4020c/GS4025c.
 - When you select a resolution of 1200dpi
 - When you select paper with a thickness of [Thick Paper 1] [Thick Paper 4]
 - When you use banner sheets
- For IM C2010/C2010A/C2510/C2510A/C2519J/GS4020c/GS4025c, when the resolution is 1200 dpi, paper with a thickness of [Thick Paper 1] or more is delivered to internal tray 1. You cannot output the paper to the Finisher SR3320 or Booklet Finisher SR3330.
- For IM C2010/C2010A/C2510/C2510A/C2519J/GS4020c/GS4025c, when the internal multi-fold unit is mounted, you cannot use banner sheets that are wider than 297 mm (11.7 inch).

Specifications for Finisher SR3340

Item	Specifications
Paper size for the finisher upper tray	A3 , B4 JIS , A4, B5 JIS, A5, B6 JIS , A6 , 12 × 18 , 11 × 17 \Box , 11 × 15 , 10 × 14 , $8^{1}/_{2}$ × 14 , $8^{1}/_{2}$ × 13 , $8^{1}/_{2}$ × 11, $8^{1}/_{4}$ × 14 , $8^{1}/_{4}$ × 13 , 8 × 13 , 8 × 10 , $7^{1}/_{4}$ × 10 , $5^{1}/_{2}$ × $8^{1}/_{2}$ × $8^{1}/_{2}$, SRA4, $8^{1}/_{2}$ × $13^{2}/_{5}$, custom size
Paper weight for the finisher upper tray	52-220 g/m ² (Approx. 14 lb. Bond-80 lb. Cover)
Stack capacity for the finisher upper tray (80 g/m ² , Approx. 20 lb. Bond)	• 250 sheets : A4, $8^1/2 \times 11$ or smaller • 50 sheets: B4 JIS, $8^1/2 \times 14$ or larger
Paper size for the finisher shift tray:	A3 , B4 JIS , A4, B5 JIS, A5, B6 JIS , A6 , 12 × 18 , 11 × 17 \Box , 11 × 15 , 10 × 14 , $8^{1}/_{2}$ × 14 , $8^{1}/_{2}$ × 13 , $8^{1}/_{2}$ × 11, $8^{1}/_{4}$ × 14 , $8^{1}/_{4}$ × 13 , 8 × 13 , 8 × 10 , $7^{1}/_{4}$ × 10 , $5^{1}/_{2}$ × $8^{1}/_{2}$ × $8^{1}/_{2}$, SRA4, $8^{1}/_{2}$ × $13^{2}/_{5}$, custom size
Paper weight for the finisher shift tray (without staple)	52-300 g/m ² (Approx. 14 lb. Bond-110 lb. Cover)

Item	Specifications
Paper sizes that can be shifted when delivered to the finisher shift tray	A3 \Box , B4 JIS \Box , A4, B5 JIS, A5, 12 × 18 \Box , 11 × 17 \Box , 11 × 15 \Box , 10 × 14 \Box , 8 $^{1}/_{2}$ × 14 \Box , 8 $^{1}/_{2}$ × 13 \Box , 8 $^{1}/_{2}$ × 11, 8 $^{1}/_{4}$ × 14 \Box , 8 $^{1}/_{4}$ × 13 \Box , 8 × 13 \Box , 8 × 10 \Box , 7 $^{1}/_{4}$ × 10 $^{1}/_{2}$, 5 $^{1}/_{2}$ × 8 $^{1}/_{2}$ \Box , 8 K \Box , 16 K, SRA4 \Box , 8 $^{1}/_{2}$ × 13 $^{2}/_{5}$ \Box , custom size
Paper weight that can be shifted when delivered to the finisher shift tray	52-300 g/m ² (Approx. 14 lb. Bond-110 lb. Cover)
Stack capacity for the finisher shift tray (80 g/m², Approx. 20 lb. Bond)	 3,000 sheets: A4D, 8¹/₂ × 11D 1,500 sheets: A3D, B4 JISD, A4D, B5 JIS, 12 × 18D, 11 × 17 D, 8¹/₂ × 14D, 8¹/₂ × 11D, SRA3D 500 sheets: A5D 100 sheets: A5D, A6D, B6 JISD, 5¹/₂ × 8¹/₂D
Staple paper size	A3 , B4 JIS , A4, B5 JIS, 11×17 , 11×15 , 10×14 , $8^{1}/_{2} \times 14$, $8^{1}/_{2} \times 13$, $8^{1}/_{2} \times 11$, $8^{1}/_{4} \times 14$, $8^{1}/_{4} \times 13$, 8×13 , 8×10 , $7^{1}/_{4} \times 10^{1}/_{2}$, 8K , 16 K, SRA4 , $8^{1}/_{2} \times 13^{2}/_{5}$, custom size When using staple-free staples, the following paper sizes cannot be used for double stitch: B5 JIS , $8^{1}/_{4} \times 14$, $8^{1}/_{4} \times 13$, 8×13 , 8×10 , $7^{1}/_{4} \times 10^{1}/_{2}$, 16 K
Staple paper weight	 Staple 52-105 g/m² (Approx. 14-28 lb. Bond) You can use two sheets of paper weighing up to 256 g/m² (Approx. 140 lb. Index) per set as cover sheets. Staple-free staple 64-80 g/m² (Approx. 17-20 lb. Bond)
Staple capacity (80 g/m², Approx. 20 lb. Bond)	• Without Mixed Size:

Item	Specifications
	• 65 sheets: A3 \square , B4 JIS \square , A4, B5 JIS, 11 × 17 \square , 11 × 15 \square , 10 × 14 \square , 8 1 / ₂ × 14 \square , 8 1 / ₂ × 13 \square , 8 1 / ₂ × 11, 8 1 / ₄ × 14 \square , 8 1 / ₄ × 13 \square , 8 × 13 \square , 8 × 10 \square , 7 1 / ₄ × 10 1 / ₂ , 8K \square , 16K, SRA4 \square , 8 1 / ₂ × 13 2 / ₅ \square
	With Mixed Size:
	• 65 sheets: A3 □/A4 □, B4 JIS □/B5 JIS □, 11 × 17 □/8 1/2 × 11 □
	Staple-free staple (Slant)
	Without Mixed Size:
	IM C2010/C2010A/C2510/C2510A/C2519J/C3010/C3010A/C351 0/C3510A/C3519J/C4510/C4510A/C5510/C5510A/C6010/GS 4020c/GS4025c/GS4030c/GS4045c/GS4160c((with the Stapleless Unit Type M52 installed):
	• 5 sheets: A3, A4, B4 JIS, B5 JIS, 11 × 17, 8 ¹ / ₂ × 14 □, 8 ¹ / ₂ × 13, 8 ¹ / ₂ × 11, 8 ¹ / ₄ × 14, 8 ¹ / ₄ × 13, 8 × 13 □, 8 × 10, 7 ¹ / ₄ × 10 ¹ / ₂ , 8K, 16K, 11 × 15, 10 × 14 □, SRA4, 8 ¹ / ₂ × 13 ² / ₅
	IM C4510/C4510A/C5510/C5510A/C6010/GS4045c/GS4160c(wit h the Stapleless Unit Type M58 installed):
	• 10 sheets: A3, A4, B4 JIS, B5 JIS, 11 × 17, 8 ¹ / ₂ × 14 □, 8 ¹ / ₂ × 13, 8 ¹ / ₂ × 11, 8 ¹ / ₄ × 14, 8 ¹ / ₄ × 13, 8 × 13 □, 8 × 10, 7 ¹ / ₄ × 10 ¹ / ₂ , 8K, 16K, 11 × 15, 10 × 14 □, SRA4, 8 ¹ / ₂ × 13 ² / ₅
	With Mixed Size:
	IM C2010/C2010A/C2510/C2510A/C2519J/C3010/C3010A/C351 0/C3510A/C3519J/C4510/C4510A/C5510/C5510A/C6010/GS 4020c/GS4025c/GS4030c/GS4045c/GS4160c(with the Stapleless Unit Type M52 installed):
	• 5 sheets: A3 □ /A4 □, B4 JIS □ /B5 JIS □, 11 × 17 □ /8 1/2 × 11 □
	IM C4510/C4510A/C5510/C5510A/C6010/GS4045c/GS4160c(with high the Stapleless Unit Type M58 installed):

O

Item	Specifications
Stack capacity after stapling (80 g/m², Approx. 20 lb. Bond)	Staple • Without Mixed Size: • 2–19 sheets: 150 sets (A4D, 8¹/2 × 11D) • 20–65 sheets: 150–46 sets (A4D, 8¹/2 × 11D) • 2–14 sheets: 100 sets (A4D, B5 JIS, 8¹/2 × 11D) • 15–65 sheets: 100–23 sets (A4D, B5 JIS, 8¹/2 × 11D) • 2–14 sheets: 100 sets (other size paper) • 15–65 sheets: 100–23 sets (other size paper) • 15–65 sheets: 100–23 sets (other size paper) • With Mixed Size: • 2–65 sheets: 30 sets (A3D/A4D, B4 JISD/B5 JISD, 11 × 17D/8¹/2 × 11D) Staple-free staple • 2–5 sheets: 150 sets (A4D, 8¹/2 × 11D) • 2–5 sheets: 100 sets (Other size paper) When performing staple-free stapling (slant) with the following machines, the maximum number of sheets that can be stapled is 10 sheets. • IM C4510/C4510A/C5510/C5510A/C6010/GS4045c/GS4160c(with the Stapleless Unit Type M58 installed) • IM C7010
Staple position	 Staple 5 positions (Top, Top Slant, Slant, Bottom, 2 Staples) Staple-free staple 2 positions (Slant, 2 Staples)
Power requirements	Power is supplied from the main unit.
Maximum power consumption	64 W or less
Dimensions (W × D × H)	• 651 × 670 × 960 mm (25.7 × 26.4 × 37.8 inches) (Tray is folded.)

Specifications for Booklet Finisher SR3350

Item	Specifications
Paper size for the finisher upper tray	A3 , B4 JIS , A4, B5 JIS, A5, B6 JIS , A6 , 12×18 , 11×17 , 11×15 , 10×14 , $8^{1}/_{2} \times 14$, $8^{1}/_{2} \times 13$, $8^{1}/_{2} \times 11$, $8^{1}/_{4} \times 14$, $8^{1}/_{4} \times 13$, 8×13 , 8×10 , $7^{1}/_{4} \times 10^{1}/_{2}$, $5^{1}/_{2} \times 8^{1}/_{2}$, 8K , 16K, SRA3 , SRA4, $8^{1}/_{2} \times 13^{2}/_{5}$, custom size
Paper weight for the finisher upper tray	52-220 g/m² (Approx. 14 lb. Bond-80 lb. Cover)
Stack capacity for the finisher upper tray (80 g/m², Approx. 20 lb. Bond)	 250 sheets: A4, 8¹/₂ × 11 or smaller 50 sheets: B4 JIS, 8¹/₂ × 14 or larger
Paper size for the finisher shift tray	A3 , B4 JIS , A4, B5 JIS, A5, B6 JIS , A6 , 12 × 18 , 11 × 17 \Box , 11 × 15 , 10 × 14 , $8^{1}/_{2}$ × 14 , $8^{1}/_{2}$ × 13 , $8^{1}/_{2}$ × 11, $8^{1}/_{4}$ × 14 , $8^{1}/_{4}$ × 13 , 8 × 13 , 8 × 10 , $7^{1}/_{4}$ × 10 , $5^{1}/_{2}$ × $8^{1}/_{2}$, 8K , SRA3 , SRA4, $8^{1}/_{2}$ × $13^{2}/_{5}$, custom size
Paper weight for the finisher shift tray	52-300 g/m ² (Approx. 14 lb. Bond-110 lb. Cover)
Paper sizes that can be shifted when delivered to the finisher shift tray	A3 , B4 JIS , A4, B5 JIS, A5, 12×18 , 11×17 , 11×15 , 10×14 , $8^{1}/_{2} \times 14$, $8^{1}/_{2} \times 13$, $8^{1}/_{2} \times 11$, $8^{1}/_{4} \times 14$, $8^{1}/_{4} \times 13$, 8×13 , 8×10 , $7^{1}/_{4} \times 10^{1}/_{2}$, $5^{1}/_{2} \times 8^{1}/_{2}$, 8 , 16 K, SRA4 , $8^{1}/_{2} \times 13^{2}/_{5}$, custom size

Item	Specifications
Paper weight that can be shifted when delivered to the finisher shift tray	52-300 g/m ² (Approx. 14 lb. Bond-110 lb. Cover)
Stack capacity for the finisher shift tray (80 g/m², Approx. 20 lb. Bond)	 3,000 sheets: A4D, 8¹/₂ × 11D 1,500 sheets: A3D, B4 JISD, A4D, B5 JIS, 12 × 18D, 11 × 17 D, 8¹/₂ × 14D, 8¹/₂ × 11D, SRA3D 500 sheets: A5D 100 sheets: A5D, A6D, B6 JISD, 5¹/₂ × 8¹/₂D
Staple paper size	A3 , B4 JIS , A4, B5 JIS, 11×17 , 11×15 , 10×14 , $8^{1}/_{2} \times 14$, $8^{1}/_{2} \times 13$, $8^{1}/_{2} \times 11$, $8^{1}/_{4} \times 14$, $8^{1}/_{4} \times 13$, 8×13 , 8×10 , $7^{1}/_{4} \times 10^{1}/_{2}$, 8K , 16K, SRA4 , $8^{1}/_{2} \times 13^{2}/_{5}$, custom size When using staple-free staples, the following paper sizes cannot be used for double stitch: B5 JIS , $8^{1}/_{4} \times 14$, $8^{1}/_{4} \times 13$, 8×13 , 8×10 , $7^{1}/_{4} \times 10^{1}/_{2}$, 16 K
Staple paper weight	 Staple 52-105 g/m² (Approx. 14-28 lb. Bond) You can use two sheets of paper weighing up to 256 g/m² (Approx. 80 lb. Cover) per set as cover sheets. Staple-free staple 64-80 g/m² (Approx. 17-20 lb. Bond)
Staple capacity (80 g/m², Approx. 20 lb. Bond)	• Without Mixed Size: • 65 sheets: A3□, B4 JIS□, A4, B5 JIS, 11 × 17□, 11 × 15 □, 10 × 14□, 8¹/₂ × 14□, 8¹/₂ × 13□, 8¹/₂ × 11, 8¹/₄ × 14 □, 8¹/₄ × 13□, 8 × 13□, 8 × 10□, 7¹/₄ × 10¹/₂, 8K□, 16K, SRA4□, 8¹/₂ × 13²/₅□ • With Mixed Size: • 65 sheets: A3□/A4□, B4 JIS□/B5 JIS□, 11 × 17□/8¹/₂ × 11□

Item	Specifications
	IM C2010/C2010A/C2510/C2510A/C2519J/C3010/C3010A/C351 0/C3510A/C3519J/C4510/C4510A/C5510/C5510A/C6010/GS 4020c/GS4025c/GS4030c/GS4045c/GS4160c(with the Stapleless Unit Type M52 installed):
	• 4 sheets: A3 , A4, B4 JIS , B5 JIS , 11 × 17 , 8 ¹ / ₂ × 14 □, 8 ¹ / ₂ × 13 , 8 ¹ / ₂ × 11, 7 ¹ / ₄ × 10 ¹ / ₂ , 8K , 16K , 11 × 15 , 10 × 14 , SRA4 , 8 ¹ / ₂ × 13 ² / ₅
	IM C4510/C4510A/C5510/C5510A/C6010/GS4045c/GS4160c(wit h the Stapleless Unit Type M58 installed):
	• 8 sheets: A3 , A4, B4 JIS , B5 JIS , 11 × 17 , 8 ¹ / ₂ × 14 □, 8 ¹ / ₂ × 13 , 8 ¹ / ₂ × 11, 7 ¹ / ₄ × 10 ¹ / ₂ , 8K , 16K , 11 × 15 , 10 × 14 , SRA4 , 8 ¹ / ₂ × 13 ² / ₅
	With Mixed Size:
	IM C2010/C2010A/C2510/C2510A/C2519J/C3010/C3010A/C351 0/C3510A/C3519J/C4510/C4510A/C5510/C5510A/C6010/GS 4020c/GS4025c/GS4030c/GS4045c/GS4160c(with the Stapleless Unit Type M52 installed):
	• 4 sheets: A3 □/A4 □, B4 JIS □/B5 JIS □, 11 × 17 □/8 1/2 × 11 □
	IM C4510/C4510A/C5510/C5510A/C6010/GS4045c/GS4160c(wit h the Stapleless Unit Type M58 installed):
	• 8 sheets: A3 □/A4□, B4 JIS □/B5 JIS□, 11 × 17 □/8¹/ ₂ × 11□
	The number of sheets that can be stapled varies depending on the paper weight setting.
Stack capacity	Staple
after stapling (80 g/m²,	Without Mixed Size:
Approx. 20 lb.	• 2–19 sheets: 150 sets (A4 \mathbb{D} , 8 $^{1}/_{2} \times 11\mathbb{D}$)
Bond)	• 20–65 sheets: 150–46 sets (A4 \mathbb{D} , 8 $^{1}/_{2} \times 11\mathbb{D}$)
	• 2-14 sheets: 100 sets (A4 [□] , B5 JIS, 8 ¹ / ₂ × 11 [□])
	• 15-65 sheets: 100-23 sets (A4 [□] , B5 JIS, 8 ¹ / ₂ × 11 [□])
	• 2–14 sheets: 100 sets (other size paper)


Item	Specifications
	• 15–65 sheets: 100–23 sets (other size paper)
	With Mixed Size:
	• 2-65 sheets: 30 sets (A3 □/A4 □, B4 JIS □/B5 JIS □, 11 × 17 □/8 ¹/2 × 11 □)
	Staple-free staple
	• 2–5 sheets: 150 sets (A4 \square , 8 $^{1}/_{2} \times 11\square$)
	• 2–5 sheets: 100 sets (A4 \Box , B5 JIS, $8^{1}/_{2} \times 11\Box$)
	• 2–5 sheets: 100 sets (other size paper)
	When performing staple-free stapling (slant) with the following machines, the maximum number of sheets that can be stapled is 10 sheets.
	 IM C4510/C4510A/C5510/C5510A/C6010/GS4045c/GS4160c(with the Stapleless Unit Type M58 installed) IM C7010
Staple position	 Staple 5 positions (Top, Top Slant, Slant, Bottom, 2 Staples) Staple-free staple
	2 positions (Slant, 2 Staples)
Saddle stitch paper size	A3 \square , A4 \square , B4 JIS \square , B5 JIS \square , 11 × 17 \square , 8 $^{1}/_{2}$ × 14 \square , 8 $^{1}/_{2}$ × 11 \square , 8 $^{1}/_{4}$ × 14 \square , 8 $^{1}/_{4}$ × 13 \square , 12 × 18 \square , 11 × 15 \square , 10 × 14 \square , SRA3 \square , SRA4 \square , 8 $^{1}/_{2}$ × 13 $^{2}/_{5}$ \square , custom size *1
Saddle stitch	64-105 g/m ² (Approx. 17-28 lb. Bond)
paper weight	You can use one sheet of paper weighing up to 216 g/ m² (Approx. 80 lb. Cover) per set as cover sheets.
Saddle stitch capacity (80 g/m², Approx. 20 lb. Bond)	1 set (20 sheets)
Stack capacity after saddle stitching (80 g/m², Approx. 20 lb. Bond)	 2-5 sheets: approx. 30 sets 6-10 sheets: approx. 15 sets 11-15 sheets: approx. 10 sets 16-20 sheets: approx. 6 sets

Item	Specifications
	(Stack capacity depends on the paper type and use conditions.)
	If more than 2,000 sheets of paper remain in the finisher shift tray, then saddle stitched paper cannot be ejected.
Saddle stitch position	Center 2 positions
Types of folds	Half Fold
Half fold paper size	A3 \square , A4 \square , B4 JIS \square , B5 JIS \square , 11 × 17 \square , 8 $^{1}/_{2}$ × 14 \square , 8 $^{1}/_{2}$ × 11 \square , 8 $^{1}/_{4}$ × 14 \square , 8 $^{1}/_{4}$ × 13 \square , 12 × 18 \square , 11 × 15 \square , 10 × 14 \square , SRA3 \square , SRA4 \square , 8 $^{1}/_{2}$ × 13 $^{2}/_{5}$ \square , custom size *1
Half fold paper	• 1 sheet: 64-216 g/m² (Approx. 17 lb. Bond-80 lb. Cover)
weight:	• 2-5 sheets: 64-90 g/m² (Approx. 17-24 lb. Bond)
Half fold paper type	Plain 1, Plain 2, Recycled Paper, Middle Thick, Thick Paper 1, Thick Paper 2, Color Paper
Power requirements	Power is supplied from the main unit.
Maximum power consumption	64 W or less
Dimensions (W × D × H)	 651 × 670 × 960 mm (25.7 × 26.4 × 37.8 inches) (Tray is folded.) 754 × 670 × 960 mm (29.7 × 26.4 × 37.8 inches) (Tray is extended.) (the height to reach the top board)
Weight	Approx. 56 kg (123.5 lb.) (without punch unit)
	Approx. 59 kg (130.1 lb.) (with punch unit)

^{*1} The paper sizes (custom size) that can be saddle stitched or half folded are as follows.

Length: 182.0-320.0 mm (7.2-12.6 inches)

Width: 182.0–182.5 mm (7.2–7.2 inches), 207.0–225.0 mm (8.2–8.9 inches), 279.4–304.8 mm (11.0–12.0 inches), 320.0 mm (12.6 inches)

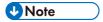

• The Multi-sheet Fold function can fold a maximum of five sheets at a time.

Specifications for Internal Finisher SR3360

Item	Specifications
Paper size	A3 \Box , A4, B4 JIS \Box , B5 JIS, 11 × 17 \Box , 8 1 / ₂ × 14 \Box , 8 1 / ₂ × 13 \Box , 8 1 / ₂ × 11, 8 1 / ₄ × 14 \Box , 8 1 / ₄ × 13 \Box , 7 1 / ₄ × 10 1 / ₂ , 8K \Box , 16K, 8 1 / ₂ × 13 2 / _{5\Box, Custom Size}
Paper weight	52-300 g/m² (Approx. 14 lb. Bond-110 lb. Cover)
Paper sizes that can be shifted	A3 \Box , A4, B4 JIS \Box , B5 JIS, 11 × 17 \Box , $8^{1}/_{2}$ × 14 \Box , $8^{1}/_{2}$ × 13 \Box , $8^{1}/_{2}$ × 11, $8^{1}/_{4}$ × 14 \Box , $8^{1}/_{4}$ × 13 \Box , $7^{1}/_{4}$ × 10 $^{1}/_{2}$, 8K \Box , 16K, $8^{1}/_{2}$ × 13 $^{2}/_{5}\Box$, Custom Size
Paper weight that can be shifted	64-80 g/m ² (Approx. 17-20 lb. Bond)
Stack capacity	• 250 sheets: A4, 8 ¹ / ₂ × 11 or smaller
(80 g/m², Approx. 20 lb. Bond)	• 125 sheets: B4 JIS, 8 ¹ / ₂ × 14 or larger
Staple paper size	A3 \Box , A4, B4 JIS \Box , B5 JIS, 11 × 17 \Box , 8 $^{1}/_{2}$ × 14 \Box , 8 $^{1}/_{2}$ × 13 \Box , 8 $^{1}/_{2}$ × 11, 8 $^{1}/_{4}$ × 14 \Box , 8 $^{1}/_{4}$ × 13 \Box , 7 $^{1}/_{4}$ × 10 $^{1}/_{2}$, 8K \Box , 16K, 8 $^{1}/_{2}$ × 13 $^{2}/_{5}\Box$
Staple paper weight	64-80 g/m² (Approx. 17-20 lb. Bond)
Staple capacity (80 g/m², Approx. 20 lb. Bond)	5 sheets
Stack capacity	• 30 sets or more: A4 \mathbb{D} , 8 $^{1}/_{2} \times 11\mathbb{D}$
after stapling	20 sets or more: B5 JIS
	• 15 sets or more: A3 - A4 -, B4 JIS -, 11 × 17 -, 8 ¹ / ₂ × 11 -
Staple position	Slant
Power requirements	Power is supplied from the main unit.
Maximum power consumption	30 W or less

Item	Specifications
Dimensions (W × D × H)	435 × 515 × 150 mm (17.2 × 20.3 × 6.0 inches)
Weight	Approx. 10 kg (22.1 lb.)

Specifications for Internal Multi-Fold Unit

Item	Specifications
Paper size	When only the internal multi-fold unit is attached
	• A3 \square , A4, A5, A6 \square , B4 JIS \square , B5 JIS, B6 JIS \square , 11 × 17 \square , 8 1 / ₂ × 14 \square , 8 1 / ₂ × 13 \square , 8 1 / ₂ × 11, 8 1 / ₄ × 14 \square , 8 1 / ₄ × 13 \square , 8 × 13 \square , 8 × 10 \square , 7 1 / ₄ × 10 1 / ₂ , 5 1 / ₂ × 8 1 / ₂ \square , 8K \square , 16K, 11 × 15 \square , 10 × 14 \square , SRA4 \square , 8 1 / ₂ × 13 2 / _{5\square} , custom size
	When the Finisher is attached
	• A3 \square , A4, A5 \square , B4 JIS \square , B5 JIS, 11 × 17 \square , $8^1/_2$ × 14 \square , $8^1/_2$ × 11, 8K \square , 16K \square , $8^1/_2$ × 13 $^2/_5$ \square , custom size
Types of folds	Half Fold, Letter Fold-out, Letter Fold-in, Z-fold
Fold paper size	• Z-fold
	A3 \Box , A4 \Box , B4 JIS \Box , 11 × 17 \Box , 8 ¹ / ₂ × 14 \Box , 8 ¹ / ₂ × 11 \Box , 8K \Box , 8 ¹ / ₂ × 13 ² / ₅ \Box
	• Half Fold
	A3 \Box , A4, B4 JIS \Box , B5 JIS \Box , 11 × 17 \Box , 8 $^{1}/_{2}$ × 14 \Box , 8 $^{1}/_{2}$ × 11, 8K \Box , 12 × 18 \Box , SRA3 \Box , 8 $^{1}/_{2}$ × 13 $^{2}/_{5}$ \Box
	When only the internal multi-fold unit is mounted, you cannot use the paper whose size is 12 × 18 → or SRA3 →.
	Letter Fold-out, Letter Fold-in
	1 sheet: A3 \Box , A4 \Box , 11 × 17 \Box , 8 1 / ₂ × 14 \Box , 8 1 / ₂ × 11 \Box , 8 1 / ₂ × 13 2 / ₅ \Box
	2-3 sheets: A4 [□] , 8 ¹ / ₂ × 11 [□]
Fold paper	1 sheet: 64-105 g/m² (Approx. 17-28 lb. Bond)
weight:	2-3 sheets: 64-80 g/m² (Approx. 17-20 lb. Bond)

Item	Specifications
Paper weight that can be output	When only the internal multi-fold unit is attached
	• 52–220 g/m² (Approx. 14 lb. Bond–80 lb. Cover)
Carpar	When the Finisher is attached
	• 52–300 g/m² (Approx. 14 lb. Bond–110 lb. Cover)
Folded paper	Finisher SR3340, Booklet Finisher SR3350
output tray ^{*1}	• Z-fold, half fold: Finisher shift tray, finisher upper tray, fold tray
	 Letter fold-out, letter fold-in: Fold tray, finisher upper tray (A3, 11 × 17)
	Finisher SR3320, Booklet Finisher SR3330
	 Z-fold, half fold: Finisher upper tray, fold tray
	 Letter fold-out, letter fold-in: Fold tray, finisher upper tray (A3, 11 × 17)
Power requirements	Power is supplied from the main unit.
Maximum	40 W or less
power consumption	
Dimensions	• 612 × 555 × 184 mm (24.1 × 21.9 × 7.3 inches): when the tray
$(W \times D \times H)$	is folded
	• 714 × 555 × 242 mm (28.2 × 21.9 × 9.6 inches): when the tray is pulled out
	• 420 × 555 × 152 mm (16.6 × 21.9 × 6.0 inches): when the finisher is mounted
Weight	Approx. 16 kg (35.3 lb.)

^{*1} Specify the output tray using the Machine Features Settings.

See "Output Tray", User Guide (HTML).



- When the finisher is attached, the not-folded sheets are output to the folding tray of the attached finisher only in the following cases:
 - When Z-fold sheets (A3 \square , 11 × 17 \square) and non-fold sheets (A4 \square , 8 1 /2 × 11 \square) are output at once
 - When Z-fold sheets (A4 \square) and non-fold sheets (A5 \square) are output at once
 - When Z-fold sheets (B4 JIS →) and non-fold sheets (B5 JIS →) are output at once

- When Z-fold sheets (8K \square) and non-fold sheets (16K \square) are output at once
- When envelopes are output
- When banner paper is output
- When only the internal multi-fold unit is mounted, you cannot use the paper whose width is wider than 297 mm (11.7 inches).
- To output envelopes or banner paper to the fold tray while the Finisher SR3340 or Booklet Finisher SR3350 is mounted, contact your service representative.

Specifications for External Tray

Item	Specifications
Paper size	A3 , A4, A5, A6 , B4 JIS , B5 JIS, B6 JIS , $11 \times 17^{\Box}$, $8^{1}/_{2} \times 14^{\Box}$, $8^{1}/_{2} \times 13^{\Box}$, $8^{1}/_{2} \times 11$, $8^{1}/_{4} \times 14^{\Box}$, $8^{1}/_{4} \times 13^{\Box}$, $8 \times 13^{\Box}$, $8 \times 10^{\Box}$, $7^{1}/_{4} \times 10^{1}/_{2}$, $5^{1}/_{2} \times 8^{1}/_{2}^{\Box}$, $4^{1}/_{8} \times 9^{1}/_{2}$, $3^{7}/_{8} \times 7^{1}/_{2}$, C5 Env, C6 Env, DL Env, 8 , 16 K, $12 \times 18^{\Box}$, $11 \times 15^{\Box}$, $10 \times 14^{\Box}$, SRA3 , SRA4, $8^{1}/_{2} \times 13^{2}/_{5}^{\Box}$, custom size
Paper weight	52–300 g/m² (Approx. 14 lb. Bond–110 lb. Cover)
Paper capacity (80 g/m², Approx. 20 lb. Bond)	Internal tray 1: • 250 sheets: A4, $8^1/_2 \times 11$ or smaller • 125 sheets: B4 JIS, $8^1/_2 \times 14$ or larger External tray: 125 sheets
Power requirements	Power is supplied from the main unit.
Maximum power consumption	12 W or less
Dimensions (W × D × H)	800 × 549 × 156 mm (31.5 × 21.7 × 6.2 inches)
Weight	Approx. 4 kg (8.9 lb.)

Specifications for Internal Shift Tray

Item	Specifications
Paper size	A3 , A4, A5, A6 , B4 JIS , B5 JIS, B6 JIS , 11×17 , $8^{1}/_{2} \times 14$, $8^{1}/_{2} \times 13$, $8^{1}/_{2} \times 11$, $8^{1}/_{4} \times 14$, $8^{1}/_{4} \times 13$, 8×13 , 8×10 , $7^{1}/_{4} \times 10^{1}/_{2}$, $5^{1}/_{2} \times 8^{1}/_{2}$, $4^{1}/_{8} \times 9^{1}/_{2}$, $3^{7}/_{8} \times 7^{1}/_{2}$, C5 Env, C6 Env, DL Env, 8K , 16 K, 12×18 , 11×15 , 10×14 , SRA3 , SRA4, $8^{1}/_{2} \times 13^{2}/_{5}$, custom size
Paper weight	52-300 g/m² (Approx. 14 lb. Bond-110 lb. Cover)
Paper sizes that can be shifted	A3 \square , A4, A5, B4 JIS \square , B5 JIS, 11 × 17 \square , $8^{1}/_{2}$ × 14 \square , $8^{1}/_{2}$ × 13 \square , $8^{1}/_{2}$ × 11, $8^{1}/_{4}$ × 14 \square , $8^{1}/_{4}$ × 13 \square , 8 × 13 \square , 8 × 10 \square , $7^{1}/_{4}$ × 10 $^{1}/_{2}$, $5^{1}/_{2}$ × $8^{1}/_{2}$ \square , 8K \square , 16K, 11 × 15 \square , 10 × 14 \square , SRA4 \square , $8^{1}/_{2}$ × 13 $^{2}/_{5}$ \square , custom size
Paper weight that can be shifted	60-300 g/m ² (Approx. 16 lb. Bond-110 lb. Cover)
Stack capacity (80 g/m², Approx. 20 lb. Bond)	 250 sheets: A4, 8¹/₂ × 11 or smaller 125 sheets: B4 JIS, 8¹/₂ × 14 or larger
Power requirements	Power is supplied from the main unit.
Maximum power consumption	2 W or less
Dimensions (W × D × H)	420 × 489 × 107 mm (16.6 × 19.3 × 4.3 inches)
Weight	Approx. 2 kg (4.5 lb.)

a

9

Specifications for Internal Tray 2

Item	Specifications
Paper size	A3 \square , A4, A5, B4 JIS \square , B5 JIS, 11 × 17 \square , 8 1 / ₂ × 14 \square , 8 1 / ₂ × 13 \square , 8 1 / ₂ × 11, 8 1 / ₄ × 14 \square , 8 1 / ₄ × 13 \square , 8 × 13 \square , 8 × 10 \square , 7 1 / ₄ × 10 1 / ₂ , 5 1 / ₂ × 8 1 / ₂ \square , 8K \square , 16K, 12 × 18 \square , 11 × 15 \square , 10 × 14 \square , SRA3 \square , SRA4, 8 1 / ₂ × 13 2 / ₅ \square , custom size
Paper weight	52-300 g/m² (Approx. 14 lb. Bond-110 lb. Cover)
Stack capacity (80 g/m², Approx. 20 lb. Bond)	125 sheets
Power requirements	Power is supplied from the main unit.
Maximum power consumption	1 W or less
Dimensions (W × D × H)	444 × 450 × 150 mm (17.5 × 17.8 × 6.0 inches)
Weight	Approx. 2 kg (4.5 lb.)

Specifications for Bridge Unit

Item	Specifications
Stack capacity	• 250 sheets: A4, 8 ¹ / ₂ × 11 or smaller
	• 125 sheets: B4 JIS, 8 ¹ / ₂ × 14 or larger
Power requirements	Power is supplied from the main unit.
Maximum power consumption	12 W or less
Dimensions (W × D × H)	412 × 466 × 143 mm (16.3 × 18.4 × 5.7 inches)
Weight	Approx. 4 kg (8.9 lb.)

Specifications for Punch Unit (Internal Finisher SR3310)

Punch unit type	Paper size	Paper weight
2 & 4 holes type: 2 holes	\Box : A3, A4, B4 JIS, B5 JIS, 11×17 , $8^{1}/_{2} \times 14$, $8^{1}/_{2} \times 13$, $8^{1}/_{2} \times 11$, $7^{1}/_{4} \times 10^{1}/_{2}$, 8K, 16 K, $8^{1}/_{2} \times 13^{2}/_{5}$	60–169 g/m ² (Approx. 16 lb. Bond –90 lb. Index)
2 & 4 holes type: 2 holes	\square : A4, B5 JIS, $8^1/_2 \times 11$, 16K	
2 & 4 holes type: 4 holes	□: A3, 11 × 17	
2 & 4 holes type: 4 holes	\square : A4, 8 ¹ / ₂ × 11	
4 holes type: 4 holes	\square : A3, A4, B4 JIS, B5 JIS, 11×17 , $8^{1}/_{2} \times 14$, $8^{1}/_{2} \times 13$, $8^{1}/_{2} \times 11$, $7^{1}/_{4} \times 10^{1}/_{2}$, $8^{1}/_{2} \times 13^{2}/_{5}$	
4 holes type: 4 holes	\square : A4, B5 JIS, $8^1/_2 \times 11$	
2 & 3 holes type: 2 holes	\square : A3, 11 × 17, 8 ¹ / ₂ × 14, 8 ¹ / ₂ × 13, 8 ¹ / ₂ × 11, 7 ¹ / ₄ × 10 ¹ / ₂ , 8 ¹ / ₂ × 13 ² / ₅	
2 & 3 holes type: 2 holes	\square : A4, 8 $^{1}/_{2}$ × 11	
2 & 3 holes type: 3 holes	□: A3, 11 × 17	
2 & 3 holes type: 3 holes	\square : A4, 8 ¹ / ₂ × 11	

Specifications for Punch Unit (Finisher SR3320, Booklet Finisher SR3330)

Punch unit type	Paper size	Paper weight
2 & 4 holes type: 2 holes	\square : A3, B4 JIS, A4, B5 JIS, A5, 11 × 17, $8^{1}/_{2} \times 14$, $8^{1}/_{2} \times 11$, $5^{1}/_{2} \times 8^{1}/_{2}$, $7^{1}/_{4} \times 10^{1}/_{2}$, 8×13 , $8^{1}/_{2} \times 13$, $8^{1}/_{4} \times 13$, 8K, 16 K, $8^{1}/_{4} \times 14$, 8×10 , 11×15 , 10×14 , $8^{1}/_{2} \times 13^{2}/_{5}$	52–256 g/m ² (Approx. 14 lb. Bond–140 lb. Index)

Punch unit type	Paper size	Paper weight
2 & 4 holes type: 2 holes	\square : A4, B5 JIS, A5, $8^{1}/_{2} \times 11$, $7^{1}/_{4} \times 10^{1}/_{2}$, 16K	
2 & 4 holes type: 4 holes	□ : A3, B4 JIS, 11 × 17, 11 × 15, 8K	
2 & 4 holes type: 4 holes	\square : A4, B5 JIS, $8^{1}/_{2} \times 11,7^{1}/_{4} \times 10^{1}/_{2}$, 16K	
4 holes type: 4 holes	\square : A3, B4 JIS, A4, B5 JIS, A5, 11 × 17, $8^{1}/_{2} \times 14$, $8^{1}/_{2} \times 11$, $5^{1}/_{2} \times 8^{1}/_{2}$, $7^{1}/_{4} \times 10^{1}/_{2}$, 8 × 13, $8^{1}/_{2} \times 13$, $8^{1}/_{4} \times 13$, 8K, $16K$, $8^{1}/_{4} \times 14$, 8 × 10, 11 × 15, 10 × 14, $8^{1}/_{2} \times 13^{2}/_{5}$	
4 holes type: 4 holes	\square : A4, B5 JIS, A5, $8^{1}/_{2} \times 11$, $7^{1}/_{4} \times 10^{1}/_{2}$, 16K	
2 & 3 holes type: 2 holes	\square : A3, B4 JIS, B5 JIS, A5, 11×17 , $8^{1}/_{2} \times 14$, $8^{1}/_{2} \times 11$, $5^{1}/_{2} \times 8^{1}/_{2}$, $7^{1}/_{4} \times 10^{1}/_{2}$, 8×13 , $8^{1}/_{2} \times 13$, $8^{1}/_{4} \times 13$, 8K, 16 K, $8^{1}/_{4} \times 14$, 8×10 , 11×15 , 10×14 , $8^{1}/_{2} \times 13^{2}/_{5}$	
2 & 3 holes type: 2 holes	\square : A4, B5 JIS, $8^{1}/_{2} \times 11$, $7^{1}/_{4} \times 10^{1}/_{2}$, 16K	
2 & 3 holes type: 3 holes	□ : A3, B4 JIS, 11 × 17, 11 × 15, 10 × 14, 8K	
2 & 3 holes type: 3 holes	\square : A4, B5 JIS, $8^{1}/_{2} \times 11,7^{1}/_{4} \times 10^{1}/_{2}$, 16K	

Specifications for Punch Unit (Finisher SR3340, Booklet Finisher SR3350)

Punch unit type	Paper size	Paper weight
2 & 4 holes type: 2 holes	\Box : A3, B4 JIS, A4, B5 JIS, A5, 11 × 17, $8^{1}/_{2} \times 14$, $8^{1}/_{2} \times 11$, $5^{1}/_{2} \times 8^{1}/_{2}$, $7^{1}/_{4} \times 10^{1}/_{2}$, 8×13 , $8^{1}/_{2} \times 13$, $8^{1}/_{4} \times 13$, 8K, 16 K, $8^{1}/_{4} \times 14$, 8×10 , 11×15 , 10×14 , $8^{1}/_{2} \times 13^{2}/_{5}$, custom size	52–256 g/m ² (Approx. 14 lb. Bond–140 lb. Index)
2 & 4 holes type: 2 holes	\square : A4, B5 JIS, A5, $8^{1}/_{2} \times 11$, $7^{1}/_{4} \times 10^{1}/_{2}$, 16K, custom size	
2 & 4 holes type: 4 holes	□: A3, B4 JIS, 11 × 17, 11 × 15, 8K, custom size	
2 & 4 holes type: 4 holes	\square : A4, B5 JIS, $8^1/_2 \times 11,7^1/_4 \times 10^1/_2$, 16K, custom size	
4 holes type: 4 holes	\Box : A3, B4 JIS, A4, B5 JIS, A5, 11 × 17, $8^{1}/_{2} \times 14$, $8^{1}/_{2} \times 11$, $5^{1}/_{2} \times 8^{1}/_{2}$, $7^{1}/_{4} \times 10^{1}/_{2}$, 8×13 , $8^{1}/_{2} \times 13$, $8^{1}/_{4} \times 13$, 8K, 16 K, $8^{1}/_{4} \times 14$, 8×10 , 11×15 , 10×14 , $8^{1}/_{2} \times 13^{2}/_{5}$, custom size	
4 holes type: 4 holes	\square : A4, B5 JIS, A5, $8^1/_2 \times 11$, $7^1/_4 \times 10^1/_2$, 16K, custom size	
2 & 3 holes type: 2 holes	\square : A3, B4 JIS, B5 JIS, A5, 11 × 17, 8 1 / ₂ × 14, 8 1 / ₂ × 11, 5 1 / ₂ × 8 1 / ₂ , 7 1 / ₄ × 10 1 / ₂ , 8 × 13, 8 1 / ₂ × 13, 8 1 / ₄ × 13, 8K, 16K, 8 1 / ₄ × 14, 8 × 10, 11 × 15, 10 × 14, 8 1 / ₂ × 13 2 / ₅ , custom size	
2 & 3 holes type: 2 holes	\square : A4, B5 JIS, $8^{1}/_{2} \times 11$, $7^{1}/_{4} \times 10^{1}/_{2}$, 16K, custom size	
2 & 3 holes type: 3 holes	□: A3, B4 JIS, 11 × 17, 11 × 15, 10 × 14, 8K, custom size	
2 & 3 holes type: 3 holes	\square : A4, B5 JIS, $8^1/_2 \times 11,7^1/_4 \times 10^1/_2$, 16K, custom size	

Specifications for Lower Paper Tray

Item	Specifications
Page size	page285"Recommended Paper Sizes and Types"
Paper capacity	page285"Recommended Paper Sizes and Types"
Paper weight	page285"Recommended Paper Sizes and Types"
Power requirements	Power is supplied from the main unit.
Maximum power consumption	19 W or less
Dimensions (W × D × H)	587 × 685 × 120 mm (23.2 × 27.0 × 4.8 inches) (except protruding parts)
Weight	Approx. 12 kg (26.5 lb.)

Specifications for Lower Paper Trays

Item	Specifications
Page size	page285"Recommended Paper Sizes and Types"
Paper capacity (80 g/m², Approx. 20 lb. Bond)	page285"Recommended Paper Sizes and Types"
Paper weight	page285"Recommended Paper Sizes and Types"
Power requirements	Power is supplied from the main unit.
Maximum power consumption	21 W or less
Dimensions	Except stabilizers
(W × D × H)	587 × 685 × 247 mm (23.2 × 27.0 × 9.8 inches) (except protruding parts)
	With stabilizers
	670 × 755 × 247 mm (26.4 × 29.8 × 9.8 inches) (including protruding parts)

Specifications for Tray 3 (LCT)

Item	Specifications	
Page size	page285"Recommended Paper Sizes and Types"	
Paper capacity (80 g/m², Approx. 20 lb. Bond)	page285"Recommended Paper Sizes and Types"	
Paper weight	page285"Recommended Paper Sizes and Types"	
Power requirements	Power is supplied from the main unit.	
Maximum power consumption	15 W or less	
Dimensions	Except stabilizers	
(W × D × H)	587 × 685 × 247 mm (23.2 × 27.0 × 9.8 inches) (except protruding parts)	
	With stabilizers	
	670 × 755 × 247 mm (26.4 × 29.8 × 9.8 inches) (including protruding parts)	
Weight	Approx. 23 kg (50.8 lb.)	

Specifications for Large Capacity Tray

Item	Specifications
Page size	page285"Recommended Paper Sizes and Types"
Paper capacity (80 g/m², Approx. 20 lb. Bond)	page285"Recommended Paper Sizes and Types"
Paper weight	page285"Recommended Paper Sizes and Types"

Item	Specifications
Power requirements	Power is supplied from the main unit.
Maximum power consumption	13 W or less
Dimensions (W × D × H)	340 × 544.5 × 290 mm (13.4 × 21.5 × 11.5 inches) (except protruding parts)
Weight	Approx. 11 kg (24.3 lb.)

Specifications for Caster Table

Item	Specifications
Dimensions (W × D × H)	587 × 616 × 76 mm (23.1 × 24.3 × 3.0 inches) (except protruding parts)
Weight	Approx. 9 kg (19.9 lb.)

Specifications for Wireless LAN Board

Important

 Note that the available channels (frequency ranges) and locations to use the wireless LAN are subject to the regulations of the country or region where the printer is used. Be sure to use the wireless LAN according to the applicable regulations.

Item	Specifications
Transmission spec	Based on IEEE 802.11a/b/g/n/ac (wireless LAN)
Transmission rate	2.4 GHz band: 72.2 Mbps (maximum)5 GHz band: 433.3 Mbps (maximum)
Frequency range (Center Frequency)	 IEEE 802.11a 5180-5240 MHz (36, 40, 44, and 48 channels) 5260-5320 MHz (52, 56, 60, and 64 channels) 5500-5700 MHz (100, 104, 108, 112, 116, 120, 124, 128, 132, 136, and 140 channels) 5745-5825 MHz (149, 153, 157, 161, and 165 channels)

Item	Specifications
	IEEE 802.11b/g
	• 2412–2472 MHz (1–13 channels)
	IEEE 802.11n
	 HT20 2412–2472 MHz (1–13 channels)
	• 5180–5240 MHz (36, 40, 44, and 48 channels)
	• 5260–5320 MHz (52, 56, 60, and 64 channels)
	• 5500–5700 MHz (100, 104, 108, 112, 116, 120, 124, 128, 132, 136, and 140 channels)
	 5745–5825 MHz (149, 153, 157, 161, and 165 channels) HT40
	• 5190–5310 MHz (38, 46, 54, and 62 channels)
	• 5510–5670 MHz (102, 110, 118, 126, and 134 channels)
	• 5755–5795 MHz (151 and 159 channels)
	IEEE 802.11ac (VHT80)
	 5210–5290 MHz (42 and 58 channels) 5530–5610 MHz (106 and 122 channels) 5775 MHz (155 channel)
Transmission mode	 Infrastructure mode Direct Connection Mode Direct Connection: Group Owner Mode

U Note

- Web Image Monitor is supported.
- The transmission rates of 130 Mbps in the 2.4 GHz band is the theoretical values of the wireless LAN specification. The actual transmission rate may be lower, depending on the operating environment.
- The channel in use might differ depending on the country.
- Some frequency may not be available due to regulations in each country.

9

Specifications for Device Server Option

Item	Specifications	
Interface	Gigabit Ethernet (10BASE-T/100BASE-TX/1000BASE-T)	
Operating systems	• Windows 8.1/10/11, Windows Server 2012/2012 R2/2016/2019/2022	
	• macOS 10.14 or later	
Protocol	• Port 9100, IPP, LPR	
	IPP does not support SPL.	
	 The device server option allows simultaneous connection of up to eight sessions of printing protocols. 	

The Setting Values of the Transmission Function



• Depending on the type or settings of a document or original, you may not be able to specify or enter the maximum number of destinations or characters.

Send Email

Item	Value	Remarks
Maximum number of characters entered in a subject	128 alphanumeric characters	-
Maximum number of characters entered in the an e-mail message	When selecting an item from the standard message: 396 alphanumeric characters (79 alphanumeric characters × 5 lines)	You cannot select an item from the standard message and enter the value manually at the same time.
	 When entering manually: 80 alphanumeric characters 	

Send to Folder

Item	Value	Remarks
Maximum number of characters in a path name specified for the SMB protocol	256 characters	-
Maximum number of characters in a user name specified for the SMB protocol	64 characters	-
Maximum number of characters in a password specified for the SMB protocol	64 characters	-


Item	Value	Remarks
Maximum number of characters in a server name specified for the FTP protocol	64 characters	-
Maximum number of characters in a path name specified for the FTP protocol	256 characters	-
Maximum number of characters in a user name specified for the FTP protocol	64 alphanumeric characters	-
Maximum number of characters in a password specified for the FTP protocol	64 alphanumeric characters	-
Number of destinations that can be specified at one time	50	Up to 50 items can be entered also when entering the items manually.
Size of a document that can be sent	2,000 MB per document	-

Broadcast Transmission

Item	Value	Remarks
Total number of destinations that can be specified for Send Email and Send to Folder	550	-
Number of destinations that can be specified when sending a document by Send Email	500	Up to 100 items can be specified when entering an item manually (including the items specified by LDAP search)

Item	Value	Remarks
Number of destinations that can be specified when sending a document by Send to Folder	50	-

Printable Area and Margin

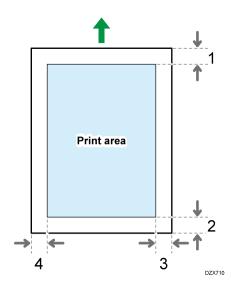


- 1. Leading edge: 4.2 ±1.5 mm (0.17 ±0.06 inches)
- 2. Trailing edge: 0.5–6.0 mm (0.02–0.24 inches)

 Trailing edge (Banner sheet): 0.5–10.0 mm (0.02–0.4 inches)
- 3. Right edge: 0.5–4.0 mm (0.02–0.16 inches)
- 4. Left edge: 0.5–4.0 mm (0.02–0.16 inches)



- The machine does not support edge-to-edge printing. To minimize the margins, specify the maximum printable area with the settings on the printer driver.
 See "Maximizing the Printable Area When Printing", User Guide (HTML).
- The maximum width of the printable area perpendicular to the feeding direction is 305 mm (12.1 inches). When an imageable area extension unit is mounted, the maximum width of the printable area can be extended to 316 mm (12.5 inches). Printing starts from the upper left corner of the paper in relation to the feed

direction. Accordingly, the right and bottom edges of an image will be cropped if the width of the image exceeds the maximum width of a printable area.

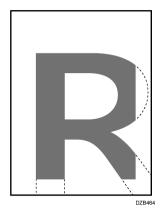

- The printable area may vary due to the paper size or settings of the printer driver.
- The outside of the printable area can be printed due to the settings of the printer driver or printing condition; however, the print result may be different from the intended one or the paper may not be fed correctly.


Machine Options



- For details about the names and the abbreviated names of the options described in this manual, see the following.
 - page11"Abbreviated Names of Options"


Guide to Functions of the Machine's External Options

Options that can be attached to the machine differ depending on the machine type.

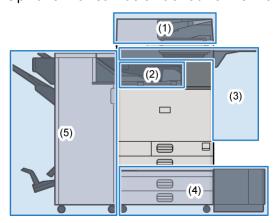

Ç

(1) Options Mounted to the Scanner Unit

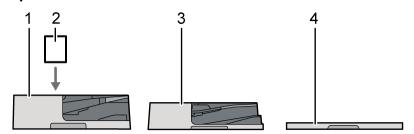


No.	Option*1	Description
1	One- pass duplex scanning ADF ^{*2}	When scanning a two-sided original, the machine scans the front and back sides of the two-sided original at one time.
2	Page keeper ^{*3}	Detects a double feeding of the original when it is placed in the ADF.
3	ARDF ^{*2}	When scanning a two-sided original, the machine scans the front side of the original first, and then turns it over to scan the back side.
	Exposure Glass Cover ^{*2}	Lowers the cover over originals placed on the exposure glass.

^{*1} Depending on the machine type, ADF is attached as standard.

Region B (mainly North America)

(2) Options Mounted to the Machine's Paper Output Section

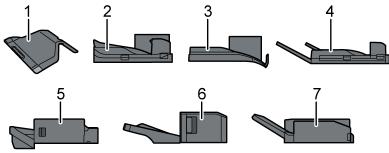

No.	Option	Description
1	Internal Tray 2	Specify the output tray for the function, such as Copy or Fax, added to the Internal Tray 1. When you use this tray together with the optional external tray, you can specify up to three output trays. Copied/printed paper or fax messages are delivered here face down.


^{*2} This cannot be mounted on some types of machines.

^{*3} This cannot be mounted to IM C4510.

No.	Option	Description
2	Bridge Unit	Relays the main unit and finisher.
3	Internal Shift Tray	Sorts and stacks multiple sheets of paper for each set or each job.
		page127"Copying in Page Order or for Each Page Number"
		See "Sorting Printed Sheets by Individual Copies", User Guide (HTML).
4	External Tray	Specify the output tray for the function, such as Copy or Fax, added to the Internal Tray 1. When you use this tray together with the optional Internal Tray 2, you can specify up to three output trays. Copied/printed paper or fax messages are delivered here face down.
5	Internal Finisher SR3310 ^{*1}	Sorts, stacks, and staples multiple sheets of paper. Copies can be punched if the optional punch unit is installed on the finisher.
6	Internal Finisher SR3360 ^{*2}	Shifts, sorts, stacks, and staples multiple sheets of paper with a stapleless stapler.
7	Internal Multi-Fold Unit	Folds the printed paper in half fold, letter foldin, letter fold-out, or Z-fold.
		See "Folding Printed Sheets", User Guide (HTML).

^{*1} This cannot be mounted to IM C6010/GS4160c.


(3) Options Mounted on the Machine's Side Panel

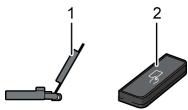

No.	Option	Description
1	Banner Paper Guide	Banner paper is loaded here.
	Tray	page76"Loading Paper into the Paper Tray"

^{*2} This cannot be mounted to IM C4510/C4510A/C5510/C5510A/C6010/GS4045c/GS4160c.


(4) Options Mounted on the Machine's Bottom

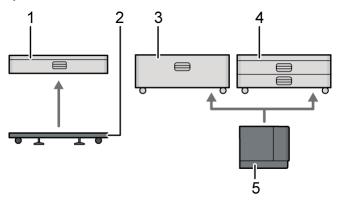

No.	Option	Description
1	Lower Paper Tray	Paper is loaded here. You can load up to 550 sheets of paper.
2	Caster Table	You can attach it to the main unit or the lower paper tray. Allows you to move the machine easily.
3	Tray 3 (LCT) *1	Consists of two paper trays, right and left, for A4 size paper. You can load up to 2,000 sheets of paper.
4	Lower Paper Trays	Consists of two paper trays. You can load up to 1,100 sheets of paper.
5	Large Capacity Tray *1	Paper tray for A4D size paper. You can load up to 1,500 sheets of paper.


^{*1} The Tray 3 (LCT) and Large Capacity Tray cannot be mounted to IM C2010/C2010A/C2510/C2510A/C2519J/GS4020c/GS4025c.

(5) Finisher

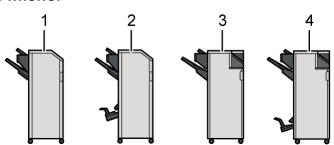

No.	Option	Description
1	Finisher SR3320 ^{*1}	Sorts, stacks, and staples multiple sheets of paper.
		Consists of the following paper trays:
		Finisher Upper Tray
		Finisher Shift Tray
		Copies can be punched if the optional punch unit is installed on the finisher.
2	Booklet Finisher SR3330	Sorts, stacks, and staples multiple sheets of paper. The saddle stitch function can staple multiple sheets of paper in the center and fold them into booklets.
		See "Folding Printed Sheets", User Guide (HTML).
		Consists of the following paper trays:
		Finisher Upper Tray
		Finisher Shift Tray
		Finisher Booklet Tray
		Copies can be punched if the optional punch unit is installed on the finisher.
3	Finisher SR3340 ^{*2}	Sorts, stacks, and staples multiple sheets of paper.
		Consists of the following paper trays:
		Finisher Upper Tray
		Finisher Shift Tray
		Copies can be punched if the optional punch unit is installed on the finisher.
		The ejected paper can be aligned if the output jogger unit is installed on the finisher. Stapleless stapler function can be used if the stapleless unit is installed on the finisher.
4	Booklet Finisher SR3350 ^{*2}	Sorts, stacks, and staples multiple sheets of paper. The saddle stitch function can staple multiple sheets of paper in the center and fold them into booklets.
		See "Folding Printed Sheets", User Guide (HTML).

^{*2} The Finisher SR3340 and Booklet Finisher SR3350 cannot be mounted to IM C2010/C2010A/C2510/C2510A/C2519J/C3010/C3010A/C3510/C3510A/C3519J/GS4020c/GS4025c/GS4030c.

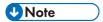

- You cannot install multiple finishers simultaneously.
- To mount the Finisher SR3320, Booklet Finisher SR3330, Finisher SR3340, or Booklet Finisher SR3350, one of the lower paper trays, or tray 3 (LCT) and the bridge unit or internal multi-fold unit must be mounted.

Guide to Functions of the Machine's Internal Options

- Fax unit (Model name: GWFCU6)
 Allows you to use the facsimile function.
- G3 interface unit (Model name: EXG3)*2

This lets you add a G3 fax line. A maximum of two G3 interface units can be installed.

· Fax Memory Unit

Provides 60 MB of additional memory for the facsimile function. (Standard 4 MB)

This allows you to send and receive fax documents at high resolution (Super Fine), and also to receive fax documents at high resolution (Fine). This enables you to increase the number of sheets of originals that can be stored in memory.

- PostScript 3 unit
 - Allows you to output using Genuine Adobe PostScript 3.
- OCR unit

^{*1} The Finisher SR3320 cannot be mounted to IM C2010/C2010A/C2510/C2510A/C2519J/GS4020c/GS4025c.

9

Recognizes the scanned originals optically, and creates a PDF with the text data embedded.

IPDS unit^{*1}

Allows you to print using Intelligent Printer Data Stream (IPDS).

XPS direct print card

Allows you to directly output XPS files.

• Camera direct print card

Allows you to directly print photos taken with a PictBridge-compatible digital camera.

• Device server option (A (mainly Europe and Asia (mainly North America))

Allows you to add an Ethernet port to the printer. Allows you to print using the printer function via a network other than that connected to the machine.

· Wireless LAN board

Allows you to communicate over wireless LAN.

Wired LAN and wireless LAN cannot be used at the same time.

· File format converter

Allows you to download documents that are stored in the Document Server to the computer.

• Enhanced Security SSD Option ((Mainly Europe) / (Mainly North America))

Allows you to enhance the security of the internal storage by using an encryption function that is compliant with FIPS 140-2.

· SSD Option

Allows you to add 1 TB of internal storage.

• Fax connection unit

Allows you to send and receive faxes via a different machine that has the fax unit installed.

*1 IM

C3010/C3010A/C3510/C3510A/C3519J/C4510/C4510A/C5510/C5510A/C6010/GS40 30c/GS4045c/GS4160c only

```
Region B(Taiwan)
```

*2 IM C3010/C3510/C4510/C6010 only

*3 Except for China.

Functions Requiring Optional Configurations

When options are installed, the functions and interface of this machine can be expanded.

• The options that can be installed differ depending on the models. page 385" Machine Options"

Copy Function

Function/Reference	Option
Settings of Original Thickness page107"Basic Procedure for Copying Documents"	One-pass Duplex Scanning ADF ^{*1}
Batch See "Copying a Separately Scanned Original as a Single Document", User Guide (HTML).	ADF ^{*1}
SADF See "Copying a Separately Scanned Original as a Single Document", User Guide (HTML).	
Mixed Sizes mode See "Copying Mixed-size Originals", User Guide (HTML).	
Shift Collate page127"Copying in Page Order or for Each Page Number" Stack	One of the following options is required: • Internal shift tray • Finisher SR3320 • Booklet Finisher SR3330
page127"Copying in Page Order or for Each Page Number"	 Finisher SR3340 Booklet Finisher SR3350 Internal Finisher SR3310 Internal Finisher SR3360
Staple See "Stapling Copied Pages", User Guide (HTML).	One of the following options is required: Finisher SR3320 Booklet Finisher SR3330 Finisher SR3340

Function/Reference	Option
	Booklet Finisher SR3350
	Internal Finisher SR3310
Stapleless Stapler See "Stapling Copied Pages", User Guide (HTML).	One of the following options is required: • Internal Finisher SR3360 • Finisher SR3320 • Finisher SR3340 and Stapleless Unit • Booklet Finisher SR3350 and Stapleless Unit
Staple (Center) See "Stapling Copied Pages", User Guide	One of the following options is required: • Booklet Finisher SR3330
(HTML).	Booklet Finisher SR3350
Half Fold See "Folding Copied Sheets", User Guide (HTML).	
Punch See "Punching Holes on the Copied	One of the following combinations of options is required:
Pages", User Guide (HTML).	Finisher SR3320 and punch unit
	Booklet Finisher SR3330 and punch unit
	Finisher SR3340 and punch unit
	Booklet Finisher SR3350 and punch unit
	 Internal Finisher SR3310 and punch unit
Z-fold	Internal multi-fold unit
See "Folding Copied Sheets", User Guide (HTML).	
Half Fold	
See "Folding Copied Sheets", User Guide (HTML).	
Letter Fold-out	
See "Folding Copied Sheets", User Guide (HTML).	
Letter Fold-in	

Facsimile Functions

Fax functions require the optional fax unit.

Functions	Option
Two-sided Original See "Setting an Original to Send by Fax on the Scanner", User Guide (HTML).	ADF*2
Stamp*1	
See "Pressing an OK Stamp on Pages Scanned for Fax", User Guide (HTML).	
Blank Page Detection	
See "Setting an Original to Send by Fax on the Scanner", User Guide (HTML).	
Mixed Sizes mode	
See "Setting an Original to Send by Fax on the Scanner", User Guide (HTML).	
Settings of Original Thickness	One-pass Duplex Scanning ADF ^{*2}
See "Setting an Original to Send by Fax on the Scanner", User Guide (HTML).	
Transmission of Super Fine resolution	Fax Memory Unit
See "Sending a Fax at the Image Quality Suitable for the Original", User Guide (HTML).	
Reception of Fine or Super Fine resolution	
Transmission using the extra G3 line	G3 interface unit
Routing received documents utilizing extra G3 lines	

a

Functions	Option
See "Transferring Received Fax Documents to Another Fax Destination", User Guide (HTML).	
Specify Tray for Lines See "Specifying the Output Tray to Deliver the Received Page", User Guide (HTML).	One of the following options is required: • Internal tray 2 • Internal shift tray • External tray • Internal Finisher SR3310 • Finisher SR3320 • Booklet Finisher SR3330 • Finisher SR3340 • Booklet Finisher SR3350
	Internal Finisher SR3360
Tray Shift See "Specifying the Output Tray to Deliver the Received Page", User Guide (HTML).	One of the following options is required: • Internal shift tray • Internal Finisher SR3310 • Finisher SR3320 • Booklet Finisher SR3330 • Finisher SR3340 • Booklet Finisher SR3350 • Internal Finisher SR3360
Remote Fax*3	Fax connection unit
See "Overview of the Remote Fax Function", User Guide (HTML).	

^{*1} The stamp function can be used by the ARDF.

^{*2} Depending on the machine type, ADF is attached as standard.

^{*3} A sub-machine on which fax function is not included can send and receive faxes using the fax function of the main-machine connected via network. This function is available when fax connection units are installed in the main- and sub-machines.

ш	•

Functions	Option
Shift Collate See "Sorting Printed Sheets by Individual Copies", User Guide (HTML).	One of the following options is required: • Internal shift tray • Finisher SR3320 • Booklet Finisher SR3330 • Finisher SR3340 • Booklet Finisher SR3350 • Internal Finisher SR3310 • Internal Finisher SR3360
Punch See "Punching Holes on Printed Pages", User Guide (HTML).	One of the following combinations of options is required: • Finisher SR3320 and punch unit • Booklet Finisher SR3330 and punch unit • Finisher SR3340 and punch unit • Booklet Finisher SR3350 and punch unit • Internal Finisher SR3310 and punch unit
Staple See "Stapling Printed Pages", User Guide (HTML).	One of the following options is required: Finisher SR3320 Booklet Finisher SR3330 Finisher SR3340 Booklet Finisher SR3350 Internal Finisher SR3310
Stapleless Staple See "Stapling Printed Pages", User Guide (HTML).	One of the following options is required: • Internal Finisher SR3360 • Finisher SR3320 • Finisher SR3340 and Stapleless Unit • Booklet Finisher SR3350 and Stapleless Unit
Staple (Center) See "Stapling Printed Pages", User Guide (HTML).	One of the following options is required: • Booklet Finisher SR3330

Functions	Option
Half Fold See "Folding Printed Sheets", User Guide (HTML).	Booklet Finisher SR3350
Half Fold Letter Fold-out Letter Fold-in Z-fold See "Folding Printed Sheets", User Guide (HTML).	Internal multi-fold unit
PictBridge See "Printing Photos from a Digital Camera Directly without Using a Computer (PictBridge)", User Guide (HTML).	Camera direct print card
Genuine Adobe PostScript 3 ^{*1}	PostScript 3 unit
XPS	XPS direct print card

^{*1} If an optional Genuine Adobe PostScript 3 is installed, the built-in standard PostScript 3 cannot be used.

Scanner Function

Functions	Option
Documents scanned automatically See "Placing an Original to Scan", User Guide (HTML).	ADF*2
SADF See "Combining the Data of Multiple Scans into a Single File", User Guide (HTML).	
Mixed Sizes mode See "Placing an Original to Scan", User Guide (HTML). Stamp*1	

Functions	Option
See "Pressing an OK Stamp on Pages of the Scanned Original", User Guide (HTML).	
Blank Page Detection	
See "Scan (Scanner Settings)", User Guide (HTML).	
Settings of Original Thickness	One-pass Duplex Scanning ADF ^{*2}
See "Placing an Original to Scan", User Guide (HTML).	
Creating PDF files with OCR text information	OCR unit
See "Scanning an Original as a PDF File with Embedded Text Data", User Guide (HTML).	

^{*1} The stamp function can be used by the ARDF.

Interface

Functions	Option
Wireless LAN communication	Wireless LAN board
See "Connecting to a Wireless LAN", User Guide (HTML).	
Extra Ethernet Interface (for Printer) See "Connecting a LAN Cable", User Guide (HTML).	Region A (mainly Europe and Asia*1)/ Region B (mainly North America) Device server option

^{*1} Except for China.

Others

Functions	Option
Quick Card Authentication See "Logging in to the Machine Using an IC Card or a Smart Device", User Guide (HTML).	NFC card reader

^{*2} Depending on the machine type, ADF is attached as standard.

Functions	Option
⊕ Region A (mainly Europe) / ⊕ Region B (mainly North America)	(mainly North America)
Specifying the SSD authentication code	Enhanced Security SSD Option

Function Compatibility

- The chart shows Function Compatibility when [Interleave Print Priority] is set to [Switch Every Specified No.].

 \$\(\) Simultaneous operations are possible.

 \$\(\) Operation is enabled when the revenant function key is pressed and remote switching (of the scanner/external extension) is done.

 \$\(\) Operation is enabled when the [Interrupt Rey is pressed to interrupt the preceding operation.

 \$\(\) Operation is enabled when the [Interrupt Rey is pressed to interrupt the preceding operation.

 \$\(\) Operation is performed automatically once the preceding operation ends.

 \$\(\) Chart The operation must be started once the preceding operation ends. (Simultaneous operations are not possible.)

	Mode after you select		Сору		Interrupt	Copying				Fax				Printe	r	Sca	nner	TWAIN	Docu	ment s	Server	DeskTo	p Binder	Web Document Server
							lo	Trai	nsmis	sion	Rece	eption		Pr	rint					L_				
Mode before you select		Operations for Copying	Stapling	Sort	Operations for Copying	Copying	Transmission Operation/ Manual Reception Operation	Scanning an Original for Memory Transmission	Memory Transmission	Immediate Transmission	Memory Reception	Printing Received Data *9	Data Reception	Printing	Stapling	Operations for Scanning	Scanning	Scanning	Operations for Document Server	Scanning a Document to Store in Document Server	Printing from Document Server	Printing from Document Server	Sending a Fax from Document Server	Printing
	Operations for Copying	×	×	×	0	0	•	•	Δ	•	Δ	Δ	Δ	Δ	Δ	•	•	•	•	•	•	Δ	Δ	•
Сору	Stapling	Δ*1	→ *1	→ *1	0	0 *5	•	●*2	Δ	●*2	Δ	Δ	Δ	∆*11	→	•	●^2	● *2	•	●*2	→	Δ*4	Δ	Δ*4
	Sort	Δ*1	→*1	→*1	0	0	•	●*2	Δ	• *2	Δ	Δ	Δ	Δ*11	Δ*11	•	●*2	●*2	•	●* 2	→	Δ	Δ	Δ
Interrupt Convine	Operations for Copying	0	0	0	×	×	×	×	Δ	×	Δ	Δ	Δ	Δ	Δ	×	×	×	×	×	×	Δ	Δ	×
interrupt copying	Copying	0	0	0	×	×	×	×	Δ	×	Δ	→	Δ	→	→	×	×	×	×	×	×	→	Δ	×
	Transmission Operation/Manual Reception Operation	•	•	•	0	0	×	×	Δ	×	Δ	Δ	Δ	Δ	Δ	•	•	•	•	•	•	Δ	Δ	Δ
Copy Stapling Stapling Sort Interrupt Copying Copying Copying Copying Copying Copying Copying Copying Copying Transmission Operation/Man. Scanning an Original to Memory Transmission Immediate Transmission	Scanning an Original for Memory Transmission	×	×	×	×	×	×	×	Δ	×	Δ	Δ	Δ	Δ*11	Δ*11	×	×	×	×	×	×	Δ	Δ	Δ
	Memory Transmission	Δ	Δ	Δ	Δ	Δ	Δ	Δ	∆*3	Δ*3	∆*3	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	→	Δ
	Immediate Transmission	×	×	×	×	×	×	×	∆*3	×	Δ*3	Δ	Δ	Δ	Δ	×	×	×	×	×	×	Δ	→	Δ
	Memory Reception	Δ	Δ	Δ	Δ	Δ	Δ	Δ	∆*3	Δ*3	Δ*3	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ
	0	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ*7	Δ	Δ*7	→* 8	Δ	Δ*11	Δ*11	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ
	Data Reception	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	→	→	→	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ
Printer	# Printing	Δ	Δ*11	Δ*11	0	0	Δ	Δ*11	Δ	Δ	Δ	∆*10*11	Δ	→	→	Δ	Δ	Δ	Δ	Δ*11	Δ*11	Δ*11	Δ	Δ*11
	Stapling	Δ	→	Δ*11	0	O*5	Δ	Δ*11	Δ	Δ	Δ	∆*10*11	Δ	→	→	Δ	Δ	Δ	Δ	Δ*11	Δ*4	Δ*4	Δ	Δ*4
	Operations for Scanning	•	•	•	0	0	•	•	Δ	•	Δ	Δ	Δ	Δ	Δ	×	×	•	•	•	•	Δ	Δ	Δ
scanner	Scanning	•	●*2	●*2	O*2	0° 2	•	●*2	Δ	●*2	Δ	Δ	Δ	Δ	Δ	×	×	×	•	•	•	Δ	Δ	Δ
TWAIN	Scanning	Copying	×	×	×	×	×	×	Δ	×	Δ	Δ	Δ	Δ	Δ	×	×	×	×	×	×	Δ	Δ	Δ
	Operations for Document Server	•	•	•	0	0	•	•	Δ	•	Δ	Δ	Δ	Δ	Δ	•	•	•	×	×	×	Δ	Δ	Δ
Document Server	Scanning a Document to Store in Document Server	•	×	×	0	0	•	×	Δ	×	Δ	Δ	Δ	Δ*11	Δ*11	•	×	×	×	×	×	Δ	Δ	Δ
	Printing from Document Server	•	\rightarrow	→	0	0	•	Δ	Δ	Δ	Δ	Δ*10	Δ	Δ*11	Δ*11	Δ	Δ	Δ	△*6	Δ*6	→*6	Δ	Δ	Δ
DookTon Dindor	Printing from Document Server	Δ	∆*4	Δ*11	Δ	Δ*11	Δ	Δ*11	Δ	Δ	Δ	∆*10*11	Δ	Δ*11	Δ*11	Δ	Δ	Δ	Δ	Δ*11	△*11	×	Δ	Δ*11
Desk top Billder	Sending a Fax from Document Server	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	×	Δ
Web Document Server	Printing	Δ	Δ*4	Δ*11	Δ	Δ*11	Δ	Δ*11	Δ	Δ	Δ	∆*10*11	Δ	∆*11	∆*11	Δ	Δ	Δ	Δ	Δ*11	∆*11	Δ	Δ	Δ*11

- **Is Simulaneous operations are only possible after the preceding job documents are all scanned and [Reserve] appears.

 2 You can scan a document after the preceding job documents are all scanned and [Reserve] appears.

 2 You can scan a document after the preceding job documents are all scanned.

 3 Simulaneous operations can be performed when a different line is used.

 4 During stapling, printing automatically starts after the current job.

 5 Stapling is not available.

 5 Stapling is not available.

 7 During parallel reception, any subsequent job is suspended until the reception is completed.

 8 Is an attempt is a made to manually printing a domatically printing a different received document, the document printed manually will be printed first.

 9 This includes the printing of data sent via LAN-Fax Oriver, printing will stop.

 10 If the previous print job does not finish within the time specified in "the reprinting time of stored documents in memory that could not be printed using LAN-Fax Driver when printing from the LAN-Fax Driver, printing will stop.

 11 When you print an image that is A3 size and 2800 x 1200 dpl or bigger, printing may not start until the current print job is complete. (IM C2010/C2010AC2510/C2510AC2519/C3510AC3510



• The scanning speed may become slower when scanning an original with another function while executing printing.

Copy Function Compatibility

- Blank: These modes can be used together.

 These modes cannot be used together. The second mode selected will be the mode you are working in.

 These modes cannot be used together. The first mode selected will be the mode you are working in.

									Ţ							Ţ					Fu	nctio	on se	lecte	d se	cond					Ţ.			Ţ	Ţ		Ţ								
	Mixed Sizes	_	_	Original Orientation	Original Thickness	Auto Image Density	Image Density (Manual)	Full Color	Black & White Auto Color Select	Auto Paper Select	Paper Select	Bypass Tray	Auto Reduce / Enlarge	Reduce / Enlarge	Create Margin	2 Sided Original	Poster	2 Sided	Combine	Book→2 Sided	Front&Back→2 Sided	Booklet	Magazine ID Card Copy	Double Copies	Image Repeat	Image Repeat (Specified Area)	Margin Adjustment Positive / Negative	Centering	Erase Center/ Border	Mirror Image	Convert Color	Color Overlay	Background Numbering		Unauthorized Copy Prevention	Cover Sheet	Designate / Chapter	Sort	Rotate Sort	Stack	Staple	Punch	Z-fold	Multi Fold	Half Fold
Mixed Sizes		×	x																																										
Regular Size Originals	x		å																																								\Box		
Custom Size Originals	×	•		1						×							×																												
Original Orientation		L			Ĺ	Ш	Ш	_	\perp				_	4	4	"2			Ш	"2	*2	4			Ш			Ш	Ш	_			Щ	_	_	1	1	\perp	L	Ш	-3	-3	.3	4	
Original Thickness																			Ш																			1	Ļ					4	
Auto Image Density				L		\setminus		4	\perp				4	4	4		•		Ш	4	4	4	\perp					Ш	Ш	•	•		Ш	4	4	1	\perp	\perp	L	Ш	Ш	Ш	4	4	
Image Density (Manual)							Ŋ												Ш																			4						4	
Full Color	_	L		ш	Ш		Ш	- 1	• •			Ш	4	4	4	_	\perp		Ш	4	4	4	_	ш	Ш	_		Ш	Ш	4	\perp		Щ	4	4	4	4	┸	L	Ш	Ш	Ц	4	4	
Black & White								•	\ •																						×													1	
Auto Color Select							Ш	•	•	1		Ш		1	1		×		Ш			1			x	x			Ш	,	K X	x	Ш	1	1	1	1	\perp		Ш	Щ	Ц	1	4	
Auto Paper Select			•								•	•	•		4		•				4		•		•	•									•	•	• •	4					4	4	
Paper Select										•		•									4																	\perp	\perp	Ш			4	4	
Bypass Tray										•	•	V										x :	_											×)	× :	×		×					4	
Auto Reduce / Enlarge									1	•			-1	•	1				Ш		_	1	•		•	•				_			Ш	1	1	1	1	\perp	\perp	Ш		Ц	4	4	
Reduce / Enlarge													•	V			•				4													4	1		1	4	1				4	4	
Create Margin		L	┖	┖	Ш	Ш	Ш	_	_	\perp		Ш	4		Ų	_	×		Ш	4	4	4	×		Ш	x		×	Ш	×	\perp		Щ	4	4	1	4	┸	L	Ш	Ш	Ц	4	4	
2 Sided Original															-	\ •	-				4		×													_	(7	4	1				4	4	
Book		L		"2	Ш		Ш	_	_	\perp			_	_	_	•	å			•		• •		-	Ш	x		Ш	Ш	_			Щ	_			×	┸	L	Ш	Ш	Ц	4	4	
Poster			×			×			×	×				×	×	•	-	•		_		•		-	×	×	×	×	×	X			×	×	,	x :	x >	_	Ļ		×	×	×	x :	×
2 Sided	_	L		ш	Ш	Ш	Щ	_	_	1		Ш	4	4	4	_	•					•			Ш			Ш	Щ	4	_		Щ	4	4	4	,		L	Ш	Ш	Ц	4	4	
Combine																•		•	1 %	•		•			×	×											>	_	Ļ				4	4	
Book→2 Sided	_	L		"2		Ш	Ш	4	_	1		Ц	4	4	4	•	_	•	•			•			Ш	×		Ш	Щ	4	\perp		Щ	4			x >	_	Ļ	Ш	Ш	Ц	4	4	
Front&Back→2 Sided				"2													•	•		•		•				x											x >	_	Ļ					4	
Booklet		L	┖		Ш	Ш	Ш	_	\perp	\perp		×	_	_	4	•		•			•	1			x	x		Ш	Ш	_	\perp		Ш	_	,		x >		L	Ш	×		×	4	
Magazine												×				•		•				•	\\ x			x											x >	_			x*4	×	×	4	
ID Card Copy		L				Ш	Ш	_	\perp	×			×	4	×	x x		x	-	x		x :		×		x		x	×				Щ	_			x >	_	L	Ш	Ш	Ш	4	4	
Double Copies																	×		x			x :			•	•							Ш				x >	;							
Image Repeat		L							×				×				×		x			x :			N	•											x >		L	Ш		Ш		\perp	
Image Repeat (Specified Area)									×	: x			×		×	×	: x		x	x	x :	x :	x x	•	•		x x	x	x)	x :	x >	;	L					4	
Margin Adjustment		L															×									×				x 3	9 *9	"9	Ш					\perp		Ш		Ш			
Positive / Negative																										х																			
Centering															×		×						×			x				x			Ш									Ш			
Erase Center/ Border																	×						×			x			N																
Mirror Image															×		×										×	x		\vee															
Erase Color						×			×																		9																		
Convert Color									x x																		°9																		
Color Overlay									×	:																	9																		
Background Numbering																	×																N			I	>	;							
Stamp"												×					×																	V											
Unauthorized Copy Prevention																																			V										
Cover Sheet										×		×				<7 X						×	×		×	×										V	•	•	×					x 10 X	
Designate / Chapter										×		×		T	1	<7 X					x :	x :	××			×											å		×					x ⁻¹⁰ x	ć
Slip Sheet										×							×	×	x	x	x :	x :	x x	×	×	×							x		1	•	•	×	×		×			x 3	×
Sort																																					>	1	•	•					
Rotate Sort												×																							,	x :	x >	< •	1	•	•	×	×	x 3	>
Stack														T	T				П		T	T														T		•	-	1	•			x :	
Staple	Ì	Ĺ	Ĺ	-3						Ĺ	Ĺ			Ì	Ì		×	Ì		Ì		x x	.4	Ĺ			Ì			İ		Ì		Ì	Ì	İ	>	(•	1 7		x*5		x 3	>
Punch		Г		-3										1			×		П			x :														Т		Т	×	П	x*5	V.		x :	×
Z-fold		İ	Ĺ	*3						Ĺ				Ì			×	İ				x :	x	Ĺ								Ĺ		ĺ		Ì			×		x*6	x*8	V		•
Multi-fold		Г												1			×		П																x	10 X	²¹⁰ >		×		×	x	•	_	•
Half Fold		İ	Ĺ											ı			×							Ĺ											x	*10 X	°10 >		x		×			•	\
Storing		1									1								П		x :	×		×	x				П									-							

- Storing

 11. Starrays include Preset Starre, User Starre, Date Starre, Date Starre, Pape Numbering, and Starry Text

 12. The following functions cannot be selected simultaneously

 13. 180 Degrees CounterCockwell and (Spread to 2 Sided), (Open to Right (aff. or Open to Top).

 14. 180 Degrees CounterCockwell and (Spread to 2 Sided), (Open to Right (aff. or Open to Top).

 15. 180 Degrees CounterCockwell and (Spread to 2 Sided), (Open to Right (aff. or Open to Top).

 16. 180 Degrees CounterCockwell and (Spread to 2 Sided), (Open to Right (aff. or Open to Top).

 17. 180 Degrees Cockwell and Spread to 2 Sided), (Open to Right (aff. or Open to Top).

 18. 180 Degrees Cockwell and Spread to 2 Sided, (Open to Right (aff. or Open to Top).

 18. 180 Degrees CounterCockwell or Selected with (Tip 2) under (Staple), or (Two Holes Top), or (Four Holes Top) under (Punch), or (Z-fold (Bottom Fold)).

 18. 180 Degrees CounterCockwell or Stanle, Indian (Staple), or (Two Holes Top), or (Four Holes Top) under (Punch), or (Z-fold (Right Fold)).

 18. 180 Degrees CounterCockwell or Staple), and the Selected with (Stanl), Liet 2), Centerl, (Stanle (Stapledess)), Liet 2 (Stapledess), under (Stapled), or (Two Holes Lett), or (Four Holes Lett) under (Punch), or (Z-fold (Right Fold)).

 18. 180 Degrees Cockwell and (Canter) under (Stapled and Two Holes Lett), or (Four Holes Lett), or (Four Holes Lett), or (Four Holes Lett), or (Four Holes Lett), or (Four Holes Lett), or (Four Holes Lett), or (Four Holes Lett), or (Four Holes Lett), or (Four Holes Top), or (Four Holes Top), or (Four Holes Top) under (Staple) and (Two Holes Lett), or (Four Holes Lett), or (Four Holes Top), or (Four Holes Top) under (Punch)

 18. Islant (Staple) and (Two Holes Lett), or (Four Holes Lett), or (Four Holes Top), or (Four Holes Top) under (Punch)

 18. Islant (Staple) and (Two Holes Lett), or (Four Holes Lett), or (Four Holes Lett) under (Punch)

 18. Islant (Staple) and (Two Holes Lett), or (Four Holes Lett), or (Four Holes Lett) under (Punch)

 18. Islant (Staple) and

Legal and Contact Information

Environmental Regulations

ENERGY STAR Program(mainly North America)

ENERGY STAR® Program Requirements for Imaging Equipment



This company is a participant in the ENERGY STAR® Program.

This machine is compliant with the regulations specified by the ENERGY STAR® Program.

The ENERGY STAR® Program Requirements for Imaging Equipment encourage energy conservation by promoting energy efficient computers and other office equipment.

The program backs the development and dissemination of products that feature energy saving functions.

It is an open program in which manufacturers participate voluntarily.

Energy Star standards and logos are internationally uniform.

Energy Saving Functions

If this machine remains idle for a specified period of time or when [Energy Save] () is pressed, it enters Sleep mode to further reduce its electrical consumption. This is called "Sleep Mode".

- The default delay time the machine waits before entering Sleep mode is one minute.
- The machine can print jobs from computers and receive faxes while in Sleep mode.
- The time it takes to recover from the energy saving functions and low power consumption in Sleep Mode may differ depending on the machine.

Region A (mainly Europe)

Model Name	Power Consumption	Time to Recover from Sleep Mode	Duplex Function*1
IM C2010	0.30 W	6.6 seconds	Standard
IM C2010A	0.30 W	6.6 seconds	Standard
IM C2510	0.30 W	6.6 seconds	Standard

Model Name	Power Consumption	Time to Recover from Sleep Mode	Duplex Function*1	
IM C2510A	0.30 W	6.6 seconds	Standard	
IM C3010	0.30 W	6.2 seconds	Standard	
IM C3010A	0.30 W	6.2 seconds	Standard	
IM C3510	0.30 W	6.2 seconds	Standard	
IM C3510A	0.30 W	6.2 seconds	Standard	
IM C4510	0.32 W	6.3 seconds	Standard	
IM C4510A	0.32 W	6.3 seconds	Standard	
IM C5510	0.32 W	7.4 seconds	Standard	
IM C5510A	0.32 W	7.4 seconds	Standard	
IM C6010	0.32 W	7.4 seconds	Standard	

Region A (mainly Asia*2)

Model Name	Power Consumption	Time to Recover from Sleep Mode	Duplex Function*1
IM C2010	0.30 W	6.6 seconds	Standard
IM C2510	0.30 W	6.6 seconds	Standard
IM C2519J	0.30 W	6.6 seconds	Standard
IM C3010	0.30 W	6.2 seconds	Standard
IM C3510	0.30 W	6.2 seconds	Standard
IM C3519J	0.30 W	6.2 seconds	Standard
IM C4510	0.32 W	6.3 seconds	Standard
IM C6010	0.32 W	7.4 seconds	Standard

Region B (mainly North America)

Model Name	Power Consumption	Time to Recover from Sleep Mode	Duplex Function*1
IM C2010	0.30 W	7.0 seconds	Standard
IM C2510	0.30 W	7.0 seconds	Standard
IM C3010	0.30 W	6.5 seconds	Standard
IM C3510	0.30 W	6.5 seconds	Standard

Model Name	Power Consumption	Time to Recover from Sleep Mode	Duplex Function*1	
IM C4510	0.32 W	6.5 seconds	Standard	
IM C6010	0.32 W	7.4 seconds	Standard	

Region A (China)


Model Name	Power Consumption	Time to Recover from Sleep Mode	Duplex Function*1
IM C2010/GS4020c	0.30 W	6.6 seconds	Standard
IM C2510/GS4025c	0.30 W	6.6 seconds	Standard
IM C3010/GS4030c	0.30 W	6.2 seconds	Standard
IM C3510	0.30 W	6.2 seconds	Standard
IM C4510/GS4045c	0.32 W	6.3 seconds	Standard
IM C6010/GS4160c	0.32 W	7.4 seconds	Standard

Region B (Taiwan)

(::::::::::::::::::::::::::::::::::::::			
Model Name	Power Consumption	Time to Recover from Sleep Mode	Duplex Function*1
IM C2010	0.30 W	7.0 seconds	Standard
IM C2510	0.30 W	7.0 seconds	Standard
IM C3010	0.30 W	6.5 seconds	Standard
IM C3510	0.30 W	6.5 seconds	Standard
IM C4510	0.32 W	6.5 seconds	Standard
IM C6010	0.32 W	7.4 seconds	Standard

^{*1} Achieves ENERGY STAR energy savings; product fully qualifies when packaged with (or used with) a duplex tray and the duplex function is enabled as an option.

^{*2} Except for China.

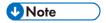

• You can change the amount of time that the machine waits before entering Sleep mode under [Sleep Mode Timer].

• It may take longer than the specified time to enter Sleep mode according to the type of Embedded Software Architecture application installed in the machine.

User Information on Electrical and Electronic Equipment (mainly Europe)

Users in the countries where this symbol shown in this section has been specified in national law on collection and treatment of E-waste

Our Products contain high quality components and are designed to facilitate recycling. Our products or product packaging are marked with the symbol below.



The symbol indicates that the product must not be treated as municipal waste. It must be disposed of separately via the appropriate return and collection systems available. By following these instructions you ensure that this product is treated correctly and help to reduce potential impacts on the environment and human health, which could otherwise result from inappropriate handling. Recycling of products helps to conserve natural resources and protect the environment.

For more detailed information on collection and recycling systems for this product, please contact the shop where you purchased it, your local dealer or sales/service representatives.

All Other Users

If you wish to discard this product, please contact your local authorities, the shop where you bought this product, your local dealer or sales/service representatives.

For Turkey only

AEEE Yönetmeliğine Uygundur. Bu sistem sarf malzemeleri ve yedek parçaları da dahil olmak üzere AEEE Yönetmeliğine Uygundur.

Üretici:

Ricoh Company, Ltd.

3-6, Nakamagome 1-chome,

Ohta-ku, Tokyo 143-8555 Japan

+81-3-3777-811(English only/Sadece İngilizce)

9

Note for the Battery and/or Accumulator Symbol (For EU countries only) (mainly Europe)



In accordance with the Battery Directive 2006/66/EC Article 20 Information for endusers Annex II, the above symbol is printed on batteries and accumulators.

This symbol means that in the European Union, used batteries and accumulators should be disposed of separately from your household waste.

In the EU, there are separate collection systems for not only used electrical and electronic products but also batteries and accumulators.

Please dispose of them correctly at your local community waste collection/recycling centre.

Environmental Advice for Users (mainly Europe)

Users in the EU, Switzerland and Norway

Consumables yield

Please refer to either the User's Manual for this information or the packaging of the consumable.

Recycled paper

The machine can use recycled paper which is produced in accordance with European standard EN 12281:2002 or DIN 19309. For products using EP printing technology, the machine can print on 64 g/m² paper, which contains less raw materials and represents a significant resource reduction.

Duplex printing (if applicable)

Duplex printing enables both sides of a sheet of paper to be used. This saves paper and reduces the size of printed documents so that fewer sheets are used. We recommend that this feature is enabled whenever you print.

Toner and ink cartridge return program

Toner and ink cartridge for recycling will be accepted free of charge from users in accordance with local regulations.

For details about the return program, please refer to the Web page below or consult your service person.

Energy efficiency

The amount of electricity a machine consumes depends as much on its specifications as it does on the way you use it. The machine is designed to allow you to reduce electricity costs by switching to Ready mode after it prints the last page. If required, it can immediately print again from this mode. If no additional prints are required and a specified period of time passes, the device switches to an energy saving mode.

In these modes, the machine consumes less power (watts). If the machine is to print again, it needs a little longer to return from an energy saving mode than from Ready mode.

For maximum energy savings, we recommend that the default setting for power management is used.

Notes to users in the state of California (Notes to Users in USA) (mainly North America)

Perchlorate Material - special handling may apply. See: www.dtsc.ca.gov/hazardouswaste/perchlorate

Information for China energy efficiency label (China)

Specificatio n model	IM C2010/G S4020c	IM C2510/G S4025c	IM C3010/G S4030c	IM C3510	IM C4510/G S4045c	IM C6010/G S4160c
Manufactur er name	Ricoh Company, Ltd.	Ricoh Company, Ltd.	Ricoh Company, Ltd.	Ricoh Company, Ltd.	Ricoh Company, Ltd.	Ricoh Company, Ltd.
Energy efficiency index	1	1	1	1	1	1
Typical energy consumptio n (kW/h)	0.83	1.05	1.22	1.44	1.94	3.04
According to the national standards	GB21521 -2014	GB21521 -2014	GB21521 -2014	GB21521 -2014	GB21521 -2014	GB21521 -2014

9

Notes for wireless LAN and Bluetooth

This product is equipped with wireless LAN and Bluetooth functions.

Depending on the machine type, wireless LAN or Bluetooth are optional.

The product uses the 2.4/5 GHz frequency range for wireless LAN communication and the 2.4 GHz frequency range for Bluetooth communication. Communications using radio waves may be interrupted by noise or interference. If you want to use this product for external communication, please be aware that communication failures may occur.

It is prohibited by law to disassemble or modify this product. The company takes no responsibility for illegal modifications that are made to the wireless module of this product.

No measures to prevent or block data tampering are available for devices that use radio waves for communication. The company takes no responsibility for security problems arising due to wireless LAN and Bluetooth specifications or other conditions.

The frequency range used by this product may also be used by other products (industrial, scientific, or medical devices) manufactured by other companies. The outdoor use of wireless devices may be restricted. Pay attention to where you use this function.

Some applications of this product use the wireless function. Depending on the environment where you use the wireless function, communication may be interrupted due to radio wave interference.

The Bluetooth unit is not guaranteed to work with all supported devices.

In infrastructure mode, the wireless LAN function's usable frequencies vary depending on the access point you use.

Copyright Information about Installed Software

Open source software is used in the machine and applications that can be downloaded from the Application Site. You can check their copyright information in the following settings or applications.

- Some information about software used in the control panel
 [Settings] ▶ [System Settings] ▶ [Machine/Control Panel Information] ▶ [About Control Panel] ▶ [Legal information]
- Some information about software used in the control panel and information about software used in the machine



• You may be able to check some software information on the screens of each application, rather than on the control panel or Web Image Monitor.

Trademarks (User Guide)

Adobe is either a registered trademark or a trademark of Adobe in the United States and/or other countries.

Acrobat is either a registered trademark or a trademark of Adobe in the United States and/or other countries.

PostScript is either a registered trademark or a trademark of Adobe in the United States and/or other countries.

Reader is either a registered trademark or a trademark of Adobe in the United States and/or other countries.

Apple is a trademark of Apple Inc., registered in the United States and other countries.

Bonjour is a trademark of Apple Inc., registered in the United States and other countries.

macOS is a trademark of Apple Inc., registered in the United States and other countries.

Safari is a trademark of Apple Inc., registered in the United States and other countries.

The Bluetooth word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Ricoh Company, Ltd. is under license.

Citrix is a trademark of Citrix Systems, Inc. and/or one or more of its subsidiaries, and may be registered in the U.S. Patent and Trademark Office and in other countries.

Citrix XenApp is a trademark of Citrix Systems, Inc. and/or one or more of its subsidiaries, and may be registered in the U.S. Patent and Trademark Office and in other countries.

QR Code is a registered trademark of DENSO WAVE INCORPORATED in Japan and in other countries.

Dropbox is a registered trademark or trademark of Dropbox, Inc.

JAWS[®] is a registered trademark of Freedom Scientific, Inc., St. Petersburg, Florida and/or other countries.

Google is a trademark or a registered trademark of Google LLC.

Android is a trademark or a registered trademark of Google LLC.

Google Drive is a trademark or a registered trademark of Google LLC.

Google Chrome is a trademark or a registered trademark of Google LLC.

PCL is a trademark of the Hewlett-Packard Company.

Kerberos is a trademark of the Massachusetts Institute of Technology (MIT).

Microsoft is either a registered trademark or a trademark of Microsoft Corporation in the United States and/or other countries.

Windows is either a registered trademark or a trademark of Microsoft Corporation in the United States and/or other countries.

Windows Server is either a registered trademark or a trademark of Microsoft Corporation in the United States and/or other countries.

9

Edge is either a registered trademark or a trademark of Microsoft Corporation in the United States and/or other countries.

The proper name of Edge is Microsoft® Edge™.

The proper names of the Windows operating systems are as follows:

• The product names of Windows 8.1 are as follows:

Microsoft® Windows® 8.1

Microsoft® Windows® 8.1 Pro

Microsoft® Windows® 8.1 Enterprise

• The product names of Windows 10 are as follows:

Microsoft® Windows® 10 Home

Microsoft® Windows® 10 Pro

Microsoft® Windows® 10 Pro for Workstations

Microsoft® Windows® 10 Enterprise

Microsoft® Windows® 10 Education

• The product names of Windows 11 are as follows:

Microsoft[®] Windows[®] 11 Home

Microsoft® Windows® 11 Pro

Microsoft® Windows® 11 Pro Education

Microsoft® Windows® 11 Pro for Workstations

Microsoft® Windows® 11 Enterprise

Microsoft[®] Windows[®] 11 Education

• The product names of Windows Server 2012 are as follows:

Microsoft[®] Windows Server[®] 2012 Foundation

Microsoft® Windows Server® 2012 Essentials

Microsoft® Windows Server® 2012 Standard

• The product names of Windows Server 2012 R2 are as follows:

Microsoft® Windows Server® 2012 R2 Foundation

Microsoft® Windows Server® 2012 R2 Essentials

Microsoft® Windows Server® 2012 R2 Standard

• The product names of Windows Server 2016 are as follows:

Microsoft® Windows Server® 2016 Essentials

Microsoft® Windows Server® 2016 Standard

Microsoft® Windows Server® 2016 Datacenter

Microsoft[®] Windows Server[®] 2016 MultiPoint[®] Premium Server

• The product names of Windows Server 2019 are as follows:

Microsoft® Windows Server® 2019 Datacenter

Microsoft® Windows Server® 2019 Standard

Microsoft[®] Windows Server[®] 2019 Essentials

• The product names of Windows Server 2022 are as follows:

Microsoft® Windows Server™ 2022 Standard

Microsoft® Windows Server™ 2022 Datacenter

Microsoft® Windows Server™ 2022 Datacenter: Azure® Edition

Firefox is registered trademark of the Mozilla Foundation.

Java is a registered trademark of Oracle and/or its affiliates. Other names may be trademarks of their respective owners.

PictBridge is a trademark.



This product includes RSA BSAFE® Cryptographic software of EMC Corporation. RSA is a registered trademark or a trademark of EMC Corporation in the United States and other countries.

This product includes RSA BSAFE® Cryptographic software of EMC Corporation. BSAFE is a registered trademark or a trademark of EMC Corporation in the United States and other countries.

The SD is a trademark of SD-3C, LLC.

The SD logo is a trademark of SD-3C, LLC.

FeliCa is a registered trademark or a trademark of Sony Group Corporation or its affiliates.

Wi-Fi[®] is a registered trademark of Wi-Fi Alliance.

Wi-Fi Direct® is a registered trademark of Wi-Fi Alliance.

Wi-Fi Protected Setup™ is a trademark of Wi-Fi Alliance.

WPA2™ is a trademark of Wi-Fi Alliance.

WPA3™ is a trademark of Wi-Fi Alliance.

Other product names used herein are for identification purposes only and might be trademarks of their respective companies. We disclaim any and all rights to those marks.

Microsoft product screen shots reprinted with permission from Microsoft Corporation.

10.Driver Installation Guide

Installing the Printer Driver

Installing the Printer Driver by Using Device Software Manager Installer


Device Software Manager is a support utility for driver installation in Windows. Device Software Manager helps you to detect the latest driver via the internet automatically according to the computer you are using and install it with a simple procedure.


Important

- Manage Printers permission is required to install the drivers. Log on as an Administrators group member.
- Device Software Manager supports Windows OS only. To install the printer driver on macOS, see the following sections: page421"Installing the Printer Driver for Network Connection (macOS)"
 See "Installing the Printer Driver for USB Connection (macOS)", User Guide (HTML).
- Follow the instructions of the installer to connect the USB cable.


Installing Device Software Manager from the Downloaded File

- 1. Download Device Software Manager from the manufacturer's website.
- 2. Double-click the downloaded file.
 - If the "Security Warning" screen is displayed, click [OK].
 - If the "User Account Control" screen is displayed, click [Yes] or [Allow].
- 3. Select the [Run Driver Installer after installation] check box, and then click [Accept Agreement and Install].
- **4.** On the "Quality Improvement Program" screen, select [I will participate in the Quality Improvement Program] or [I will not participate in the Quality Improvement Program], and then click [Next].
- 5. On the "Driver Update Notification Setting" screen, specify whether to display the message about the driver update, and then click [Next].
 - The process of installing Device Software Manager starts.

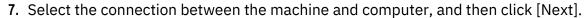

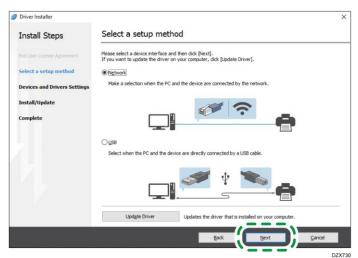

- Network: Search for devices connected to the network.
- USB: Following the instructions on the "Connection with device" screen, connect the machine and the computer with the USB cable to search for the machine.
- 8. Select this machine from among the detected devices, and then click [Next].

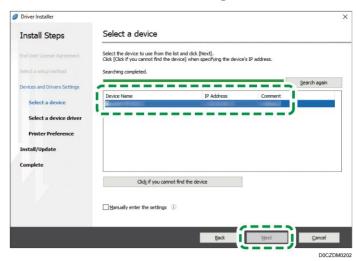

The installation of the driver starts.


- If the machine cannot be found at the network connection setup, see the following section.
 - page419"If the Machine Cannot Be Found"
- If "The publisher could not be verified" is displayed at the beginning of installation, continue the installation. There is no problem with the started installer that is downloaded from the manufacturer's website. Continue the installation.

• When you connect the machine and the computer with a USB cable, follow the instructions on the installer screen.



If the machine is not detected, click [Cancel Connection]. Even if the connection is canceled, the installation is complete. After the installer screen is closed, the machine is added automatically when it is connected to the computer with the USB cable.

9. When the installation is complete, click [Finish].

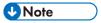

• Double-click the Device Software Manager icon created on the Finder of the computer to update the printer driver.

See "Updating the Driver (Windows)", User Guide (HTML).




Installing the Printer Driver for Network Connection (Windows)

When the machine and the computer are connected to the same network, the installer searches for the machine to install the printer driver. If the installer cannot find the machine, specify the IP address or machine name to install the printer driver.



 Manage Printers permission is required to install the driver. Log on as an Administrators group member.

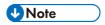


• If the "User Account Control" dialog box appears during the driver installation procedure, click [Yes] or [Continue].


• If the "Windows Security" dialog box appears during the driver installation procedure, click [Install this driver software anyway].

Installing the PCL 6/PostScript 3 Printer Driver from the Downloaded File

- 1. Download the latest printer driver from the manufacturer's website.
- 2. Double-click the downloaded file.
 - If the "Security Warning" screen is displayed, click [OK].
 - If the "User Account Control" screen is displayed, click [Yes] or [Allow].
- 3. On the "End User License Agreement" screen, click [Agree and Go to Next].
- 4. Select [Network], and then click [Next].

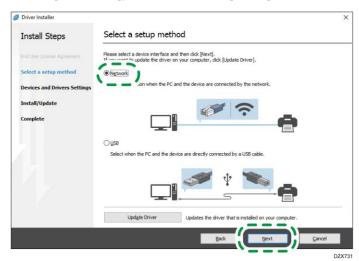

- The search detects devices connected to the network.
- If the error screen is displayed, see page419" If the Machine Cannot Be Found".
- 5. Select this machine from among the detected devices, and then click [Next].

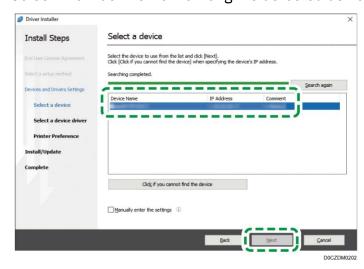

Printer driver installation starts.

- If the machine cannot be found at the network connection setup, see the following section.
 - page419"If the Machine Cannot Be Found"
- **6.** When prompted to select whether to install Device Software Manager, select whether to install Device Software Manager.
 - To install Device Software Manager select the [Install Device Software Manager] check box, and then click [Next]. Follow the instructions on the screen to install Device Software Manager.
 - To not install Device Software Manager clear the [Install Device Software Manager] check box, and then click [Next].
- 7. When the installation is complete, click [Finish].

Installing the Printer Driver for Windows

- 1. Download the latest printer driver from the manufacturer's website.
- 2. Double-click the downloaded file.
 - If the "Security Warning" screen is displayed, click [OK].
 - If the "User Account Control" screen is displayed, click [Yes] or [Allow].

- 3. Click [Cancel] to exit the installer.
- 4. Display the "Devices and Printers" screen.

Windows 11

- 1. On the [Start] menu, click [All apps] [Windows Tools] [Control Panel]
- 2. Click [View devices and printers].

Windows 10 (version 1703 or later)

- 1. On the [Start] menu, click [Windows System] ▶ [Control Panel].
- 2. Click [View devices and printers].

Windows 10 (earlier than version 1703)

- 1. Right-click [Start], and then click [Control Panel].
- 2. Click [View devices and printers].


Windows 8.1

- 1. On the Charm Bar, click [Set] ▶ [Control Panel].
- 2. Click [View devices and printers].
- 5. Click [Add a printer].
- **6**. Click [The printer that I want isn't listed].
- 7. Select [Add a local printer or network printer with manual settings], and then click [Next].
- 8. Select [Standard TCP/IP Port] on [Create a new port:], and then click [Next].
- 9. Enter the IP address of this machine in [Host Name or IP address].
- **10**. Clear the [Query the printer and automatically select the driver to use] check box, and then click [Next].
 - Searching for the TCP/IP port starts.
- **11.** When the "Additional port information required" screen is displayed, select [RICOH Network Printer C model], and then click [Next].
- 12. Click [Have Disk...] [Browse...] to specify the driver (INF file), and then click [OK]. The driver is stored in the [DISK1] folder in the folder that was created when unzipping the downloaded file.
- 13. Select a printer driver to install, and then click [Next].
- 14. Enter the printer name as necessary, and then click [Next].
 - Printer driver installation starts.

15. Specify the printer as a shared printer as necessary, and then click [Next]
[Finish].


If the Machine Cannot Be Found

The "Network Connection Error" screen is displayed.

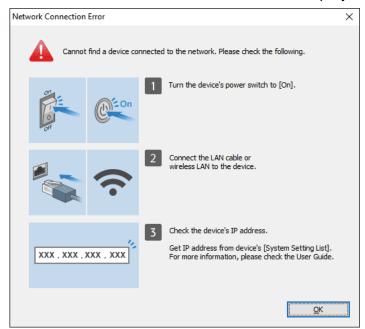

Confirm and perform 1 to 3, and then click [OK]. If the machine still cannot be found, specify the IP address or machine name to install the printer driver.


1. Click [Click if you cannot find the device].

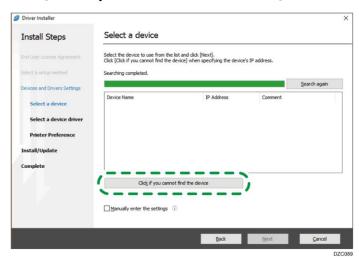

2. Select [Specify device IP address] or [Specify device name], and then click [Next].

When specify the machine IP address

1. Enter the IP address of the machine and click [Search].

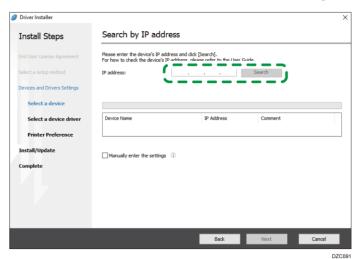


You can check the machine IP address in [Check Status] ► [Network] on the control panel.

2. When the machine is detected, click [Next]. Printer driver installation starts.


When specify the machine name

1. Select the machine to use, and then click [Next].

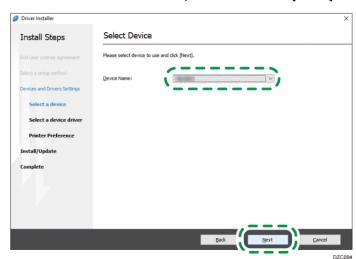



2. On the "Printer Preference" screen, select one of the port names from among "Port Name", and then click [Next].

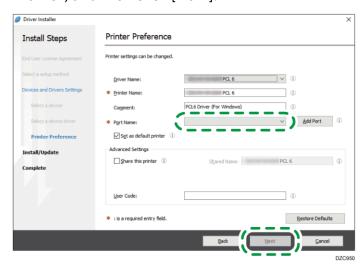

Printer driver installation starts.

For details about the procedure for specifying the IP address after installing the printer driver, see the following section:

See "When You Cannot Print a Document even if the Printer Driver is Installed", User Guide (HTML).

3. When prompted to select whether to install Device Software Manager, select whether to install Device Software Manager.

To install Device Software Manager select the [Install Device Software Manager] check box, and then click [Next]. Follow the instructions on the screen to install Device Software Manager.

To not install Device Software Manager clear the [Install Device Software Manager] check box, and then click [Next].

4. When the installation is complete, click [Finish].

Installing the Printer Driver for Network Connection (macOS)

Install the PPD file (printer driver) under macOS, and then register the machine on the computer from the system preferences.



 You need an administrator name and a password (phrase). For details, consult your network administrator.



• Setting procedures using macOS 12.2 are shown as an example. The actual procedure may differ depending on the OS version you are using.

Installing the PPD file (Network Connection)

- 1. Download the latest printer driver from the manufacturer's website.
- 2. Double-click the downloaded file.
- 3. Double-click the package file.



- 4. On the "Introduction" screen, click [Continue].
- 5. On the "License" screen, click [Continue] and then click [Agree].
 - When prompted to select where to install the driver, specify the install location, and click [Continue].
- 6. Click [Install].
- 7. Enter the administrator's user name and password, and then click [Install Software].




The installation of the PPD file starts.

8. When the installation is complete, click [Close].


Registering the Machine in [Printers & Scanners] (Network Connection)

Register the PPD file of the machine in the system preferences to enable printing.

- 1. Select [System Preferences...] from the Apple menu.
- 2. Click [Printers & Scanners].
- 3. Click [+].

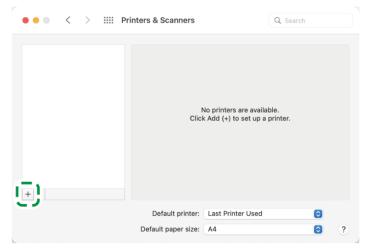

4. Click (IP), and configure the information of the machine.

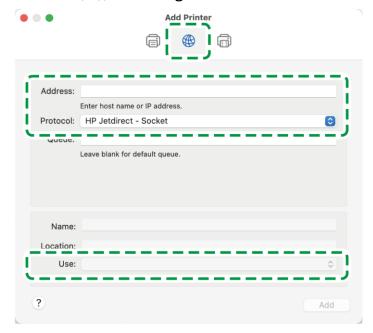

- · Address: Enter the IP address of the machine.
- Protocol: Select [HP Jetdirect-Socket].
- Use: Check that the machine name is displayed. If "Generic PostScript Printer" is displayed, the entered IP address may not be correct.


When "Generic PostScript Printer" is displayed even though the IP address is correct

Check the network connection of the machine and the computer, and then register again.

- When the machine is connected to a wired LAN.
 Check that the cable is connected to the machine correctly.
- 5. Click [Add].

The progress screen is displayed.

- If the progress screen does not close after a while, click [Configure...] and configure the option configuration of the printer. For the procedure of the option configuration, see page424"Specifying the Option Configuration of the Machine to the Printer Driver (Network Connection)".
- 6. Check that the machine name is added to the [Printers & Scanners] screen.

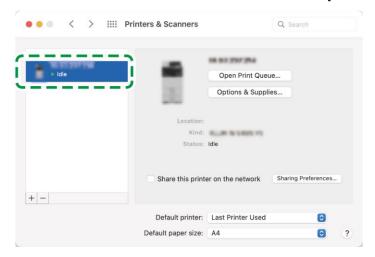


7. Close the system preferences screen.


Specifying the Option Configuration of the Machine to the Printer Driver (Network Connection)

If the option configuration of the machine is not automatically reflected, select the option installed on the machine in [Printers & Scanners].

- 1. Select [System Preferences...] from the Apple menu.
- 2. Click [Printers & Scanners].
- 3. Select the machine from the list, and then click [Options & Supplies...].

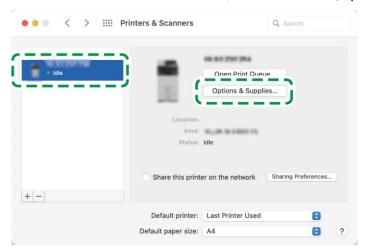

- 4. Click [Options], select the option installed on the machine, and then click [OK].
 - If the usable options are not displayed, the IP address has not been entered correctly or the PPD file has not been registered properly. To enter the IP address or register the PPD file, see page423"Registering the Machine in [Printers & Scanners]".
- 5. Close the system preferences screen.

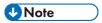

- If the option you want to select is not displayed, PPD files may not be set up correctly. To complete the setup, check the name of the PPD file displayed in the dialog box.
- Setting procedures using macOS 12.2 are shown as an example. The actual procedure may differ depending on the OS version you are using.
- To specify an optional Adobe PostScript when using a PostScript 3 printer driver, select [Adobe PostScript] in the "PostScript:" list on the [Options] tab.

11. How to use this manual

Meanings of the used symbols

↑ WARNING

Indicates a potentially hazardous situation which, if instructions are not followed, could result in death or serious injury.

ACAUTION

Indicates a potentially hazardous situation which, if instructions are not followed, may result in minor or moderate injury or damage to property.

Important

Indicates points to pay attention to when using functions. This symbol indicates points that may result in the product or service becoming unusable or result in the loss of data if the instructions are not obeyed. Be sure to read these explanations.

◆ Note

Indicates supplementary explanations of the product's functions and instructions on resolving user errors.

Indicates the names of keys or buttons on the product or display.

#Sample screenshots are used.

MEMO